



Industrial mobile router with integrated firewall and VPN

User manual

UM EN TC ROUTER ... 3G/4G

User manual

Industrial mobile router with integrated firewall and VPN

UM EN TC ROUTER ... 3G/4G, Revision 01

2018-09-07

This user manual is valid for:

Designation	Software release	Order No.
TC ROUTER 3002T-4G	2.04.11	2702528
TC ROUTER 3002T-3G	2.04.11	2702529
TC ROUTER 2002T-4G	2.04.11	2702530
TC ROUTER 2002T-3G	2.04.11	2702531
TC ROUTER 3002T-4G VZW	2.04.11	2702532
TC ROUTER 3002T-4G ATT	2.04.11	2702533

Table of contents

1	For your safety	5
1.1	Identification of warning notes	5
1.2	Qualification of users	5
1.3	Field of application of the product	6
1.4	Safety notes	6
1.5	UL warning notes (only TC ROUTER 3002T-4G VZW and TC ROUTER 3002T-4G ATT)	7
2	Installation	9
2.1	Product description	9
2.2	Structure	10
2.3	Mounting and removal	12
2.4	Inserting the SIM card	13
2.5	Connection	14
2.6	Resetting the router	17
3	Configuration via web-based management	19
3.1	Connection requirements	19
3.2	Starting web-based management (WBM)	19
3.3	Device information (viewing the device status)	20
3.4	Status	21
3.5	Local network (local network setup)	26
3.6	Wireless network (mobile network settings)	29
3.7	Network security (security settings)	43
3.8	VPN	52
3.9	I/O	71
3.10	System	82
4	Creating X.509 certificates	95
4.1	Installation	95
4.2	Creating a new database	95
4.3	Creating a CA certificate	96
4.4	Creating templates	99
4.5	Creating certificates	101
4.6	Exporting certificates	103

5	Technical data	105
5.1	Ordering data	105
5.2	Technical data	106
5.3	Dimensions.....	110
A	Technical appendix.....	111
A 1	XML elements	111
A 2	Structure of the XML configuration file	114
A 3	Wireless network	117
A 4	CIDR (Classless Inter-Domain Routing)	136
B	Appendixes.....	137
B 1	List of figures	137
B 2	Index.....	141

1 For your safety

Read this user manual carefully and keep it for future reference.

1.1 Identification of warning notes



This symbol indicates hazards that could lead to personal injury.

There are three signal words indicating the severity of a potential injury.

DANGER

Indicates a hazard with a high risk level. If this hazardous situation is not avoided, it will result in death or serious injury.

WARNING

Indicates a hazard with a medium risk level. If this hazardous situation is not avoided, it could result in death or serious injury.

CAUTION

Indicates a hazard with a low risk level. If this hazardous situation is not avoided, it could result in minor or moderate injury.



This symbol together with the **NOTE** signal word warns the reader of actions that might cause property damage or a malfunction.



Here you will find additional information or detailed sources of information.

1.2 Qualification of users

The use of products described in this user manual is oriented exclusively to:

- Electrically skilled persons or persons instructed by them. The users must be familiar with the relevant safety concepts of automation technology as well as applicable standards and other regulations.
- Qualified application programmers and software engineers. The users must be familiar with the relevant safety concepts of automation technology as well as applicable standards and other regulations.

1.3 Field of application of the product

The devices are industrial mobile routers for 3G and 4G mobile networks.

1.3.1 Intended use

- The devices are designed for use in industrial environments.
- The devices are intended for installation in a control cabinet.
- Operation of the wireless system is only permitted if accessories available from Phoenix Contact are used. The use of other accessory components could invalidate the operating license.



You can find the approved accessories for this wireless system listed with the product at phoenixcontact.net/products.

1.3.2 Product changes

Modifications to hardware and firmware of the device are **not** permitted.

Incorrect operation or modifications to the device can endanger your safety or damage the device. Do not repair the device yourself. If the device is defective, please contact Phoenix Contact.

1.4 Safety notes




WARNING:

Observe the following safety notes when using the device.

- Installation, operation, and maintenance may only be carried out by qualified electricians. Follow the installation instructions as described.
- When installing and operating the device, the applicable regulations and safety directives (including national safety directives), as well as the generally recognized codes of practice, must be observed. The technical data is provided in the packing slip and on the certificates (conformity assessment, additional approvals where applicable).
- Do not open or modify the device. Do not repair the device yourself; replace it with an equivalent device instead. Repairs may only be carried out by the manufacturer. The manufacturer is not liable for damage resulting from non-compliance.
- The IP20 degree of protection (IEC 60529/EN 60529) of the device is intended for use in a clean and dry environment. Do not subject the device to mechanical and/or thermal loads that exceed the specified limits.
- The device is designed exclusively for operation with safety extra-low voltage (SELV) in accordance with IEC 60950/EN 60950/VDE 0805. The device may only be connected to devices that meet the requirements of EN 60950.
- The device complies with the EMC regulations for industrial areas (EMC class A). When used in residential areas, the device may cause radio interference.

1.5 UL warning notes (only TC ROUTER 3002T-4G VZW and TC ROUTER 3002T-4G ATT)

- Use copper wires rated 85°C.
- If the equipment is used in a manner not specified, the protection provided by the equipment may be impaired.
- This device has to be built in an enclosure (control box).
- External circuit from SELV supplied
- SELV - Limited energy according to UL/IEC/EN 61010-1 or NEC class II
- This equipment must be mounted in an enclosure certified for use in Class I, Zone 2 minimum and rated IP54 minimum in accordance with IEC 60529 when used in Class I, Zone 2 environment.
- Device shall only be used in an area of not more than pollution degree 2.

 Class I, Zone 2, AEx nA IIC T4 / Ex nA IIC T4 Gc
Class I, Division 2, Groups A, B, C and D T4
Input: 10 - 30 V DC, max. 1.7 A ---
IND.CONT.EQ. Amb. Temp. Range: -40°C < Tamb < 70°C
FOR.HAZ.LOC.
E366272



2 Installation

2.1 Product description

The **TC ROUTER...** mobile routers enable high-performance high-speed data links via mobile networks. The integrated firewall and VPN (Virtual Private Network) protect your application against unauthorized access.

The focus is on EMC, electrical isolation, and surge protection for reliable and secure communication. The data link and quality of the mobile network are also monitored. If required, the device sends a message or re-establishes the mobile network connection.



Features

- Virtual permanent line to connect networks via mobile network
- Stateful inspection firewall for dynamic filtering
- VPN remote start via SMS or call
- Two switching inputs and one switching output
- XML interface
- Alarm sent via SMS or e-mail directly via the integrated switching input
- Configuration via web-based management or microSD card
- Two local Ethernet connections
- Switchable energy-saving mode
- Integrated logbook
- Extended temperature range of -40°C ... +70°C

Table 2-1 Overview product versions

Designation	Mobile communication	Fallback	VPN function	Area of application
TC ROUTER 3002T-4G	4G (LTE)	3G (UMTS/HSPA) 2G (GPRS/EDGE)	IPsec and OpenVPN, up to three VPN tunnels	Europe
TC ROUTER 3002T-3G	3G (UMTS/HSPA)	2G (GPRS/EDGE)		
TC ROUTER 2002T-4G	4G (LTE)	3G (UMTS/HSPA) 2G (GPRS/EDGE)	-	
TC ROUTER 2002T-3G	3G (UMTS/HSPA)	2G (GPRS/EDGE)		
TC ROUTER 3002T-4G VZW	4G (LTE)	-	IPsec and OpenVPN, up to three VPN tunnels	USA (HazLoc approval)
TC ROUTER 3002T-4G ATT		3G (UMTS/HSPA)		

2.2 Structure

2.2.1 4G router

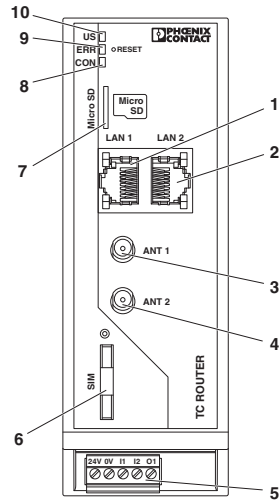


Figure 2-1 4G router

- 1 LAN interface 1
- 2 LAN interface 2
- 3 SMA antenna connection 1, primary antenna
- 4 SMA antenna connection 2, secondary antenna
- 5 COMBICON plug-in screw terminal block
- 6 SIM interface
- 7 Slot for microSD card
- 8 CON LED
- 9 ERR LED
- 10 US LED

2.2.2 3G router

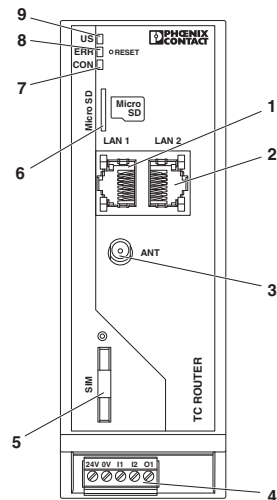


Figure 2-2 3G router

- 1 LAN interface 1
- 2 LAN interface 2
- 3 SMA antenna socket
- 4 COMBICON plug-in screw terminal block
- 5 SIM interface
- 6 Slot for microSD card
- 7 CON LED
- 8 ERR LED
- 9 US LED

2.2.3 Status and diagnostics indicators

U_S	Power	Green
	On	Supply voltage is present
ERR	Error	Red
	Off	Logged into the network
	Flashing	SIM card not inserted, SIM error (e.g., PIN or PUK locked)
CON	On	Searching for cellular network
	Connect	Yellow
	On	Connection established

In the case of the TC ROUTER 3002T..., the CON LED can be configured via web-based management. You can therefore monitor the mobile IP connection or the VPN tunnel.

2.3 Mounting and removal



NOTE: Device damage

Only mount and remove devices when the power supply is disconnected!

The device is intended for installation in a control cabinet.

- Snap the device onto a 35 mm DIN rail according to EN 60715.
- Connect the DIN rail to protective earth ground.

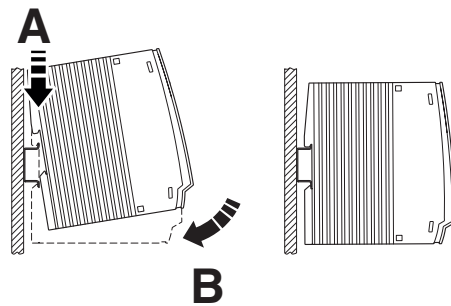


Figure 2-3 Mounting on the DIN rail

Removal

- Pull down the locking latch using a screwdriver, needle-nose pliers or similar.
- Pull the bottom edge of the device slightly away from the mounting surface.
- Pull the device away from the DIN rail.

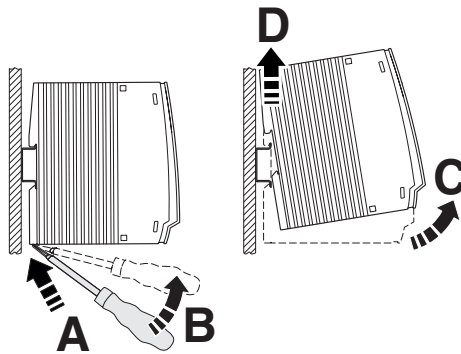


Figure 2-4 Removal

2.4 Inserting the SIM card



NOTE: Electrostatic discharge!

The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD) in accordance with EN 61340-5-1 and IEC 61340-5-1.



The device only supports 1.8 V and 3 V SIM cards. In the event of older SIM cards, please contact your provider.

You will receive a SIM card from the provider on which all data and services for your connection are stored. The SIM card can be protected with a 4 or 5-digit PIN code. We recommend that you enter the PIN code and the APN settings as described in [“SIM” on page 30](#).

A packet data connection via the mobile network is required for the core functions (VPN router). Select an appropriate SIM card. You must activate the package data connection before the operation (see [“Packet data setup” on page 36](#)).

- Press the yellow release button with a pointed object.
- Remove the SIM card holder.
- Insert the SIM card so that the SIM chip remains visible.
- Fully insert the SIM card holder together with the SIM card into the device until this ends flush with the housing.

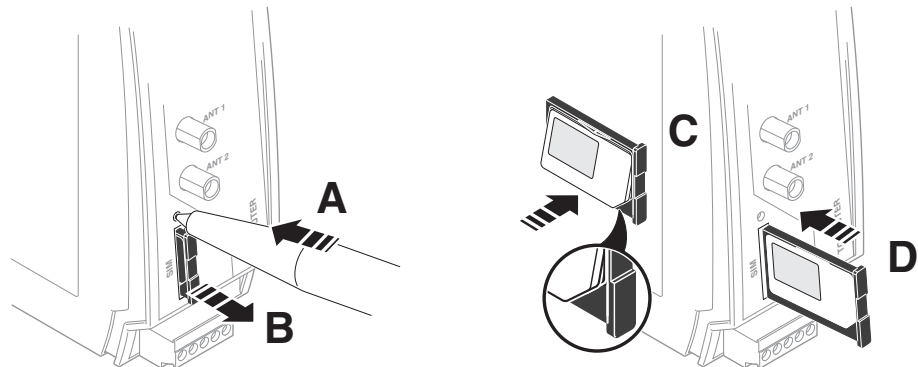


Figure 2-5 Removing the SIM card holder, inserting the SIM card

2.5 Connection

2.5.1 Antenna



You can find the approved accessories for this wireless system listed with the product at phoenixcontact.net/products.

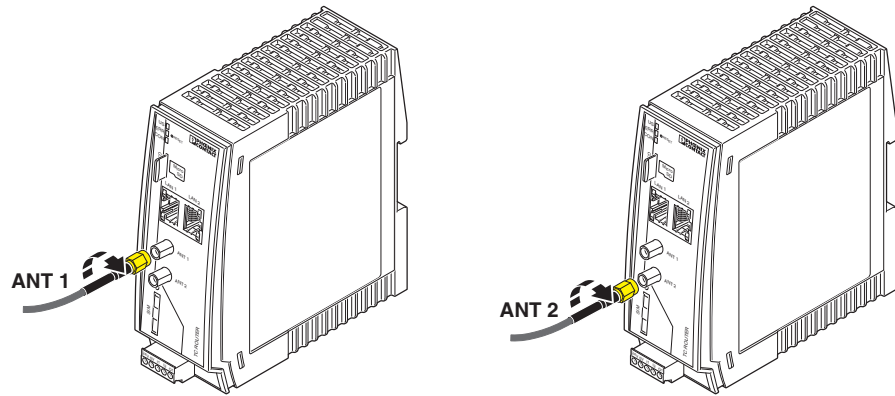


Figure 2-6 Connecting the antenna (4G router)

The 4G routers have two antenna connections. To achieve optimum LTE reception, always connect two antennas for 4G routers. The 3G routers only have one antenna connection.

We recommend the multiband mobile antenna with mounting bracket for outdoor installation (TC ANT MOBILE WALL 5M, Order No. 2702273). Please also refer to the documentation for the antenna at phoenixcontact.net/product/2702273.

- Connect one or two suitable antennas to the antenna connection.
- The antenna cable must not be longer than 5 meters in length.
- Check the signal quality in the web-based management software under “Device Information, Status, Radio”.
- Fix the antenna in place when reception is good or very good.
- Screw the antenna hand-tight on to the device (1.7 Nm).

2.5.2 Ethernet network

- Only twisted pair cables with an impedance of $100\ \Omega$ may be connected to the RJ45 Ethernet interfaces.
- Only use shielded twisted pair cables and corresponding shielded RJ45 connectors.
- Push the Ethernet cable with the RJ45 connector into the TP interface until the connector engages with a click. Observe the connector coding.

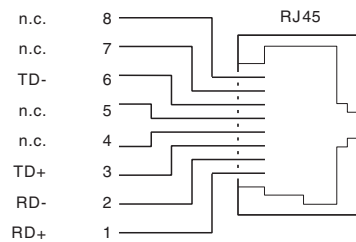


Figure 2-7 RJ45 interface

2.5.3 Supply voltage



CAUTION: Electrical voltage

The device is designed exclusively for operation with safety extra-low voltage (SELV) in accordance with IEC 60950/EN 60950/VDE 0805.

- Provide overcurrent protection ($I \leq 5\ \text{A}$) in the installation.

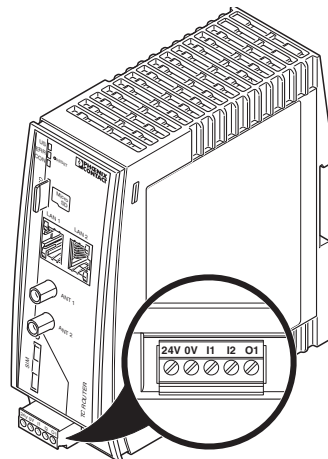


Figure 2-8 Connecting the supply voltage

- Connect the supply voltage to 24 V and 0 V at the plug-in screw terminal block. Ensure the correct polarity when doing so.
- The device is ready for operation as soon as the US LED lights up.

2.5.4 Switching inputs and switching outputs

Two configurable switching inputs for the following functions:

- Sending an SMS, including to multiple recipients
- Sending an e-mail, including to multiple recipients
- Controlling an output at a remote station via SMS
- Restarting the router
- Starting or stopping a mobile data connection
- Switching the IPsec or OpenVPN connection
- Automatically loading a configuration from a microSD card
- Activating energy-saving mode

One configurable switching output, activated by:

- Activation by the input at a remote station
- SMS
- Web-based management
- Incoming call
- Connection abort
- Status of the mobile network connection
- Status of the mobile data connection
- Status of a VPN connection

Connecting

- You can connect 10 ... 30 V DC to switching inputs I1 and I2.
- Switching output O1 is designed for a maximum of 50 mA at 10 ... 30 V DC.
- The connecting cables for the switching inputs and the switching output must not be longer than 30 meters in length.
- The 0 V potential of the switching inputs and outputs must be connected to the "0 V" terminal block of the power supply connection.

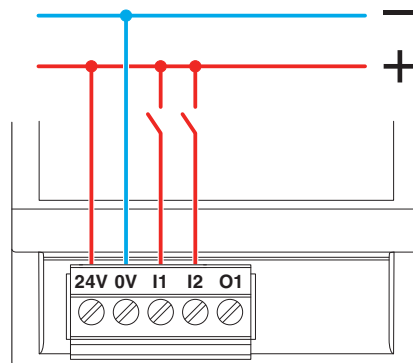


Figure 2-9 Wiring inputs

2.6 Resetting the router

The routers have a reset button on the front to the right of the LEDs. The reset button can be used to temporarily reset the router's IP address and the passwords to the default settings upon delivery.

- Press and hold down the reset button.
- Disconnect the Ethernet cable from the LAN connection on the router.
- Reconnect the Ethernet cable.
- Press and hold down the reset button for a further five seconds.

The IP address is now reset to its default address (192.168.0.1).

3 Configuration via web-based management

3.1 Connection requirements

- The device must be connected to the power supply.
- The computer that is to be used for configuration must be connected to one of the LAN ports on the router.
- A browser, e.g., Mozilla Firefox, Microsoft Internet Explorer or Apple Safari, must be installed on the configuration computer.

3.2 Starting web-based management (WBM)

The router is configured via web-based management (WBM).

- Establish an Ethernet connection from the device to a PC.
- If necessary, adjust the IP parameters of your computer.
- Open a browser on the PC.
- Enter the IP address 192.168.0.1 in the address field of your browser.
- The following page opens in the browser.



Figure 3-1 Login window

This page protects the area in web-based management where router settings are modified. To log into the router, click on “Login”. You need the user name and the password.

- User name: admin
- Password: admin



For security reasons, we recommend you change the password during initial configuration (see “[User \(password change\)](#)” on page 85).

There are two user levels:

- **user:** read-only access to the “Device Information” menu item
- **admin:** full access to all areas

3.3 Device information (viewing the device status)

You can also access this page with the user login. The page displays information about the hardware, software, and status of the router.

3.3.1 Hardware

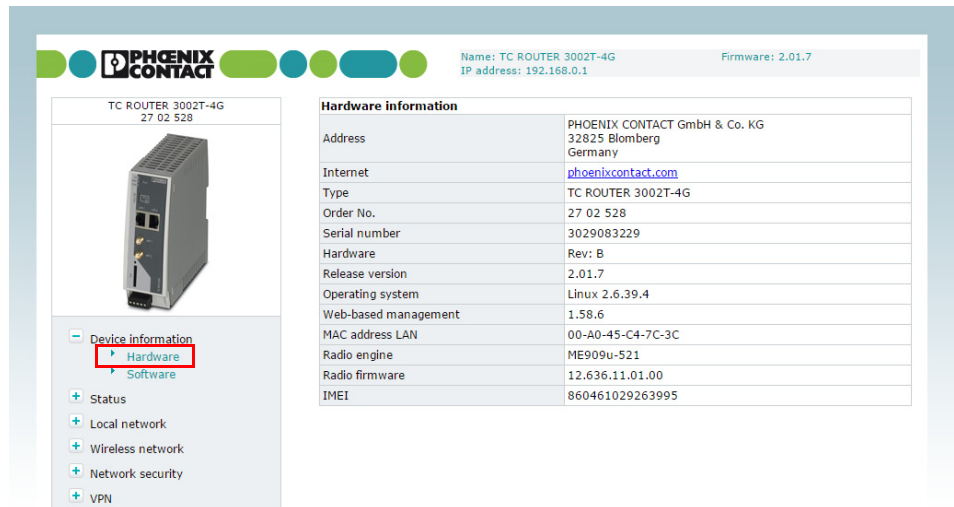


Figure 3-2 Device information, Hardware

Device information, Hardware		
Hardware information	Address	Address of the manufacturer
	Internet	Website address of the manufacturer
	Type	Order designation of the router
	Order No.	Order number of the router
	Serial number	Serial number of the router
	Hardware	Hardware version of the router
	Release version	Release version of the router software
	Operating system	Operating system version
	Web-based management	Web-based management version
	MAC address LAN	MAC address for unique identification of an Ethernet device in a computer network
	Radio engine	Type of radio engine used
	Radio firmware	Firmware version of the radio engine
	IMEI	IMEI = International Mobile Station Equipment Identity 15-digit serial number that can be used to clearly identify each mobile network device

3.4 Status

The current status information about the mobile network and the network connections is displayed here.

3.4.1 Radio

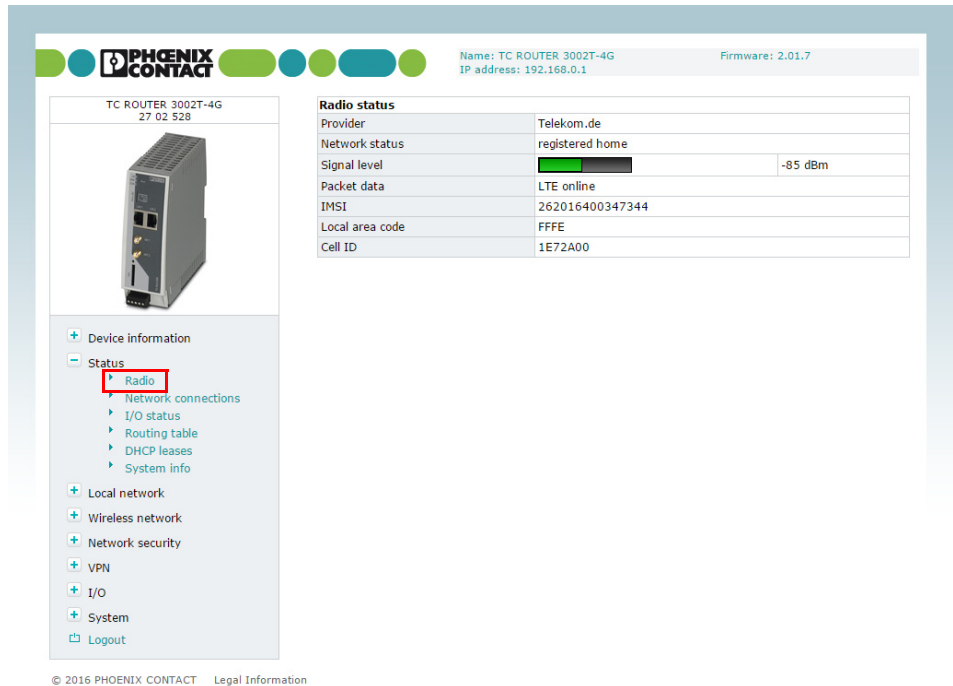


Figure 3-3 Status, Radio

Device information, Status, Radio		
Radio status	Provider	Provider name
	Network status	Status of the mobile network <ul style="list-style-type: none"> - Registered home: logged in to the provider's home network - Roaming: dial-in via an external mobile network - Waiting for PIN: enter the PIN. - Waiting for PUK: SIM card locked because an incorrect PIN was entered three times, PUK entry required - Wrong PIN: wrong PIN stored in device - No SIM card: SIM card not inserted - Busy: radio engine starting - Power off: radio engine switched off
	Signal level	Signal strength as a dBm value and bar

Device information, Status, Radio [...]	
Packet data	<ul style="list-style-type: none">- Offline: no packet data connection in the mobile network- GPRS online: active packet data connection in the mobile network via GPRS. GPRS is a GSM service which provides packet-based wireless access for mobile GSM users.- EDGE online: active packet data connection in the mobile network via EDGE. EDGE is a further development of the GPRS data service and has a higher data transmission speed.- UMTS online: active packet data connection in the 3G mobile network via UMTS.- HSDPA/UPA online: active packet data connection in the 3G mobile network via HSDPA/UPA. HSDPA/UPA is a further development of the UMTS network with a higher data transmission speed.- LTE online: active high-speed packet connection in the 4G mobile network via LTE
IMSI	IMSI = International Mobile Subscriber Identity, number used to clearly identify the user of a network
Local area code	Area code in the mobile network
Cell ID	Unique mobile phone cell ID

3.4.2 Network connections

This page displays status information about the local Ethernet interface and the packet data interface in the mobile network.

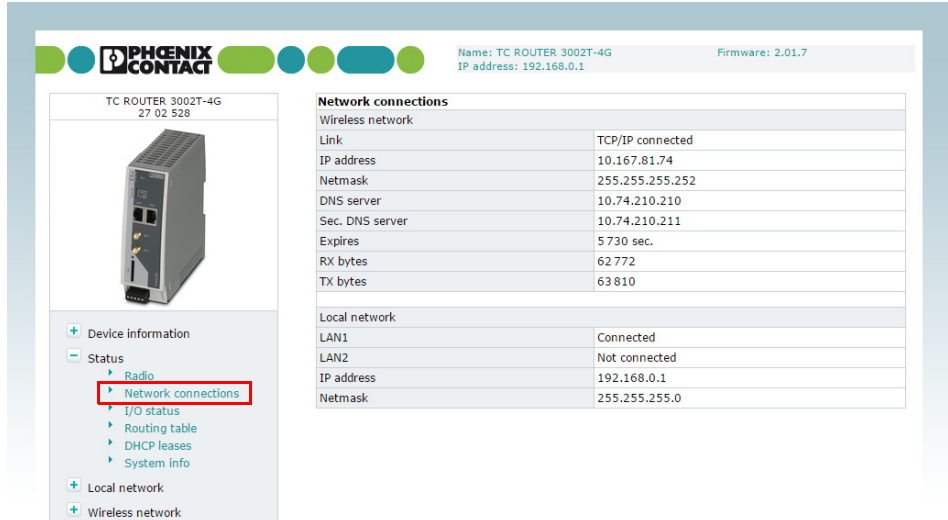


Figure 3-4 Status, Network connections

Status, Network connections		
Network connections		
Wireless network	Link	<ul style="list-style-type: none"> – TCP/IP connected: active packet data connection in the mobile network. You can transmit data via TCP/IP. – VPN connected: active VPN connection in the mobile network. You can transmit encrypted data. – not connected: no packet data connection in the mobile network, no data transmission
	IP address	IP address assigned by the provider
	Netmask	Netmask assigned by the provider
	DNS server	IP address of the DNS server
	Sec. DNS server	IP address of the alternative DNS server
	Expires	Time after which the IP settings assigned by the provider expire (IP address, netmask, DNS server).
	RX bytes	Sum of data received since last login to the mobile network
	TX bytes	Sum of data sent since last login to the mobile network
Local network	LAN 1/2	<ul style="list-style-type: none"> – connected: LAN 1/2 connected – not connected: LAN 1/2 not connected
	IP address	Current Ethernet IP address
	Netmask	Netmask of the local Ethernet network

3.4.3 I/O status

This page shows current status information and the configuration of the inputs and outputs.

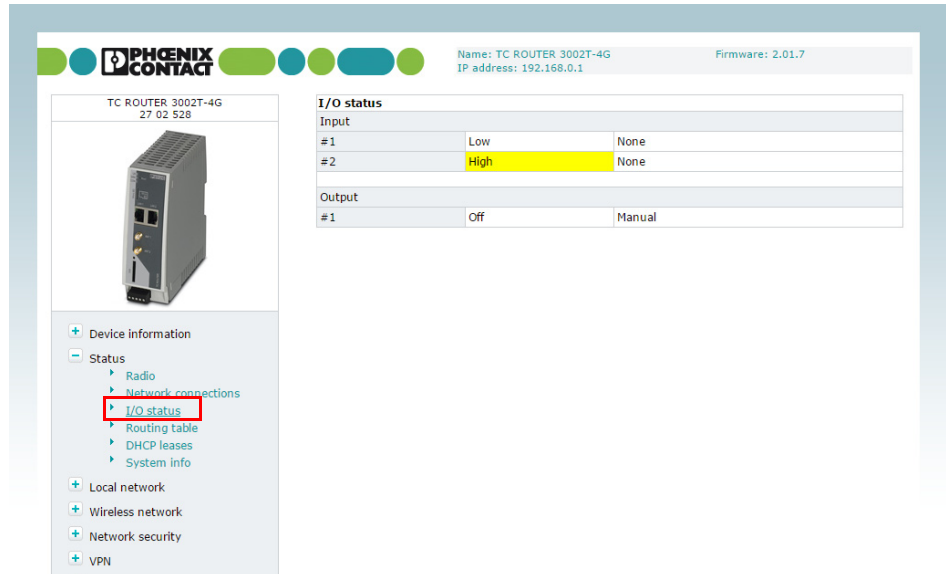


Figure 3-5 Status, I/O status

3.4.4 Routing table

This page shows all entries of the routing table.

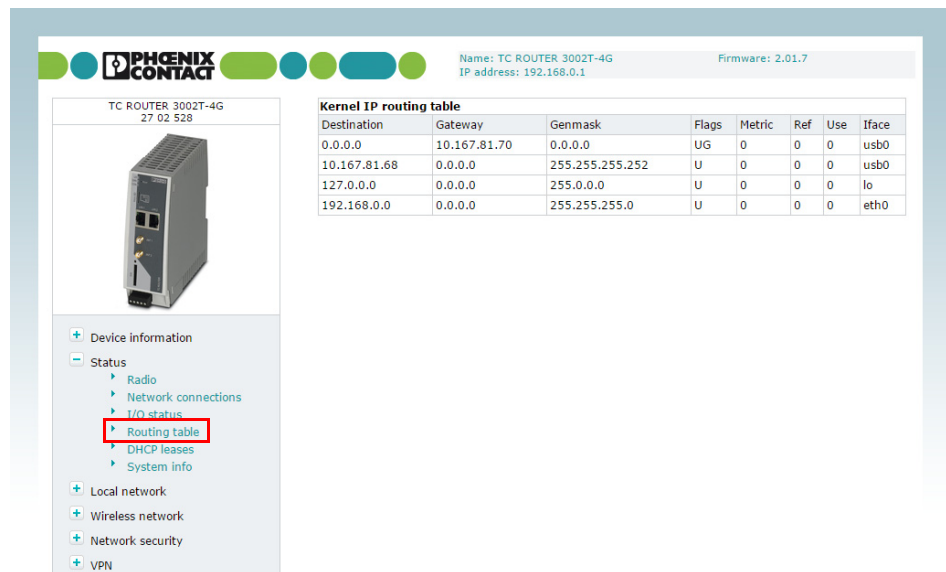


Figure 3-6 Status, Routing table

3.4.5 DHCP leases

This page shows the IP addresses that the mobile router has currently assigned to the DHCP clients.

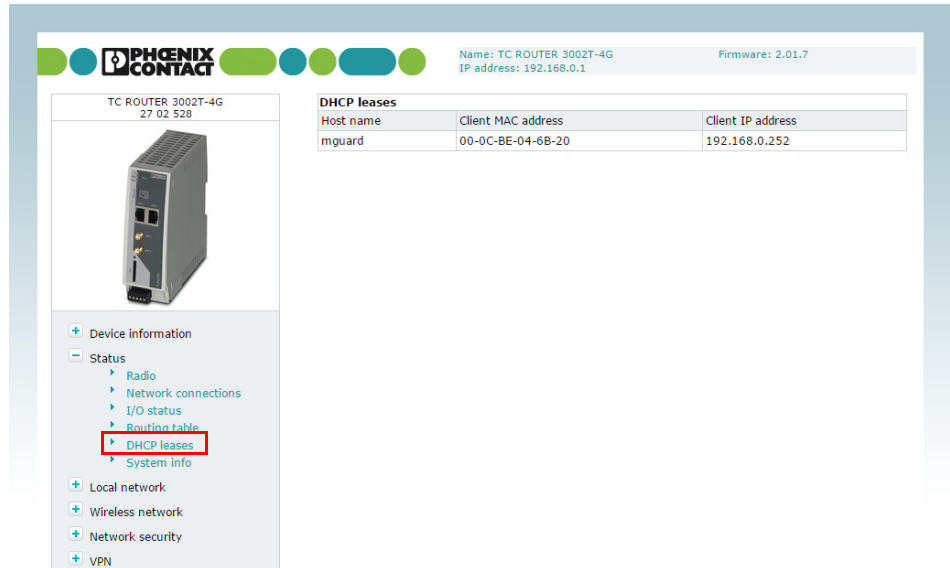


Figure 3-7 Status, DHCP leases

3.4.6 System info

This page shows the current system utilization.

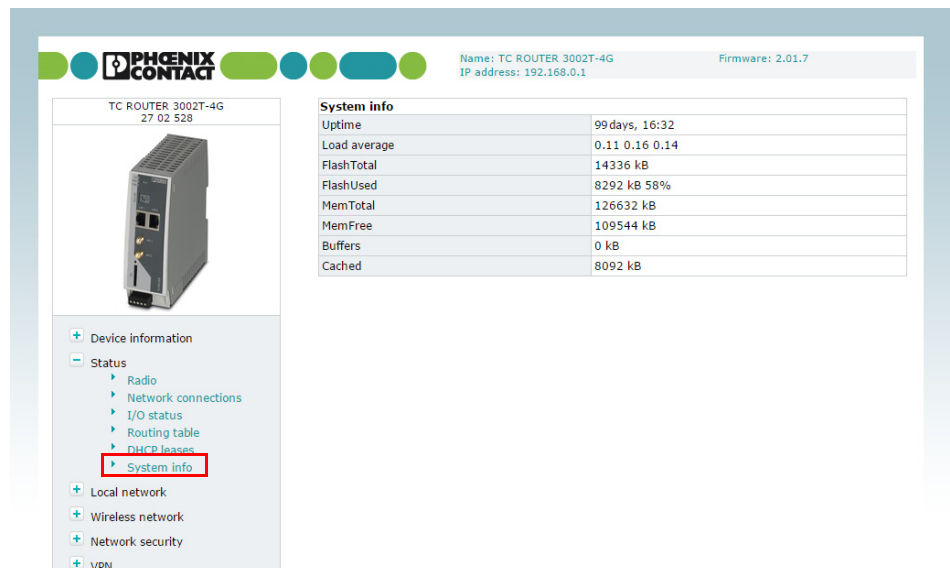


Figure 3-8 Status, System info

3.5 Local network (local network setup)

3.5.1 IP configuration (connection setup)

The connection from the router to the local Ethernet network can be set up here. You can modify the IP configuration, e.g., the IP address, the subnet mask, and the type of address assignment.

Confirm your changes to the IP configuration with “Apply”. The changes only take effect after a restart.


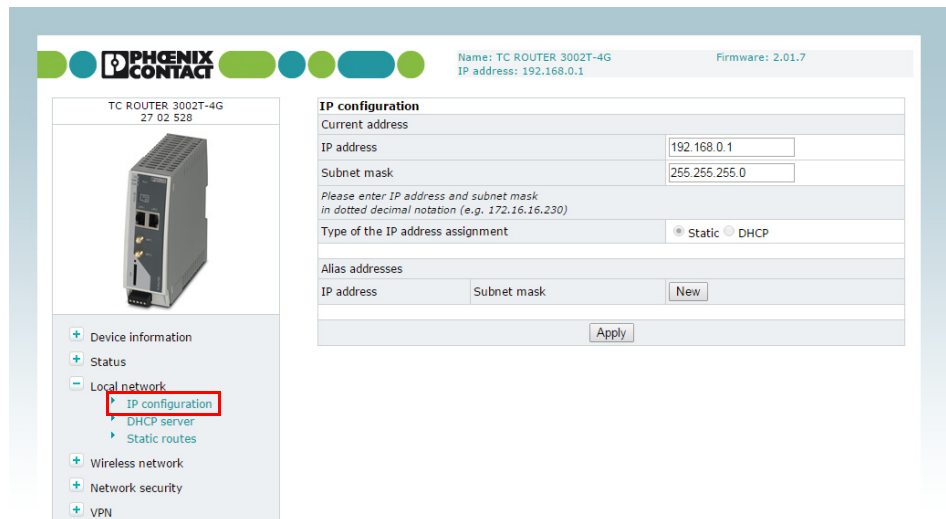


Figure 3-9 Local network, IP configuration

Local network, IP configuration		
IP configuration		
Current address	IP address	Current IP address of the router Computers that are connected to the LAN interfaces access the router using this address. You can use the reset button to reset the IP address to the default address 192.168.0.1 (see “Resetting the router” on page 17).
	Subnet mask	Subnet mask for the current IP address
	Type of the IP address assignment	<ul style="list-style-type: none"> – Static (default): the IP address is assigned permanently (fixed IP). – DHCP: when the router is started, the IP address and the subnet mask are assigned dynamically by a DHCP server.
Alias addresses		Using alias addresses, you can assign up to 8 additional IP addresses to the router. This means that the router can be accessed from various subnetworks. Click on “New” and enter the desired IP address and subnet mask.

3.5.2 DHCP server

You can use the Dynamic Host Configuration Protocol (DHCP) to assign the set network configuration to the devices. The devices must be connected directly to the router.

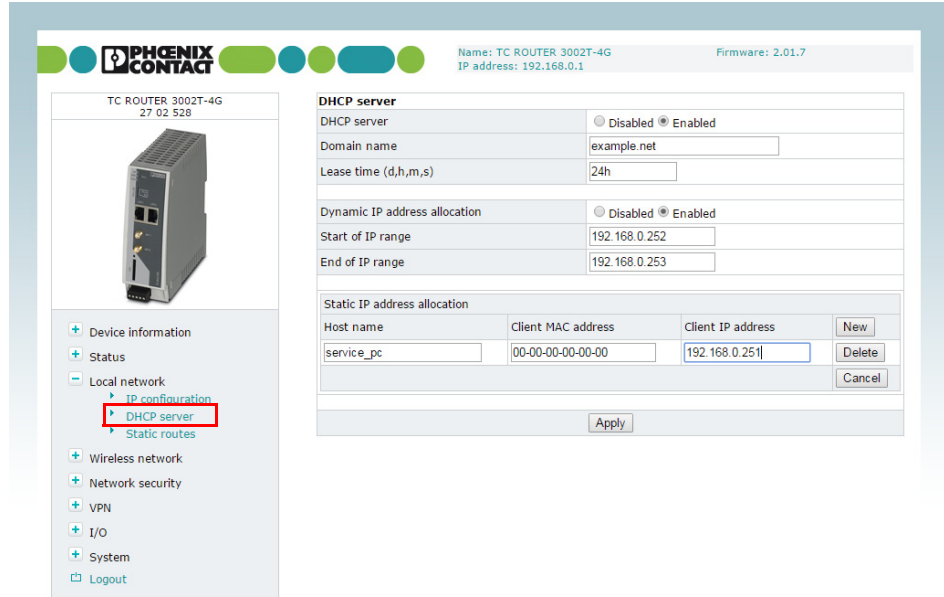

© 2016 PHOENIX CONTACT Legal Information

Figure 3-10 Local network, DHCP server


Local network, DHCP server		
DHCP server	DHCP server	– Enabled: router acts as the DHCP server
	Domain name	Domain name that will be distributed via DHCP
	Lease time (d,h,m,s)	Time for which the network configuration assigned to the client is valid The client should renew its assigned configuration shortly before this time expires. Otherwise it may be assigned to other computers.
	Dynamic IP address allocation	Dynamic IP address pool: when the DHCP server and the dynamic IP address pool have been activated, you can specify the network parameters to be used by the client.
	Start of IP range	Start of DHCP area: the start of the address area from which the DHCP server should assign IP addresses to locally connected devices.
	End of IP range	End of DHCP area: the end of the address area from which the DHCP server should assign IP addresses to locally connected devices.

Local network, DHCP server [...]	
Static IP address allocation	Static assignment based on the MAC address: the static IP of the client to which the MAC address should be assigned.
Client MAC address	MAC of the client with dashes
Client IP address	Client IP address
	Static assignments must not overlap with the dynamic IP address pool.
	Do not use one IP address in multiple static assignments, otherwise this IP address will be assigned to multiple MAC addresses.

3.5.3 Static routes (redirection of data packets)

With local static routes, you can specify alternative routes for data packets from the local network via other gateways in higher-level networks. You can define up to eight static routes.

If the entries for the network and gateway are logically incorrect, the incorrect entries will be displayed with a red frame.

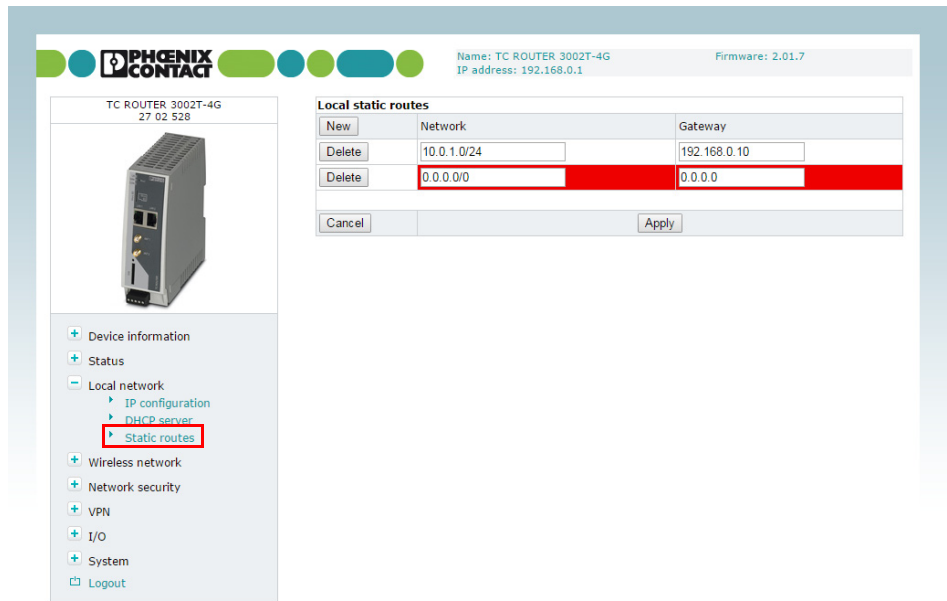

© 2016 PHOENIX CONTACT Legal Information

Figure 3-11 Local network, Static routes

Local network, Static routes	
Local static routes	
Network	Network in CIDR format, see “CIDR (Classless Inter-Domain Routing)” on page 136
Gateway	Gateway via which this network can be accessed

3.6 Wireless network (mobile network settings)

You can integrate remote stations into an IP network, e.g., the Internet, via a mobile network connection. The mobile network connection and frequencies can be configured here.

3.6.1 Radio setup

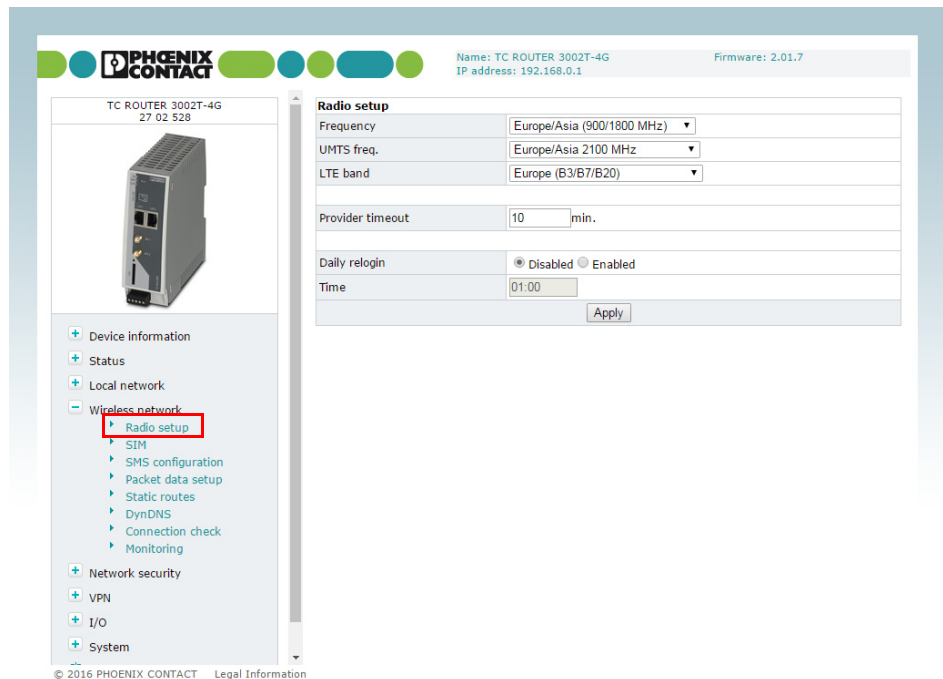


Figure 3-12 Wireless network, Radio setup

Wireless network, Radio setup		
Radio setup	Frequency	GSM frequency range in which the router should operate
	UMTS freq.	Frequency range for UMTS in which the router should operate In addition, you can deactivate UMTS: "UMTS off"
	LTE band	Frequency range for LTE in which the router should operate In addition, you can deactivate LTE: "LTE off"
	Provider timeout	Period of time after which the radio engine restarts in the event of the failure or unavailability of the mobile network (in minutes)
	Daily relogin	<ul style="list-style-type: none"> - Disabled: daily login deactivated - Enabled: daily login activated
	Time	Time at which the router logs out of the mobile network under controlled conditions and logs in again.

3.6.2 SIM

Settings for the European devices (TC ROUTER ... 3G/4G)

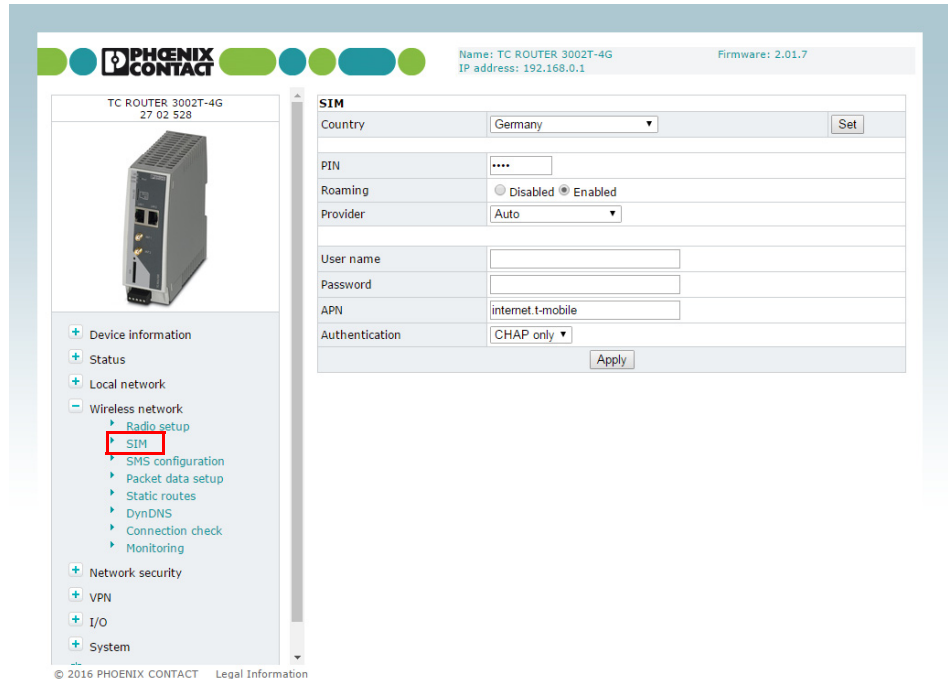


Figure 3-13 Wireless network, SIM (Europe)

Wireless network, SIM		Settings for the primary mobile network connection, Europe
SIM	Country	Select the country in which the router is dialing into the GSM network. This setting limits the selection among the providers.
	PIN	Enter the PIN for the SIM card here. The PIN cannot be read back, it can only be overwritten.
	Roaming	<p>If roaming is activated (default), you can select a specific provider from the drop-down menu.</p> <ul style="list-style-type: none"> – Enabled: the router can also dial-in via external networks. If “Auto” is set under “Provider”, the strongest provider is selected. Depending on your contract, this may incur additional costs. Alternatively, you can specify a provider. – Disabled: roaming is deactivated and only the provider's home network is used. If this network is unavailable, the router cannot establish an Internet connection.

Wireless network, SIM [...]	Settings for the primary mobile network connection, Europe	
	Provider	<p>Select a provider via which the router is to establish the Internet connection. The country selected under “Country” limits the list of providers.</p> <ul style="list-style-type: none"> – Auto: the router automatically selects the provider using the SIM card.
	User name	<p>User name for packet data access. The user name and password can be obtained from your provider. This field may be left empty if the provider does not require a special input.</p>
	Password	<p>Password for the packet data access. This field may be left empty if the provider does not require a password.</p>
	APN	<p>The APN can be obtained from your provider.</p> <p>APN (Access Point Name) is the name of a terminal point in a packet data network. The APN enables access to an external data network. At the same time, the APN specifies the network to which a connection is to be established. In the case of a public APN, the connection is usually established to the Internet. The device supports public and private APNs.</p>
	Authentication	<p>Select the protocols for logging in to the provider:</p> <ul style="list-style-type: none"> – None: the provider's APN does not require login (default). – Refuse MSCHAP: MSCHAP is not accepted. – CHAP only: Only CHAP is accepted. – PAP only: Only PAP is accepted.

Settings for the US devices (TC ROUTER 3002T-4G VZW and TC ROUTER 3002T-4G ATT)

The devices for the American market require special APN settings.

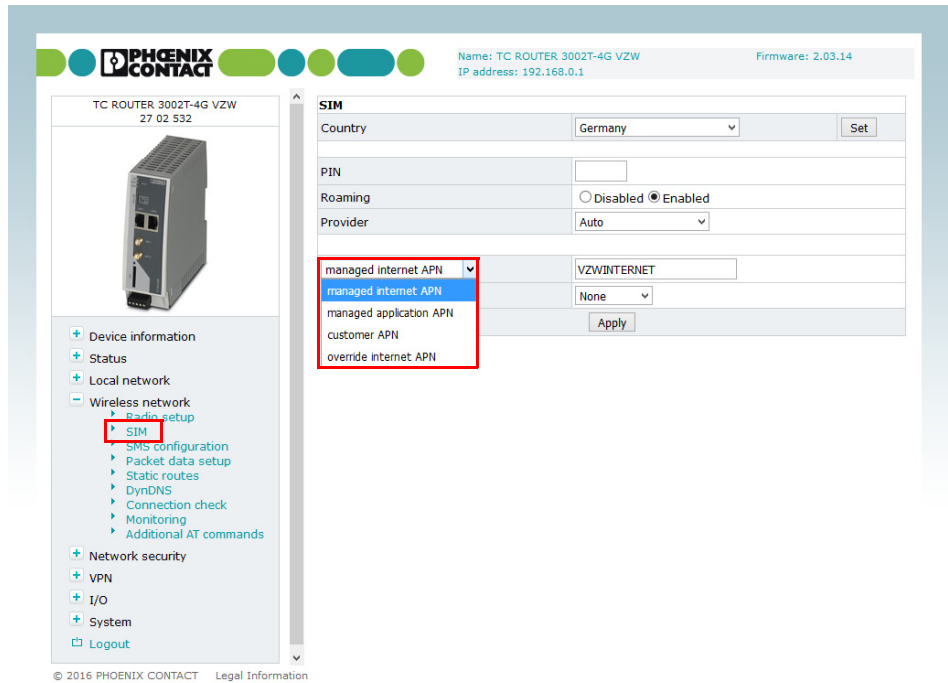



Figure 3-14 Wireless network, SIM (US)

Wireless network, SIM		Settings for the primary mobile network connection, US
SIM	Country	Select the country in which the router is dialing into the GSM network. This setting limits the selection among the providers.
	PIN	Enter the PIN for the SIM card here. The PIN cannot be read back, it can only be overwritten.
	Roaming	<p>If roaming is activated (default), you can select a specific provider from the drop-down menu.</p> <ul style="list-style-type: none"> – Enabled: the router can also dial-in via external networks. If “Auto” is set under “Provider”, the strongest provider is selected. Depending on your contract, this may incur additional costs. Alternatively, you can specify a provider. – Disabled: roaming is deactivated and only the provider’s home network is used. If this network is unavailable, the router cannot establish an Internet connection.

Wireless network, SIM [...]	Settings for the primary mobile network connection, US	
	<p>Provider</p> <p>User name</p> <p>Password</p> <p>APN</p>	<p>Select a provider via which the router is to establish the Internet connection. The country selected under “Country” limits the list of providers.</p> <ul style="list-style-type: none"> – Auto: the router automatically selects the provider using the SIM card. <p>User name for packet data access. The user name and password can be obtained from your provider. This field may be left empty if the provider does not require a special input.</p> <p>Password for the packet data access. This field may be left empty if the provider does not require a password.</p> <p>APN (Access Point Name) is the name of a terminal point in a packet data network. The APN enables access to an external data network. At the same time, the APN specifies the network to which a connection is to be established. In the case of a public APN, the connection is usually established to the Internet. The device supports public and private APNs.</p> <ul style="list-style-type: none"> – managed Internet APN: default, no manual input The device autonomously logs in to the network. The APN is set automatically. When the router has logged in to the network, the standard APN used is displayed. – managed application APN (only Verizon Wireless): enter an application APN. The standard APN remains stored in the device. – customer APN: enter a customer-specific APN. The standard APN remains stored in the device. – overwrite APN: the standard APN will be deleted if you enter your APN here. This is only possible after the router has successfully made a connection with the mobile network by using the default setting (managed Internet APN). <div data-bbox="802 1234 1433 1402" style="border: 1px solid black; padding: 5px;"> <p> Only use "overwrite APN" if the default APN of your provider changed and the router does not adapt automatically.</p> <p>Contact your provider if you have accidentally overwritten the default APN.</p> </div>
	<p>Authentication</p>	<p>Select the protocols for logging in to the provider:</p> <ul style="list-style-type: none"> – None: the provider's APN does not require login (default). – Refuse MSCHAP: MSCHAP is not accepted. – CHAP only: Only CHAP is accepted. – PAP only: Only PAP is accepted.

3.6.3 SMS configuration (SMS settings)

You can operate the device remotely via SMS.

- Open “Wireless network, SMS configuration”. Activate “SMS control” and enter the “SMS password”. The password can contain up to seven alphanumeric characters.

In addition, the device can forward received SMS messages to a recipient as a UDP packet via Ethernet.

- Activate the “SMS forward” function.
- Enter the recipient IP address and port with which you would like to communicate. The default value for the server is port 1432. Alternatively, incoming SMS messages can be accessed from the local Ethernet network via XML and socket server (see “[Socket server](#)” on page 75).

The received SMS is forwarded in the following format:

```
<?xml version="1.0"?>
<cmgr origaddr="+49172123456789" timestamp="10/05/21,11:27:14+08">
SMS message</cmgr>
```

- origaddr = Sender telephone number
- timestamp = Time stamp of the service center in GSM 03.40 format

The SMS syntax for switching inputs, outputs, and functions contains the following information:

- Password
- Function command
- Additional subcommands

Table 3-1 Supported function commands

Function command	Description
SET:<sub_cmd>	General command for starting functions (ON), must be supplemented with subcommand
CLR:<sub_cmd>	General command for stop functions (OFF), must be supplemented with subcommand
SEND:STATUS	Query status of the mobile router
RESET	Reset alarms
REBOOT	Restart mobile router

Table 3-2 Subcommands <sub_cmd> for the function commands “SET” and “CLR”

Subcommand <sub_cmd>	Description
GPRS	Start or stop packet data connection
OUTPUT	Switch output 1: ON/OFF
OUTPUT:n	Switch output n: ON/OFF, n={1...4}
IPSEC	Start or stop IPsec VPN 1: ON/OFF
IPSEC:n	Start or stop IPsec VPN n: ON/OFF, n={1...3}
OPENVPN	Start or stop VPN 1: ON/OFF
OPENVPN:n	Start or stop VPN n: ON/OFF, n={1...3}

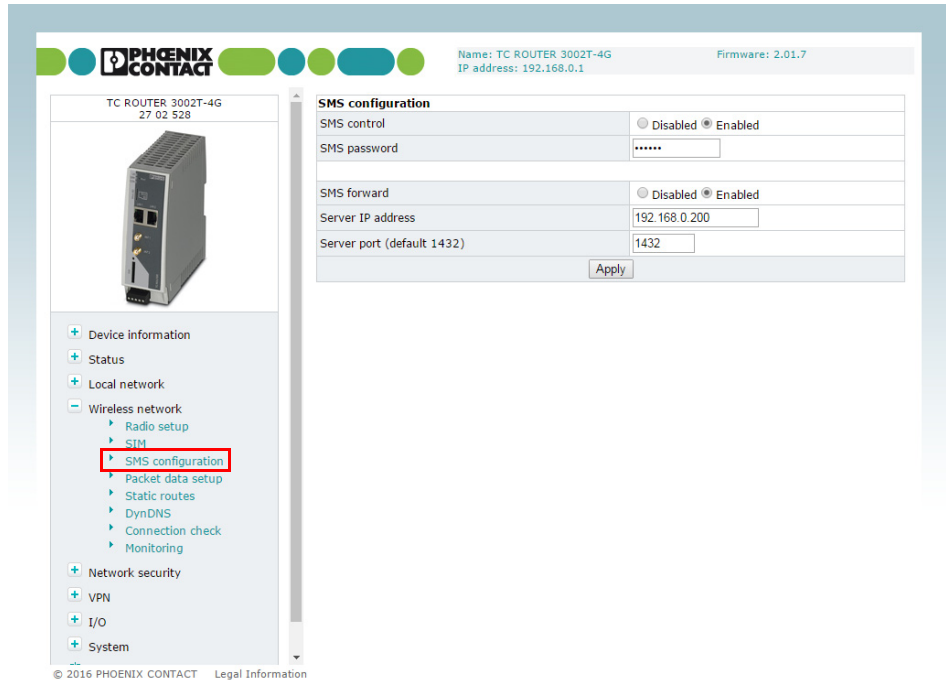


Figure 3-15 Wireless network, SMS configuration

Wireless network, SMS configuration

SMS configuration	SMS control	<ul style="list-style-type: none"> – Disabled: remote operation of router via SMS not possible – Enabled: remote operation of router via SMS activated
	SMS password	SMS password for remote operation
	SMS forward	<ul style="list-style-type: none"> – Disabled: not possible to forward SMS messages via Ethernet – Enabled: forwarding of SMS messages via Ethernet activated
	Server IP address	IP address to which the SMS message should be forwarded
	Server port (default 1432)	Port to which the SMS message should be forwarded

Example

SMS message text for starting IPsec tunnel #2 with the password 1234:

#1234:SET:IPSEC:2

To stop this connection, you must send the following SMS message:

#1234:CLR:IPSEC:2

3.6.4 Packet data setup

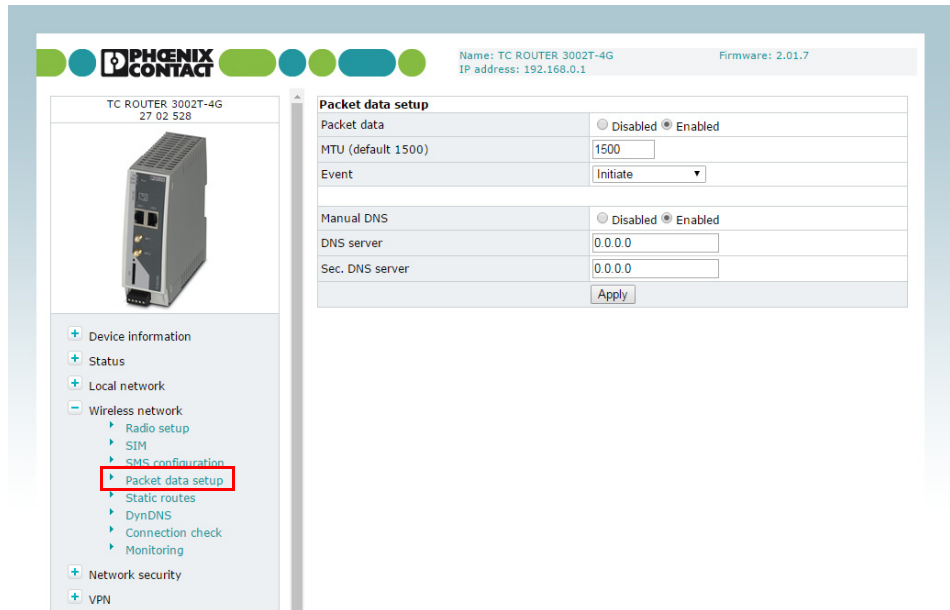


Figure 3-16 Wireless network, Packet data setup

Wireless network, Packet data setup		
Packet data setup	Packet data	<ul style="list-style-type: none"> - Disabled: packet data connection deactivated - Enabled: access enabled to LTE / UMTS / HSPA / GPRS / EDGE <p>If this packet data connection is activated, there is only a virtual permanent connection to the partner. This wireless area is not used until data is actually transmitted, e.g., via VPN tunnel.</p>
	MTU (default 1500)	Maximum Transmission Unit (MTU) is the maximum packet size, in bytes, in the mobile network
	Event	<p>Event that starts the packet data connection:</p> <ul style="list-style-type: none"> - Initiate: automatic start after router boots up - Initiate on Input #1 ... #2: manual start via switching input - Initiate on SMS: manual start via SMS message - Initiate on XML: manual start via XML socket server
	Manual DNS	<ul style="list-style-type: none"> - Disabled: manual DNS setting is deactivated. The DNS settings are received automatically from the provider. - Enabled: manual DNS setting is enabled.
	DNS server	IP address of the primary DNS server in the mobile network
	Sec. DNS server	IP address of the alternative DNS server in the mobile network

3.6.5 Wireless static routes (redirection of data packets)

With static routes, you can specify alternative routes for data packets in the mobile network. If the entries for the network and gateway are logically incorrect, the incorrect entries will be displayed with a red frame.

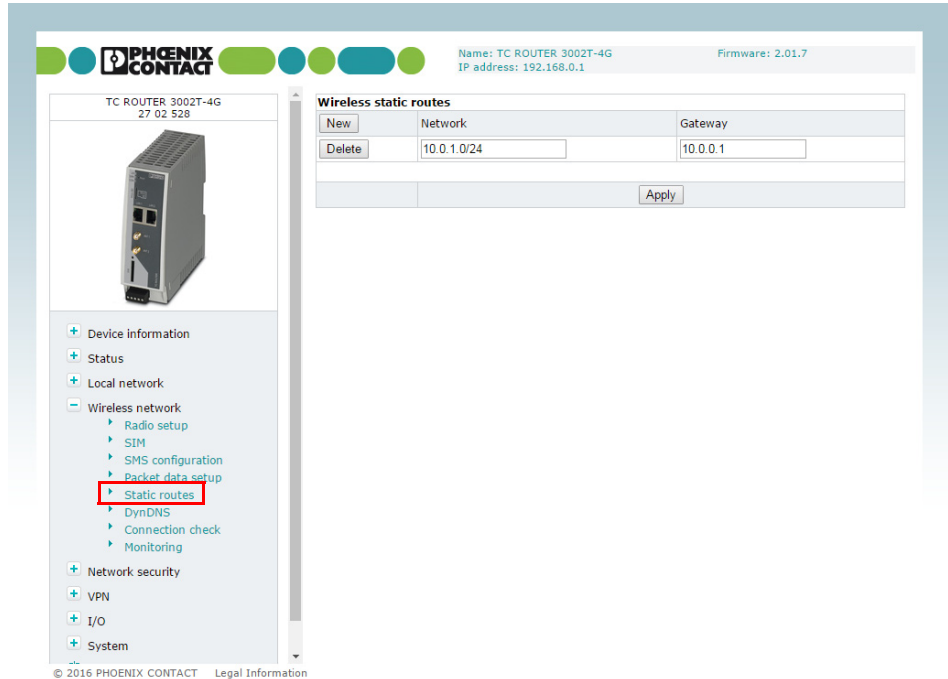


Figure 3-17 Wireless network, Wireless static routes

Wireless network, wireless static routes

Wireless static routes

Network

The network in CIDR format, see [“CIDR \(Classless Inter-Domain Routing\)”](#) on page 136

Gateway

Gateway via which this network can be accessed

3.6.6 DynDNS (address management via dynamic DNS)

Each mobile router is dynamically assigned an IP address by the provider. The address changes from session to session.

If the mobile router is to be accessed via the Internet, you can specify a fixed host name with the help of a DynDNS provider for the dynamic IP address. The router can in the future be accessed via this host name.



Check whether your mobile network provider supports dynamic DNS in the mobile network.

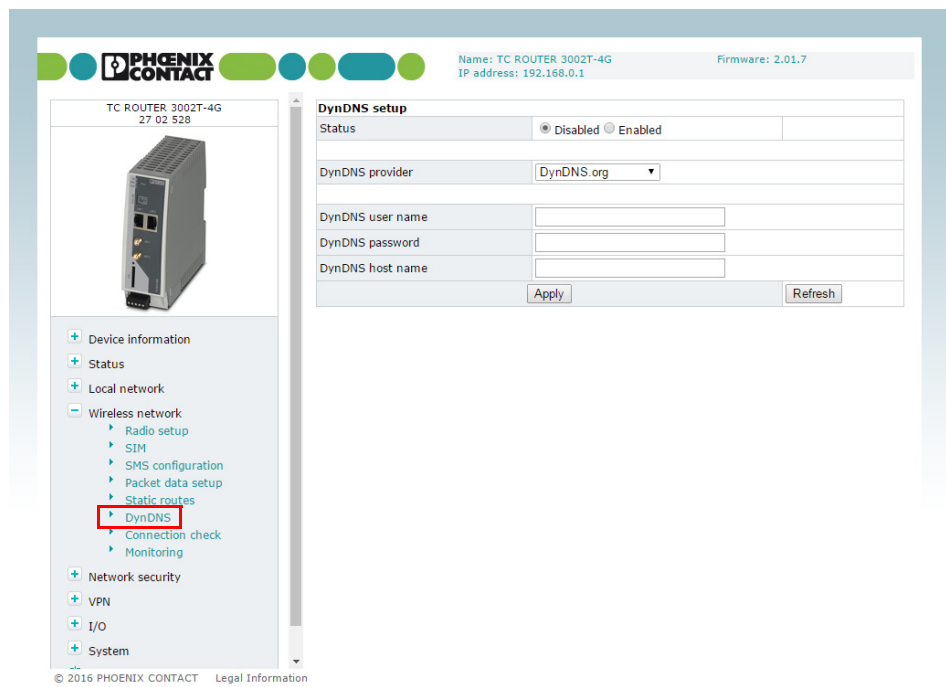


Figure 3-18 Wireless network, DynDNS

Wireless network, DynDNS	
DynDNS setup	<p>Status</p> <ul style="list-style-type: none"> - Disabled: DynDNS client deactivated - Enabled: DynDNS client activated <p>DynDNS provider</p> <p>Select the name of the provider with whom you are registered, e.g., DynDNS.org, TZO.com, dhs.org</p> <p>DynDNS user name</p> <p>User name for your DynDNS account</p> <p>DynDNS password</p> <p>Password for your DynDNS account</p> <p>DynDNS host name</p> <p>Host name that was specified for this router with the DynDNS service</p> <p>The router can be accessed via this host name.</p>

3.6.7 Connection check (connection monitoring)

Connection monitoring enables you to check whether the packet data connection in the mobile network is functioning correctly. In order to maintain the packet data connection in the mobile network, connection monitoring also acts as a Keep Alive function.

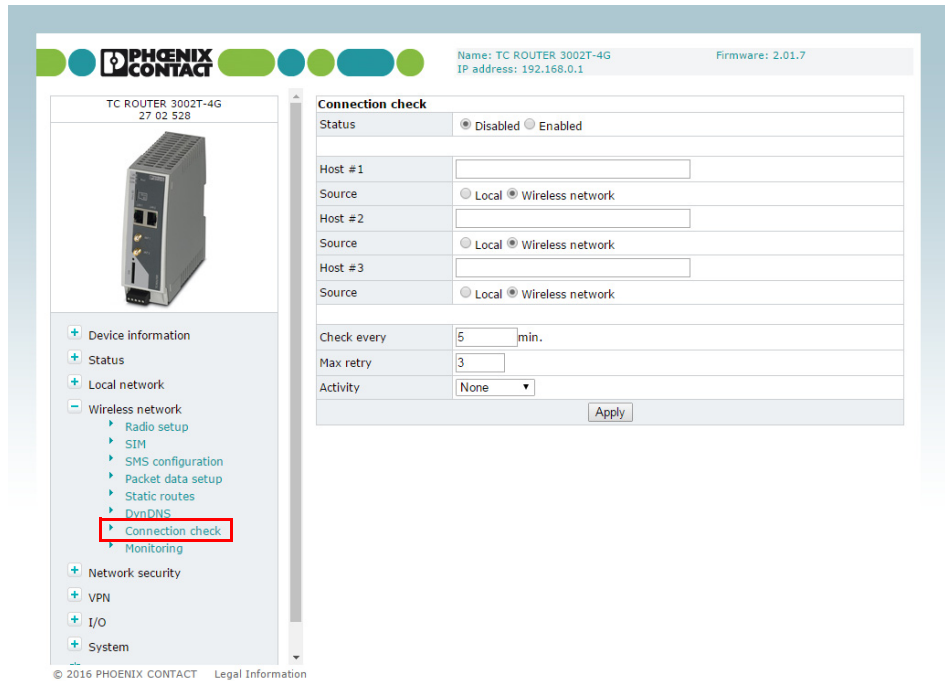


Figure 3-19 Wireless network, Connection check

Wireless network, connection check	
Connection check	<p>Status</p> <ul style="list-style-type: none"> – Disabled: connection monitoring of the packet data connection is deactivated (default) – Enabled: connection monitoring of the packet data connection is activated <p>Host #1 ... #3 IP address or host name of the reference point for connection monitoring</p> <p>Source</p> <ul style="list-style-type: none"> – Local: the local network interface sends the connection monitoring IP packets with the IP address of the local interface (LAN). – Wireless network: the mobile network interface sends the connection monitoring IP packets with the IP address assigned by the provider. <p>Check every Check interval in minutes</p> <p>Max. retry Number of times to retry until the configured action is performed</p>

Wireless network, connection check [...]

Activity

- **Reboot:** restart router
 - **Reconnect:** re-establish packet data connection
 - **Relogin:** shut down mobile network interface and restart by logging into the mobile network again.
 - **None:** no action
- As an option, you can configure information regarding the status of connection monitoring via a switching output.

3.6.8 Monitoring

Monitoring records mobile network parameters. You can use the function **temporarily** for startup or troubleshooting. The function is not intended for permanent use. All parameters are stored in a separate log file: "logradio.txt". At the end of the monitoring period, monitoring must be disabled.

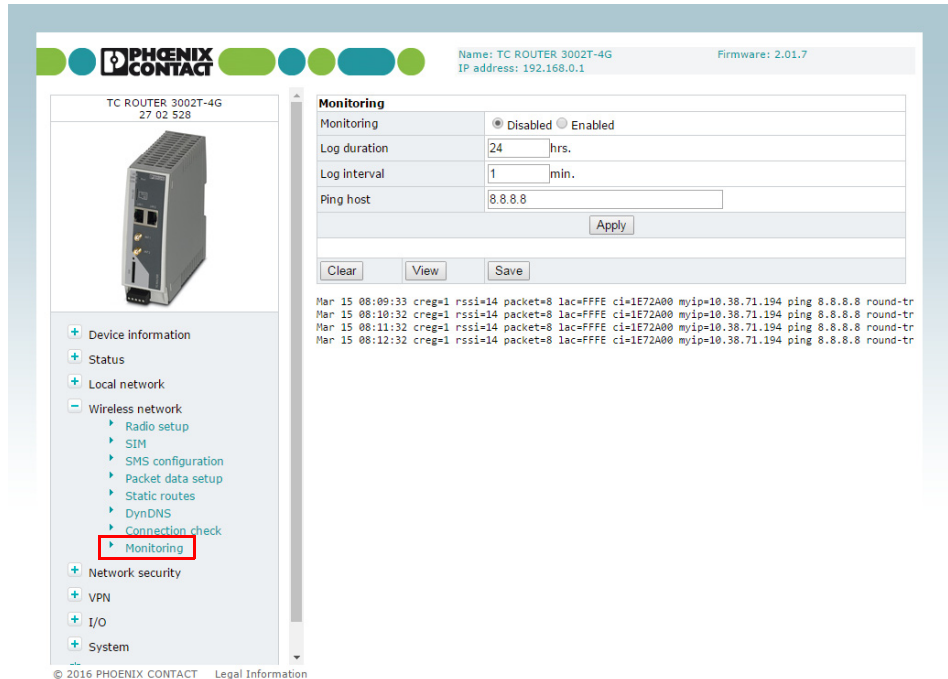


Figure 3-20 Wireless network, Monitoring

Wireless network, Monitoring		
Monitoring	Monitoring	<ul style="list-style-type: none"> - Disabled: mobile network monitoring deactivated (default) - Enabled: mobile network monitoring activated
	Log duration	Monitoring duration in hours, we recommend a maximum of 30 hours
	Log interval	Monitoring interval in minutes (at least one minute)
	Ping host	IP address or host name of the reference point for monitoring
	Clear	Clear log file in the router for a new monitoring session
	View	View current log file
	Save	Save log file on local computer

Structure of the "logradio.txt" log file:

Date and time

Network status creg=

- 0 Not logged in, not searching for cellular network
- 1 Logged in, home network
- 2 Not logged in, searching for cellular network
- 3 Not logged in, login rejected
- 4 Status unknown
- 5 Logged in, external network

Reception strength rssi=

- 0 -113 dBm or worse
- 1 -111 dBm
- 2...30 -109 dBm ... -53 dBm
- 31 -51 dBm or better

Packet data connection packet=

- 0 OFFLINE
- 1 ONLINE
- 2 GPRS ONLINE
- 3 EDGE ONLINE
- 4 WCDMA ONLINE
- 5 WCDMA HSDPA ONLINE
- 6 WCDMA HSUPA ONLINE
- 7 WCDMA HSDPA+HSUPA ONLINE
- 8 LTE ONLINE

Location lac= Location Area Code
ci= mobile phone cell ID

Current own IP address myip=

Reference IP ping=

Ping times in msd round-trip min/avg/max= (minimum/average/maximum)

3.7 Network security (security settings)

3.7.1 General setup

General settings for network security can be made on this page.

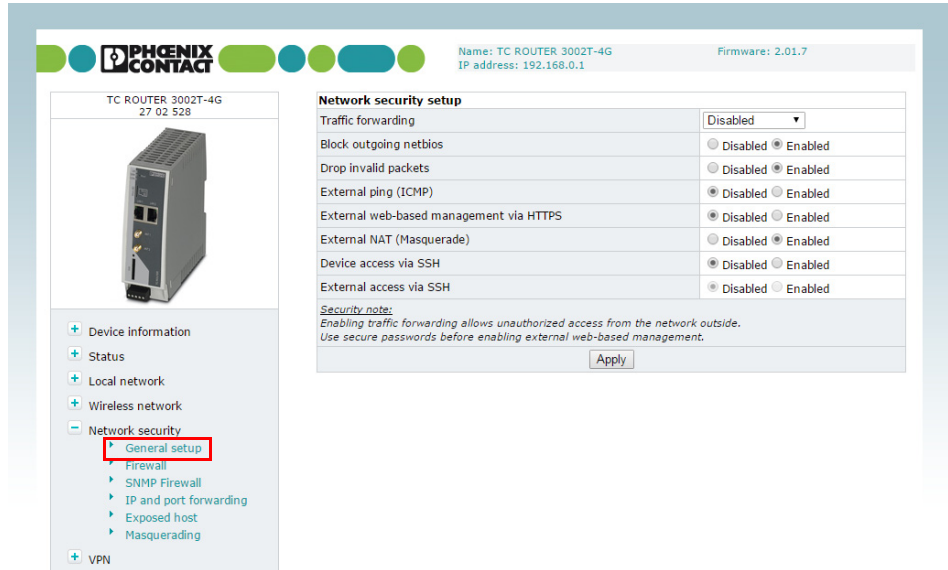


Figure 3-21 Network security, General setup

Network security, general setup		
Network security setup	Traffic forwarding	<ul style="list-style-type: none"> - Disabled: port forwarding from the mobile network to the local network is deactivated (default) - Port forwarding: port forwarding from the mobile network to the local network is activated - Exposed host: forwarding of all data traffic from the mobile network to an Ethernet device in the local network is activated. This access cannot be restricted via the firewall in the mobile router.
	Block outgoing netbios	<p>If Windows-based systems are installed in the local network, NetBIOS requests can result in data traffic and the associated costs, where applicable.</p> <ul style="list-style-type: none"> - Disabled: outgoing NetBIOS requests are permitted. - Enabled: outgoing NetBIOS requests are blocked (default).
	Drop invalid packets	<p>The firewall of the mobile router can filter and drop invalid or damaged IP packets.</p> <ul style="list-style-type: none"> - Disabled: invalid IP packets are also sent. - Enabled: invalid IP packets are dropped (default).

Network security, general setup [...]	
External ping (ICMP)	<p>A ping can be used to check whether a device in an IP network can be accessed. During normal operation, responding to external ping requests results in data traffic and its associated costs, where applicable.</p> <ul style="list-style-type: none"> - Disabled: if a ping request is sent from the external IP network to the router, it is ignored (default). - Enabled: if a ping request is sent from the external IP network to the router, it is sent back.
External web-based management via HTTPS	<p>Select whether the router may be configured via the mobile network or the external network using the web-based management (WBM).</p> <ul style="list-style-type: none"> - Disabled: external configuration via WBM is not possible. Set this option if you wish to configure and maintain the router locally (default). - Enabled: the router can be configured externally via WBM. Remote maintenance of the router is therefore possible. The router can be accessed from any external IP address. Access cannot be restricted via the firewall.
External NAT (Masquerade)	<p>For outgoing data packets, the router can rewrite the specified sender IP addresses from its internal network to its own external address. This method is used if the internal addresses cannot be routed externally. This is the case, for example, if a private address area such as 192.168.x.x is used. This method is referred to as IP masquerading.</p> <ul style="list-style-type: none"> - Disabled: IP masquerading is deactivated - Enabled: IP masquerading is activated. You can communicate via the Internet from a private, local network (default).
Device access via SSH	<p>This option can be used to specify whether the router can be accessed via the SSH service.</p> <ul style="list-style-type: none"> - Disabled: the SSH service is not available. No access to the router via SSH (default). - Enabled: access to the router via the SSH service is possible, from the local network or via a VPN tunnel.
External access via SSH	<p>This option can be used to specify whether the router can be accessed via the mobile network or the external network via the SSH service.</p> <ul style="list-style-type: none"> - Disabled: the SSH service is not available. No external access to the router via SSH (default) - Enabled: external access to the router via the SSH service is possible, from the local network or via a VPN tunnel.

3.7.2 Firewall (definition of firewall rules)

The device includes a stateful packet inspection firewall. The connection data of an active connection is recorded in a database (connection tracking). Rules therefore only have to be defined for one direction. This means that data from the other direction of the relevant connection, and only this data, is automatically allowed through.

The firewall is active by default upon delivery. It blocks incoming data traffic and only permits outgoing data traffic.



If multiple firewall rules are defined, these are queried starting from the top of the list of entries until an appropriate rule is found. This rule is then applied.
If the list of rules contains further subsequent rules that could also apply, these rules are ignored.

The device supports a maximum of 32 rules for incoming data traffic and 32 rules for outgoing data traffic.

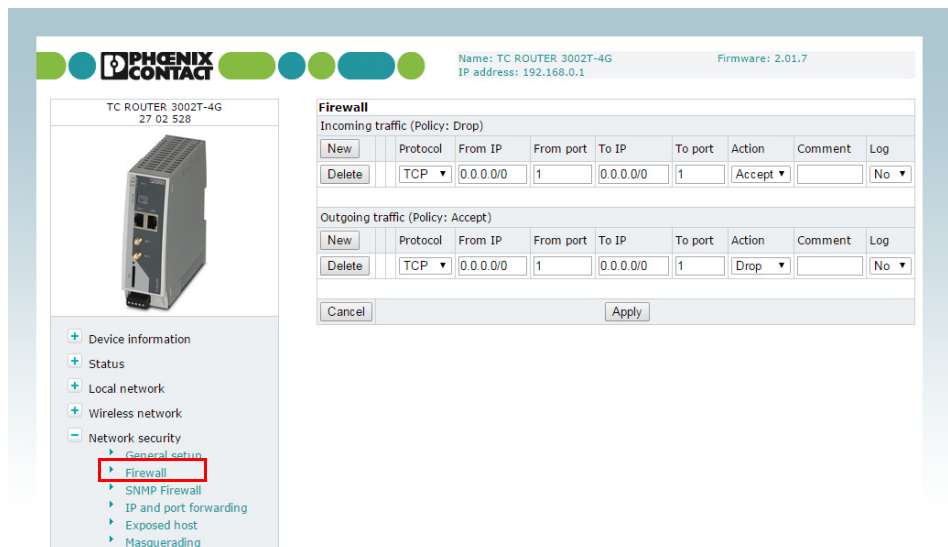



Figure 3-22 Network security, Firewall

Network security, firewall	
Firewall	Lists the firewall rules that have been set up. They apply for incoming data links that have been initiated externally.
Incoming traffic	<p>Protocol TCP, UDP, ICMP, all</p> <p>From IP / To IP 0.0.0.0/0 means all IP addresses. To specify an address area, use CIDR format (see “CIDR (Classless Inter-Domain Routing)” on page 136).</p> <p>From port / To port (Only evaluated for TCP and UDP protocols)</p> <ul style="list-style-type: none"> – any: any port – startport-endport: a port range (e.g., 110 ... 120)

Network security, firewall [...]	
	<p>Action</p> <ul style="list-style-type: none"> - Accept: the data packets may pass through. - Reject: the data packets are sent back. The sender is informed of their rejection. - Drop: the data packets are blocked. They are discarded, which means that the sender is not informed of their whereabouts. <p>Log</p> <p>For each individual firewall rule you can specify whether the event is to be logged if the rule is applied.</p> <ul style="list-style-type: none"> - Yes: event is logged. - No: event is not logged (default). <p>New</p> <ul style="list-style-type: none"> - New: add a new firewall rule below the last rule. - Delete: delete rule from the table. <p>The arrows can be used to move the respective rule one row up/down.</p>
Outgoing traffic	<p>Lists the firewall rules that have been set up. They apply for outgoing data links that have been initiated internally in order to communicate with a remote peer.</p> <p>Default: a rule is defined by default that allows all outgoing connections.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <p>If no rule is defined, all outgoing connections are prohibited (excluding VPN).</p> </div> <p>Protocol</p> <p>TCP, UDP, ICMP, all</p> <p>From IP / To IP</p> <p>0.0.0.0/0 means all IP addresses. To specify an address area, use CIDR format (see “CIDR (Classless Inter-Domain Routing)” on page 136).</p> <p>From port / To port</p> <p>(Only evaluated for TCP and UDP protocols)</p> <ul style="list-style-type: none"> - any: any port - startport-endport: a port range (e.g., 110 ... 120) <p>Action</p> <ul style="list-style-type: none"> - Accept: the data packets may pass through. - Reject: the data packets are sent back. The sender is informed of their rejection. - Drop: the data packets are blocked. They are discarded, which means that the sender is not informed of their whereabouts. <p>Log</p> <p>For each individual firewall rule you can specify whether the event is to be logged if the rule is applied.</p> <ul style="list-style-type: none"> - Yes: event is logged. - No: event is not logged (default). <p>New</p> <ul style="list-style-type: none"> - New: add a new firewall rule below the last rule. - Delete: delete rule from the table. <p>The arrows can be used to move the respective rule one row up/down.</p>

3.7.3 SNMP Firewall

The device has an additional firewall for SNMP connections. It can be used to restrict SNMP access. The firewall is active by default upon delivery. It blocks external access (incoming external traffic) and only allows access from the local network (incoming local traffic).

The device supports a maximum of 32 rules for local access and 32 rules for external access.

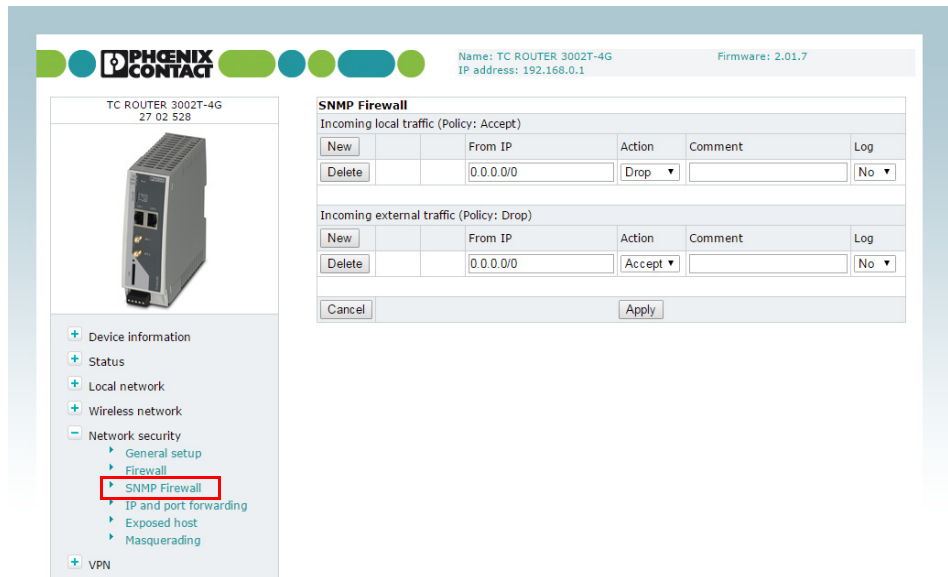


Figure 3-23 Network security, SNMP Firewall

Network security, SNMP Firewall		
SNMP Firewall	From IP	0.0.0.0/0 means all IP addresses. To specify an address area, use CIDR format (see “CIDR (Classless Inter-Domain Routing)” on page 136).
	Action	<ul style="list-style-type: none"> – Accept: the data packets may pass through. – Reject: the data packets are sent back. The sender is informed of their rejection. – Drop: the data packets are blocked. They are discarded, which means that the sender is not informed of their whereabouts.
	Log	<p>For each individual firewall rule you can specify whether the event is to be logged if the rule is applied.</p> <ul style="list-style-type: none"> – Yes: event is logged. – No: event is not logged (default).

3.7.4 IP and port forwarding (port forwarding setup)

The table contains the rules defined for IP and port forwarding. The device has one IP address, which can be used to access the device externally. For incoming data packets, the device can convert the specified sender IP addresses to internal addresses. This technique is referred to as NAT (Network Address Translation). Using the port number, the data packets can be redirected to the ports of internal IP addresses.

The device supports a maximum of 32 rules for port forwarding.

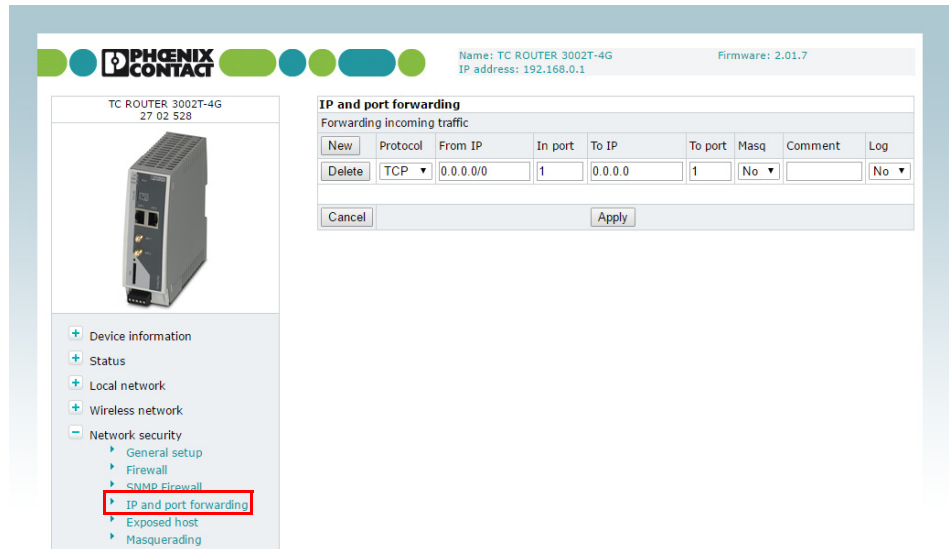


Figure 3-24 Network security, IP and port forwarding

Network security, IP and port forwarding		
IP and port forwarding	Protocol	TCP, UDP, ICMP
	From IP	0.0.0.0/0 means all IP addresses. To specify an address area, use CIDR format (see “CIDR (Classless Inter-Domain Routing)” on page 136).
	In port / To port	Only evaluated for TCP and UDP protocols <ul style="list-style-type: none"> – any: any port – startport-endport: a port range (e.g., 110 ... 120)
	To IP	IP address from the local network, incoming packets are forwarded to this address
	Masq	For each individual rule you can specify whether IP masquerading is to be used. <ul style="list-style-type: none"> – Yes: IP masquerading is activated, incoming packets from the Internet are given the IP address of the router. A response via the Internet is possible, even without a default gateway. – No: a response via the Internet is only possible with the default gateway (default).

Network security, IP and port forwarding [...]

Log

For each individual rule, you can specify whether the event is to be logged if the rule is applied.

- **Yes:** event is logged.
- **No:** event is not logged (default).

New

- **New:** add a new firewall rule below the last rule.
- **Delete:** delete rule from the table.

The arrows can be used to move the rule one row up or down.

3.7.5 Exposed host (server setup)

With this function, the router forwards all received external packets that do not belong to an existing connection to an IP address in the LAN. The device can therefore be accessed directly from the Internet as an “exposed host”. You can use the device as a server.

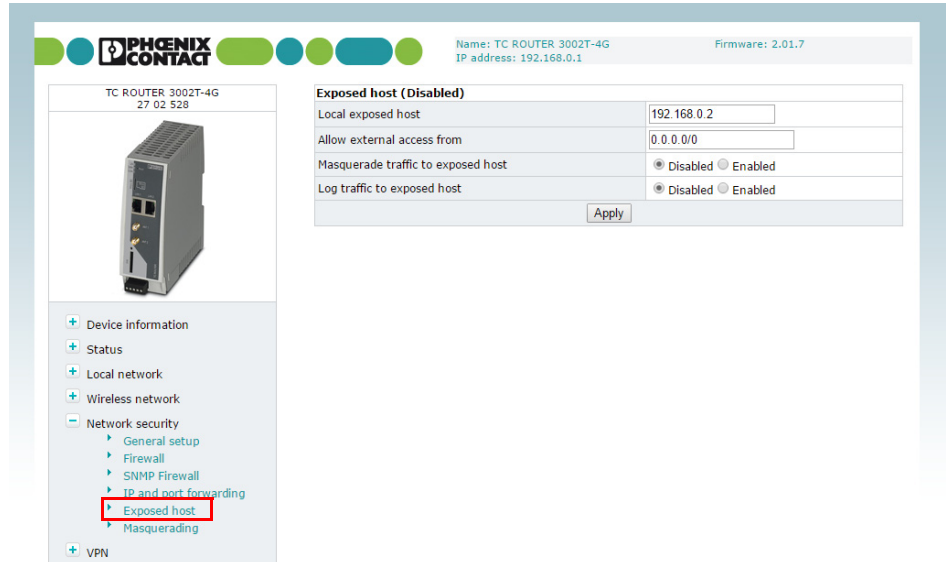


Figure 3-25 Network security, Exposed host

Network security, exposed host		
Exposed host	Local exposed host	IP address of the exposed host (server)
	Allow external access from	IP addresses for incoming data links 0.0.0.0/0 means all IP addresses. To specify an address area, use CIDR format (see “ CIDR (Classless Inter-Domain Routing) ” on page 136).
	Masquerade traffic to exposed host	Specify whether IP masquerading is to be used. <ul style="list-style-type: none"> – Enabled: IP masquerading is activated, incoming packets from the Internet are given the IP address of the router. A response via the Internet is possible, even without a default gateway. – Disabled: a response via the Internet is only possible with the default gateway (default).
	Log traffic to exposed host	Specify whether IP connections are logged. <ul style="list-style-type: none"> – Enabled: IP connections are logged. – Disabled: IP connections are not logged (default).

3.7.6 Masquerading

For certain networks you can specify whether IP masquerading is to be used. If IP masquerading is activated, all incoming packets from the Internet are given the IP address of the router. The response in the configured networks is possible even without a default gateway. The device supports a maximum of 16 rules for IP masquerading.

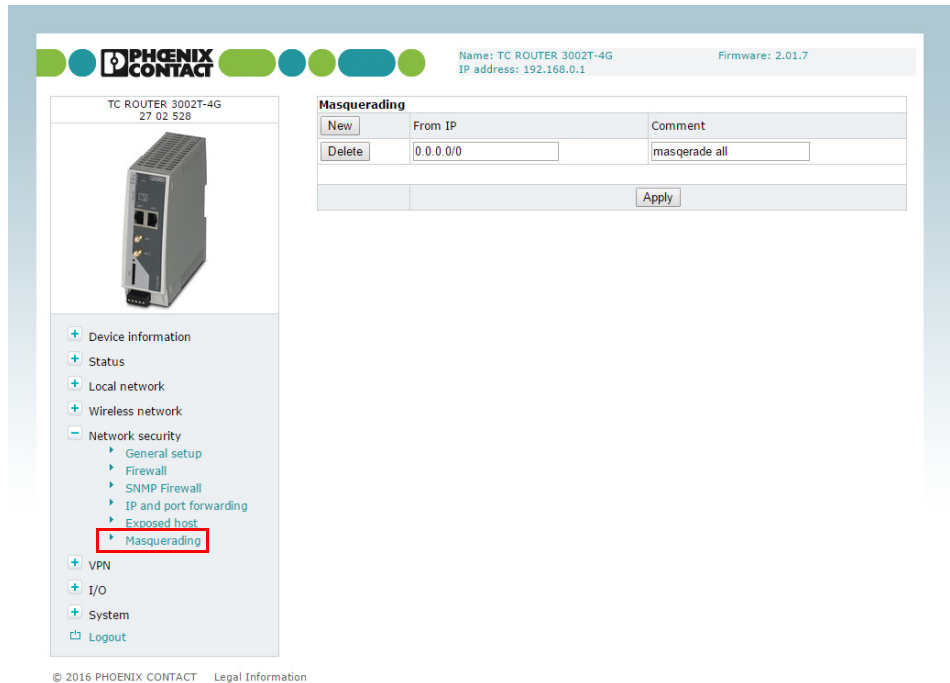


Figure 3-26 Network security, Masquerading

Network security, masquerading

Masquerading	From IP	0.0.0.0/0 means all IP addresses. To specify an address area, use CIDR format (see “CIDR (Classless Inter-Domain Routing)” on page 136).
---------------------	----------------	---

3.8 VPN

Requirements for a VPN connection

A general requirement for a VPN connection is that the IP addresses of the VPN partners are known and can be accessed. The device supports up to three IPsec connections and up to two OpenVPN connections. When a VPN connection is active, the VPN LED on the device is illuminated.

In order to successfully establish an IPsec connection, the VPN peer must support IPsec with the following configuration:


- Authentication via X.509 certificate or pre-shared secret key (PSK)
- Diffie-Hellman group 2 or 5
- 3DES or AES encryption
- MD5 or SHA-1 hash algorithms
- Tunnel mode
- Quick mode
- Main mode
- SA lifetime (one second to 24 hours)

The following functions are supported for OpenVPN connections:

- OpenVPN Client
- TUN device
- Authentication via X.509 certificate or pre-shared secret key (PSK)
- Static key
- TCP and UDP transmission protocol
- Keep Alive

3.8.1 IPsec connections (IPsec connection setup)


IPsec (Internet Protocol Security) is a secure VPN standard that is used for communication via IP networks.

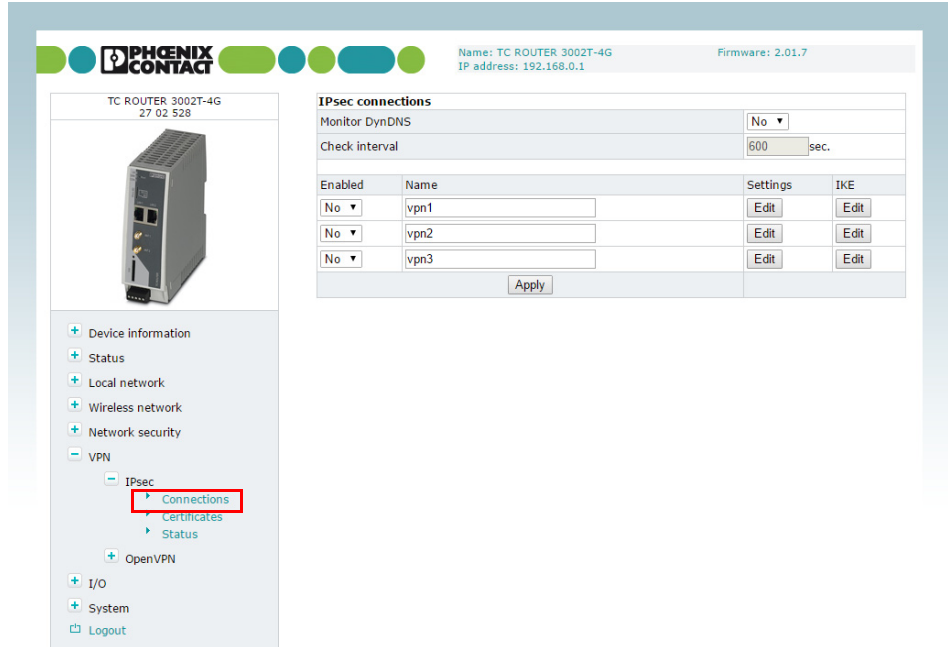

© 2016 PHOENIX CONTACT Legal Information
 Figure 3-27 VPN, IPsec, Connections

VPN, IPsec, Connections		
IPsec connections	Monitor DynDNS	Activate this function to check accessibility. – If the VPN peer does not have a fixed IP address – if a DynDNS name is used as the “Remote host”.
	Check interval	Enter the check interval in seconds.
	Enabled	– Yes: VPN connection activated – No: VPN connection deactivated
	Name	Assign a descriptive name to each VPN connection. The VPN connection can be freely named or renamed.
	Settings	Click on Edit to specify the settings for IPsec (see Page 54).
	IKE	Internet Key Exchange protocol for automatic key management for IPsec Click on Edit to specify the settings for IKE (see Page 58).

Settings, Edit

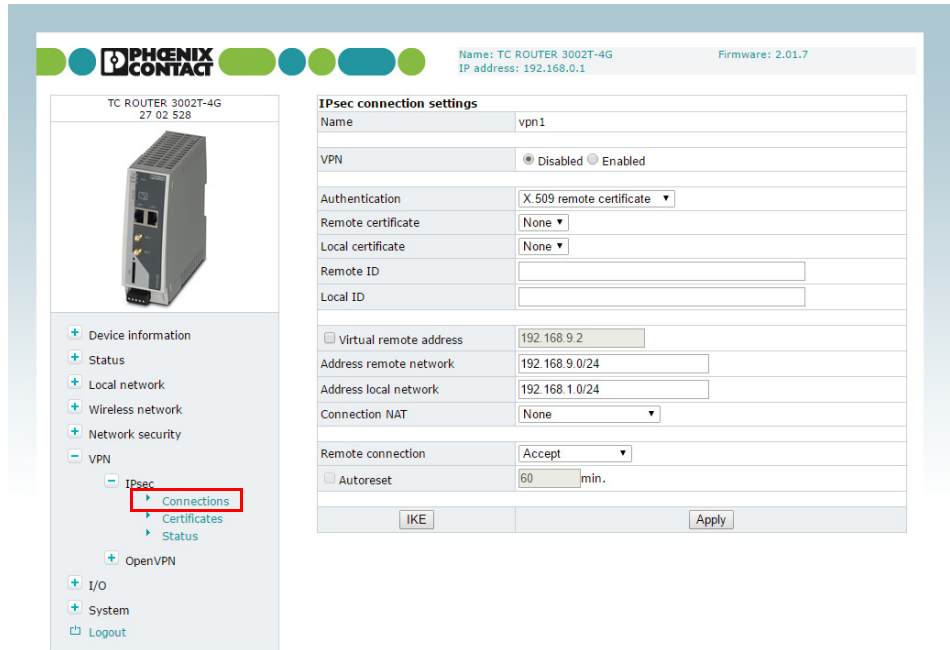

© 2016 PHOENIX CONTACT Legal Information

Figure 3-28 VPN, IPsec, Connections, Settings, Edit

VPN, IPsec, Connections, Settings, Edit		
IPsec connection settings	Name	Name of the VPN connection entered under “ IPsec connections ”
	VPN	<ul style="list-style-type: none"> – Yes: VPN connection activated – No: VPN connection deactivated
	Remote host	<p>IP address or URL of the peer to which (or from which) the tunnel will be created.</p> <p>“Remote host” is only used if “Initiate” has been selected under “Remote connection” (the router establishes the connection).</p> <p>If “Remote connection” is set to “Accept”, the value “%any” is set internally for “Remote host”. It therefore waits for a connection.</p>

VPN, IPsec, Connections, Settings, Edit [...]

Authentication

X.509 remote certificate: authentication method with X.509 certificate

With the X.509 certificate option, each VPN device has a private secret key and a public key. The certificate contains additional information about the certificate's owner and the certification authority (CA).



The procedure for creating an X.509 certificate is described in [Section "Creating certificates" on page 101](#).

Preshared secret key (PSK): authentication method

With a preshared secret key, each VPN device knows one shared private key, one password. Enter this shared key in the "Preshared Secret Key" field.

Remote certificate

Certificate the router uses to authenticate the VPN peer (remote certificate, .pem).

The selection list contains the certificates that have been loaded on the router (see ["IPsec certificates \(certificate upload\)" on page 60](#)).

Local certificate

Certificate used by the router to authenticate itself to the VPN peer (machine certificate, PKCS#12)

The selection list contains the certificates that have been loaded on the router (see ["IPsec certificates \(certificate upload\)" on page 60](#)).

Remote ID

Default: empty field

The **Remote ID** can be used to specify the name the router uses to identify itself to the partner. The name must match the data in the router certificate. If the field is left empty, the data from the certificate is used.

Valid values:

- No entry (default). The "Subject" entry (previously Distinguished Name) in the certificate is used.
- Subject entry in the certificate
- One of the "Subject Alternative Names", if they are listed in the certificate. If the certificate contains "Subject Alternative Names", these are specified under "Valid values". These can include IP addresses, host names with "@" prefix or e-mail addresses, for example.

VPN, IPsec, Connections, Settings, Edit [...]		
	Local ID	<p>Default: empty field</p> <p>The "Local ID" can be used to specify the name the router uses to identify itself to the peer.</p> <p>For additional information, see "Remote ID".</p>
	Virtual remote address	<p>Virtual address of software VPN clients that are to establish the VPN connection. If your software VPN client requires this virtual address, activate this function.</p>
	Address remote network	<p>IP address/subnet mask of the remote network to which the VPN connection is to be established</p>
	Address local network	<p>IP address/subnet mask of the local network</p> <p>Specify the address of the network or computer which is connected locally to the router here.</p> <ul style="list-style-type: none"> - "NAT to local network" set to "None" (default) Actual IP address or subnet mask of the local network. Specify the address of the network that is connected locally to the router here. - "Local 1:1 NAT" and "Remote masquerading" activated This virtual IP address/subnet mask enables the IP addresses for the remote network to be accessed through the VPN tunnel. You must enter the same settings as the remote network on the remote VPN router.
	Connection NAT	<ul style="list-style-type: none"> - None: no NAT within the VPN tunnel (default) - Local 1:1 NAT: virtual IP addresses are used for communication via a VPN tunnel. These addresses are linked to the real IP addresses for the set network that has been connected. The subnet mask remains unchanged. - Remote masquerading: as with "Local 1:1 NAT", virtual IP addresses are used for communication via a VPN tunnel. In addition, the sender IP address (source IP) is replaced with the IP address of the router for all incoming packets via a VPN tunnel. Devices in the local network that cannot use a default gateway can therefore be accessed via a VPN tunnel.
	NAT to local network	<p>Enter the real IP address area for the local network here. Using this address area, the local network can be accessed from the remote network via 1:1 NAT. You can use this function, for example, to access two machines with the same IP address via a VPN tunnel.</p>

VPN, IPsec, Connections, Settings, Edit [...]

Remote connection

Side from which the connection can be established

- **Initiate:** VPN connection is started by the router.
- **Accept:** VPN connection is initiated by the peer.

Additional settings:

- **Initiate on Input...:** VPN tunnel is started or stopped via a digital input.
- **Initiate on SMS:** VPN tunnel is started via SMS. You must also specify the number of minutes until the VPN tunnel is to be stopped via Autoreset.
- **Initiate on call:** VPN tunnel is started via a call. You must also specify the number of minutes until the VPN tunnel is to be stopped via Autoreset.
- **Initiate on XML:** VPN tunnel is started or stopped via an XML command via socket server.

IKE, Edit

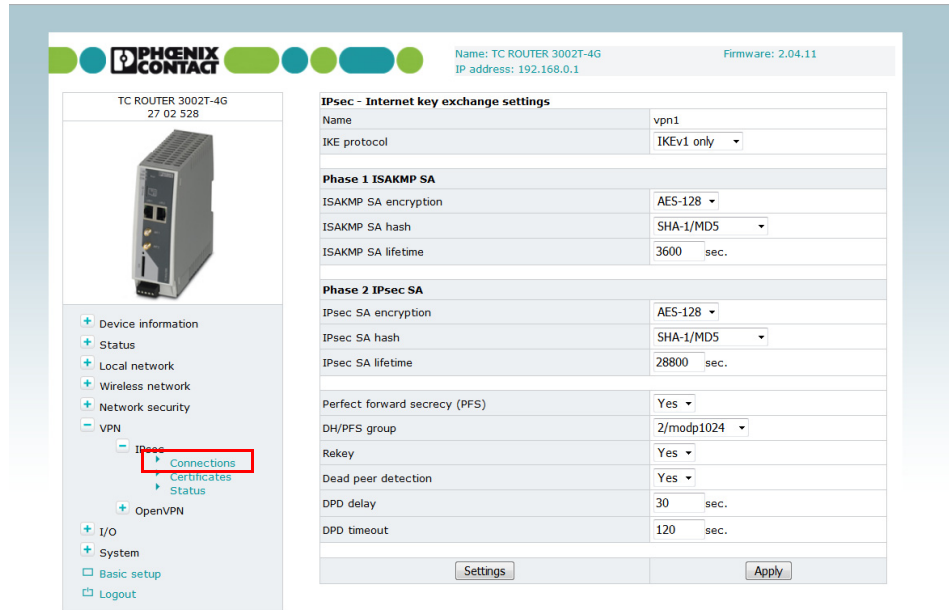


Figure 3-29 VPN, IPsec, Connections, IKE, Edit

VPN, IPsec, Connections, IKE, Edit		
IPsec - Internet Key Exchange settings	Name	Name of the VPN connection entered under ““IPsec connections“
	IKE protocol	Select an IKE version. – initiate IKEv2: IKEv2 is preferred. A switch back to IKEv1 takes place in case of an erroneous connection attempt.
	Phase 1 ISAKMP SA Key exchange	<p>ISAKMP SA encryption</p> <p>Encryption algorithm</p> <p>Internet Security Association and Key Management Protocol (ISAKMP) is a protocol for creating Security Associations (SA) and exchanging keys on the Internet.</p> <p>AES128 is preset as default.</p> <p>The following generally applies: the more bits an encryption algorithm has (specified by the appended number), the more secure it is. The relatively new AES-256 method is therefore the most secure, however it is still not used that widely. The longer the key, the more time-consuming the encryption procedure.</p>
	ISAKMP SA hash	Leave this set to SHA-1/MD5 . It then does not matter whether the peer works with MD5 or SHA-1 .

VPN, IPsec, Connections, IKE, Edit [...]		
Phase 2 IPsec SA Data exchange	ISAKMP SA lifetime	The keys of an IPsec connection are renewed at defined intervals in order to increase the difficulty of an attack on an IPsec connection. ISAKMP SA lifetime: lifetime in seconds of the keys agreed for ISAKMP SA. Default: 3600 seconds (1 hour) The maximum lifetime is 86400 seconds (24 hours). In contrast to Phase 1 ISAKMP SA (key exchange), the procedure for data exchange is defined here. It does not necessarily have to differ from the procedure defined for key exchange.
	IPsec SA encryption	See "ISAKMP SA encryption"
	IPsec SA hash	See "ISAKMP SA encryption"
	IPsec SA lifetime	Lifetime in seconds of the keys agreed for IPsec SA Default: 28800 seconds (8 hours) The maximum lifetime is 86400 seconds (24 hours).
	Perfect forward secrecy (PFS)	<ul style="list-style-type: none"> - Yes: PFS activated - No: PFS deactivated
	DH/PFS group	Key exchange procedure, defined in RFC 3526 – Modular Exponential (MODP) Diffie-Hellman groups for Internet Key Exchange (IKE) Perfect Forward Secrecy (PFS): method for providing increased security during data transmission. With IPsec, the keys for data exchange are renewed at defined intervals. With PFS, new random numbers are negotiated with the peer instead of being derived from previously agreed random numbers. 5/modp1536 – 2/modp1024 The following generally applies: the more bits an encryption algorithm has (specified by the appended number), the more secure it is. The longer the key, the more time-consuming the encryption procedure.
	Dead peer detection	If the peer supports the Dead Peer Detection (DPD) protocol, the relevant peers can detect whether or not the IPsec connection is still valid and whether it needs to be established again. Behavior in the event that the IPsec connection is aborted: <ul style="list-style-type: none"> - Off: no DPD - On: DPD activated <ul style="list-style-type: none"> - in "Restart" mode for VPN Initiate - in "Clear" mode for VPN Accept

VPN, IPsec, Connections, IKE, Edit [...]		
	DPD delay	<p>Delay between requests for a sign of life</p> <p>Duration in seconds after which DPD Keep Alive requests should be transmitted. These requests test whether the peer is still available.</p> <p>Default: 30 seconds</p>
	DPD timeout	<p>Duration after which the connection to the peer should be declared dead if there has been no response to the Keep Alive requests.</p> <p>Default: 120 seconds.</p>

3.8.2 IPsec certificates (certificate upload)

A certificate that has been loaded on the router is used to authenticate the router at the peer. The certificate acts as an ID card for the router, which it shows to the relevant peer.



The procedure for creating an X.509 certificate is described under [“CIDR \(Classless Inter-Domain Routing\)”](#) on page 136.

There are various types of certificate:

- Remote or peer certificates contain the public key used to decode the encrypted data.
- Own or machine certificates contain the private key used to encrypt the data. The private key is kept private. A PKCS#12 file is therefore protected by a password.
- The CA certificate or root certificate is the “mother of all certificates used”. It is used to check the validity of the certificates.

By importing a PKCS#12 file, the router is provided with a private key and the corresponding certificate. You can load several PKCS#12 files on the router. This enables the router to show the desired machine certificate to the peer for various connections. This can be a self-signed or CA-signed machine certificate.

To use a certificate that is installed, the certificate must be assigned under [“VPN, IPsec, Connections, Settings, Edit”](#). Click on “Apply” to load the certificate onto the router.

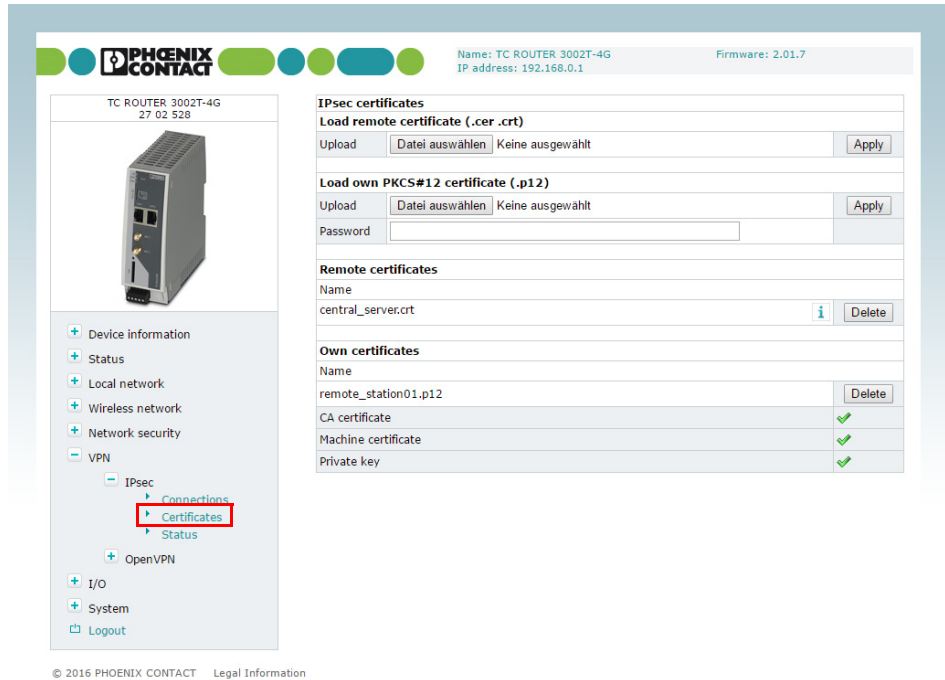


Figure 3-30 VPN, IPsec, Certificates

VPN, IPsec, Certificates

IPsec certificates

Load remote certificate (.cer .crt)

Here you can upload certificates which the router can use for authentication with the VPN peer.



The procedure for creating an X.509 certificate is described under [Section 4.5, “Creating certificates”](#).

- **Upload:** import certificate. Click on the “Browse” button to select the certificate to be imported.

Under “[VPN, IPsec, Connections, Settings, Edit](#)”, one of the certificates listed under “[Remote certificate](#)” or “[Local certificate](#)” can be assigned to each VPN connection.

Load own PKCS#12 certificate (.p12)

Upload: import the certificate you have received from your provider. The file must be in PKCS#12 format. Click on the “Browse” button to select the certificate to be imported.

Under “[VPN, IPsec, Connections, Settings, Edit](#)”, one of the certificates listed under “[Remote certificate](#)” or “[Local certificate](#)” can be assigned to each VPN connection.

Password: password used to protect the private key of the PKCS#12 file. The password is assigned when the key is exported.

VPN, IPsec, Certificates [...]	
Remote certificates	Overview of the imported .cer/.crt certificates of the peers Click on "Delete" to delete a certificate.
Own certificates	Overview of own imported PKCS#12 certificates Click on "Delete" to delete a certificate. The green ticks indicate whether the PKCS#12 file contains a CA certificate, a machine certificate or a private key.

3.8.3 IPsec status (status of the VPN connection)

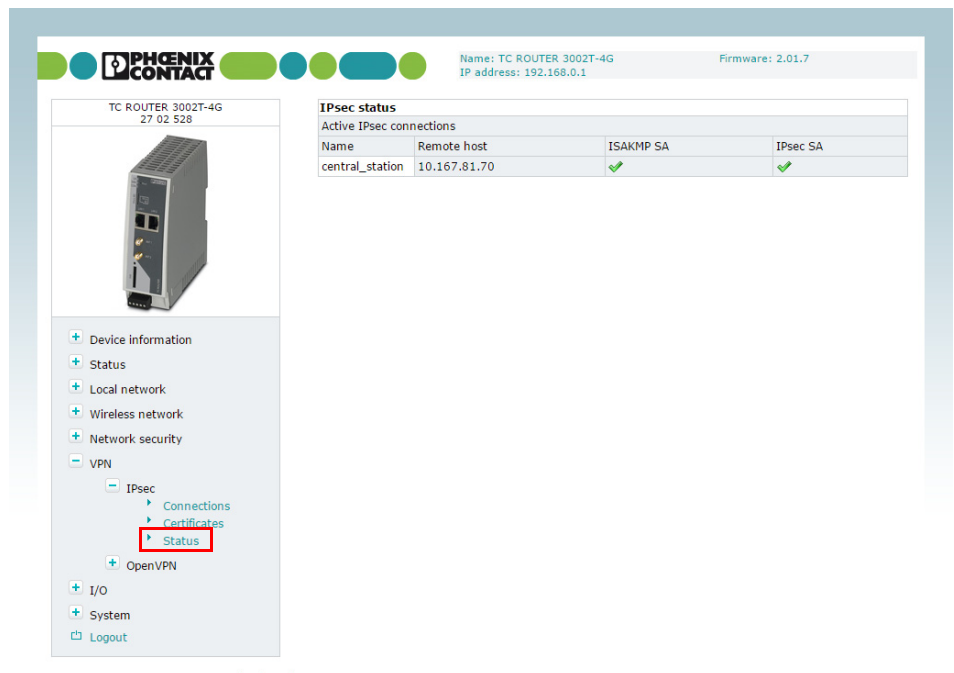


Figure 3-31 VPN, IPsec, Status

VPN, IPsec, Status		
IPsec status	Active IPsec connections	Status of the active VPN connection

3.8.4 OpenVPN connections (OpenVPN connection setup)

OpenVPN is a program for creating a virtual private network (VPN) via an encrypted connection. The device supports two OpenVPN connections.

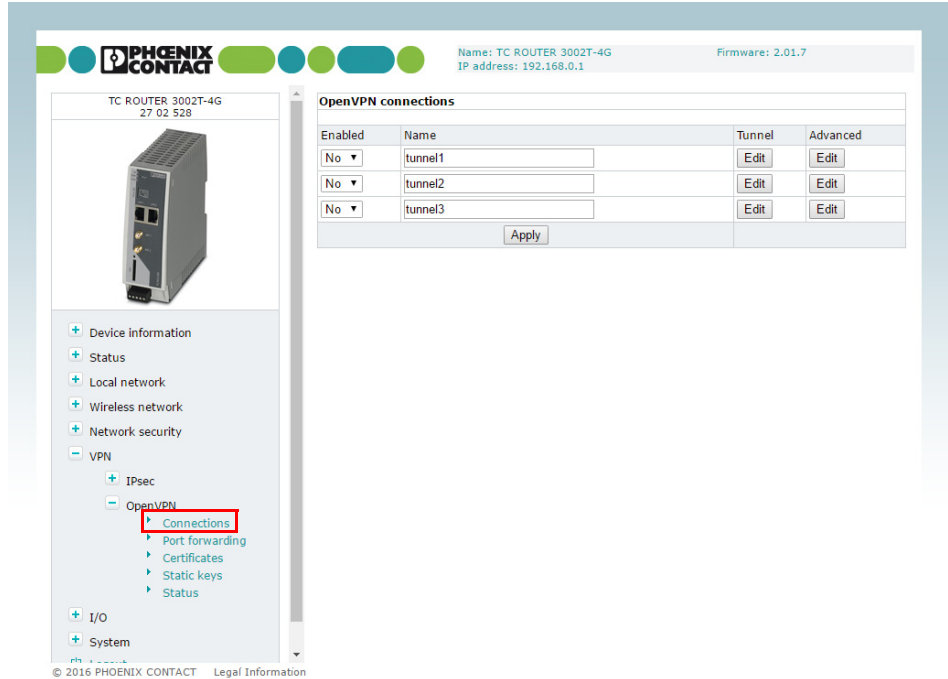


Figure 3-32 VPN, OpenVPN, Connections

VPN, OpenVPN, Connections

OpenVPN connections	Enabled	<ul style="list-style-type: none"> – Yes: defined VPN connection active – No: defined VPN connection not active
	Name	Assign a descriptive name to each VPN connection. The VPN connection can be freely named or renamed.
	Tunnel	Click on “Edit” to specify the settings for OpenVPN (see “Tunnel, Edit” on page 64).
	Advanced	Click on “Edit” to specify advanced settings for OpenVPN (see “Advanced, Edit” on page 67).

Tunnel, Edit

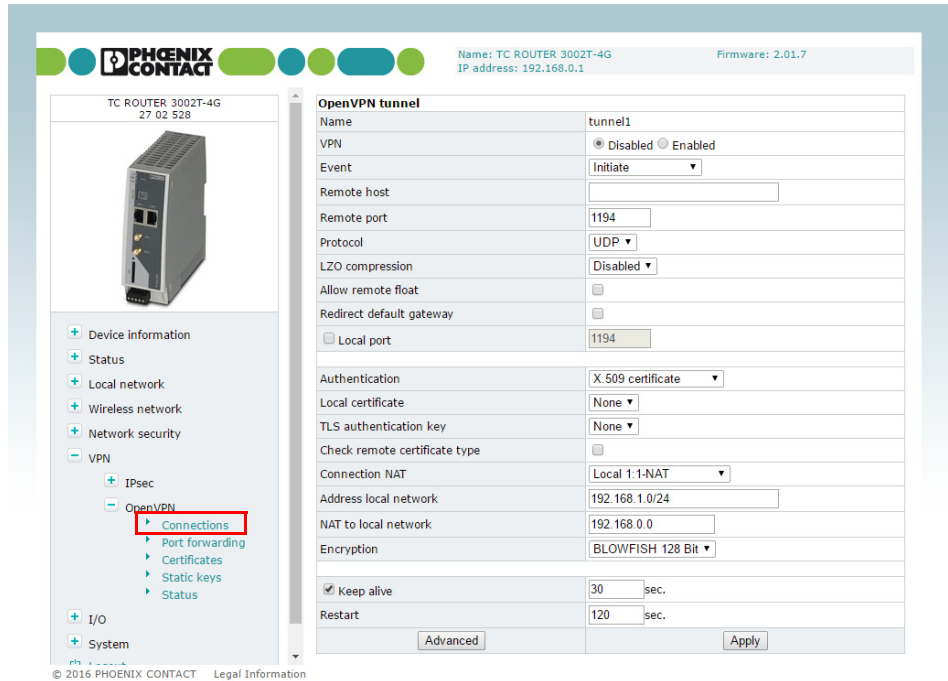


Figure 3-33 VPN, OpenVPN, Connections, Tunnel, Edit

VPN, OpenVPN, Connections, Tunnel, Edit		
OpenVPN tunnel	Name	Assign a descriptive name to each VPN connection. The VPN connection can be freely named or renamed.
	VPN	<ul style="list-style-type: none"> – Yes: VPN connection activated – No: VPN connection deactivated
	Event	Event for starting the OpenVPN connection <ul style="list-style-type: none"> – Initiate: automatic start after router boots up – Initiate on SMS: manual start via SMS message. You must also specify the number of minutes until the VPN connection is to be stopped via Autoreset. – Initiate on call: start via a call. You must also specify the number of minutes until the VPN connection is to be stopped via Autoreset. – Initiate on XML: manual start via XML socket server – Initiate on Input #1 ... #2: manual start via switching input
	Remote host	IP address or URL of the peer to which the tunnel will be created.
	Remote port	Port of the peer to which the tunnel will be created (default: 1194)

VPN, OpenVPN, Connections, Tunnel, Edit

Protocol	Choose whether UDP or TCP will be used for transport.
LZO compression	<p>Choose whether data transmission for the OpenVPN connection will be compressed.</p> <ul style="list-style-type: none"> - Disabled: no OpenVPN compression - Adaptive: adaptive OpenVPN compression - Yes: OpenVPN compression
Allow remote float	Activate this option in order to accept authenticated packets from each IP address for the OpenVPN connection. This option is recommended when dynamic IP addresses are used for communication.
Redirect default gateway	Activate this option in order to redirect all network communication to external networks, e.g., requests via the Internet, via this tunnel. The OpenVPN tunnel is used as the default gateway of the local network.
Local port	Local port from which the tunnel is created (default: 1194)
Authentication	<p>X.509 certificate - authentication method: each VPN device has a private secret key in the form of an X.509 certificate. The certificate contains additional information about the certificate's owner and the certification authority (CA).</p> <p>Pre-shared secret key: each VPN device knows one shared private key. Load this shared key as a "Static key" (see Page 69).</p>
Local certificate	Certificate used by the router to authenticate itself to the VPN peer
TLS authentication key	TLS key used to encrypt communication
Check remote certificate type	Activate this option to check the OpenVPN connection certificates.
Connection NAT	<ul style="list-style-type: none"> - None: no NAT within the VPN tunnel (default) - Local 1:1 NAT: virtual addresses are used for communication via a VPN tunnel. The virtual addresses are linked to the real IP addresses for the set network that has been connected. The subnet mask remains unchanged.
Address local network¹	Virtual IP address/subnet mask of the local network. This virtual IP address enables the IP addresses for the remote network to be accessed through the VPN tunnel. You must enter the same settings as the remote network on the remote VPN router.

VPN, OpenVPN, Connections, Tunnel, Edit

NAT to local network¹	Enter the real IP address area for the local network here. Using this address area, the local network can be accessed from the remote network via 1:1 NAT. You can use this function, for example, to access two machines with the same IP address via a VPN tunnel.
Encryption	Choose the encryption algorithm for the OpenVPN connection.
Keep alive	Duration in seconds after which Keep Alive requests will be transmitted. These requests test whether the peer is still available. Default: 30 seconds
Restart	Duration in seconds after which the connection to the peer should be restarted if there has been no response to the Keep Alive requests. Default: 120 seconds

¹ Only if "Local 1:1 NAT" is activated.

Advanced, Edit

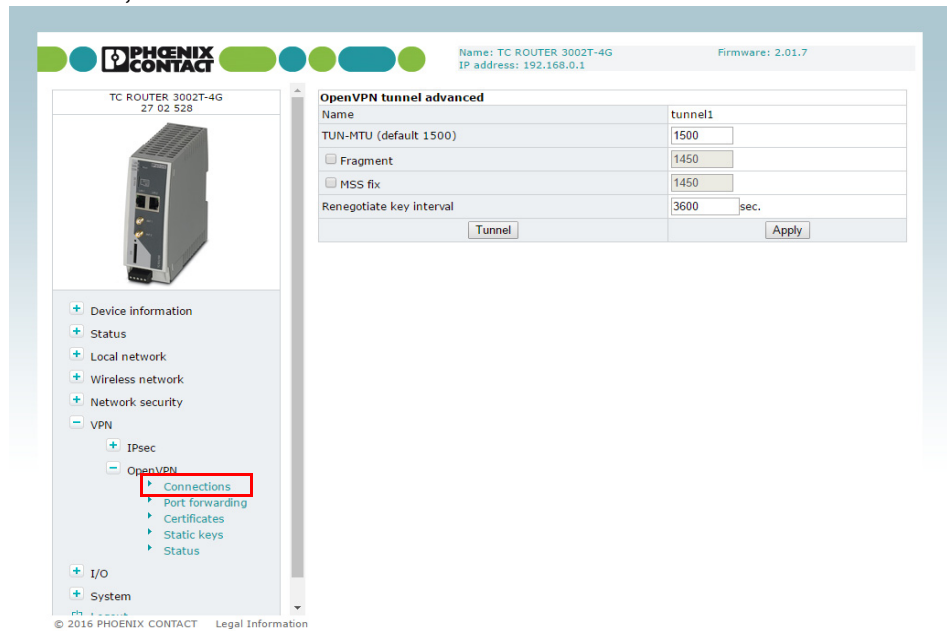


Figure 3-34 VPN, OpenVPN, Connections, Advanced, Edit

VPN, OpenVPN, Connections, Advanced, Edit

OpenVPN tunnel advanced	Parameter	Description
	Name	Name of the VPN connection entered under “OpenVPN connections”
	TUN-MTU	Maximum IP packet size that may be used for the OpenVPN connection. Default: 1500 MTU = Maximum Transfer Unit
	Fragment	Maximum size for unencrypted UDP packets that are sent through the tunnel. Larger packets are sent in fragments. Default: 1450 “Fragment” is deactivated if the box is unchecked (default).
	MSS fix	Maximum size for TCP packets that are sent via a UDP tunnel. The maximum packet size in bytes is used for the TCP connection through the OpenVPN tunnel. “MSS fix” is deactivated if the box is unchecked (default). When “Fragment” and “MSS fix” are activated, the value for MSS fix is specified automatically. The value cannot be modified manually.
	Renegotiate key interval	Lifetime in seconds of the agreed keys. Default: 3600 seconds (one hour) The keys of the OpenVPN connection are renewed at defined intervals in order to increase the difficulty of an attack on the OpenVPN connection.

3.8.5 OpenVPN certificates (certificate upload)

A certificate that has been loaded on the router is used to authenticate the router at the peer. The certificate acts as an ID card for the router, which it shows to the relevant peer.

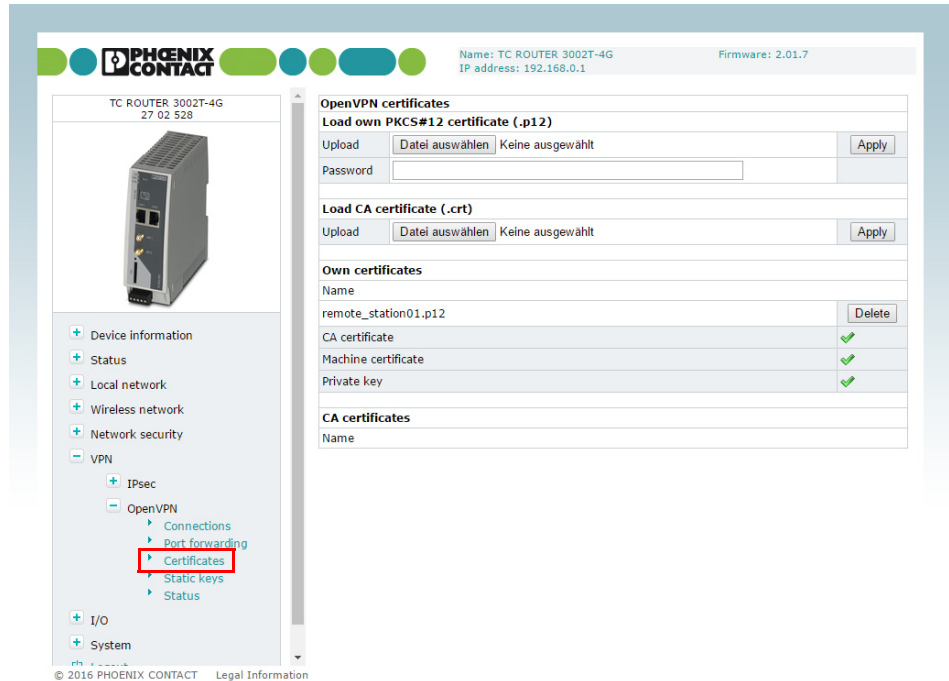


Figure 3-35 VPN, OpenVPN, Certificates

VPN, OpenVPN, Certificates		
OpenVPN certificates		
Load own PKCS#12 certificate (.p12)	Upload	Certificate that you have received from your provider. The file must be in PKCS#12 format. Click on the “Browse” button to select the certificate to be imported.
	Password	Under “ VPN, OpenVPN, Connections, Tunnel, Edit “, Local Certificate , one of these certificates can be assigned to each VPN connection. Password used to protect the private key of the PKCS#12 file. The password is assigned when the key is exported.
Load CA certificate (.crt)	Upload	The CA certificate must be in crt format. Click on the “Browse” button to select the certificate to be imported. Under “ VPN, OpenVPN, Connections, Tunnel, Edit “, Local Certificate , one of these certificates can be assigned to each VPN connection.

VPN, OpenVPN, Certificates [...]		
Own certificates	Name	Overview of the imported PKCS#12 certificates Click on "Delete" to delete a certificate. The green ticks indicate whether the PKCS#12 file contains a CA certificate, a machine certificate or a private key.
CA certificates	Name	Overview of the imported CA certificates Click on "Delete" to delete a certificate.

3.8.6 Static keys (pre-shared secret key authentication)

Static key authentication is based on a symmetrical encryption method where the communication partners first exchange a shared key via a secure channel. All tunnel network traffic is then encrypted using this key. Network traffic can then be decoded by anyone who has this key.

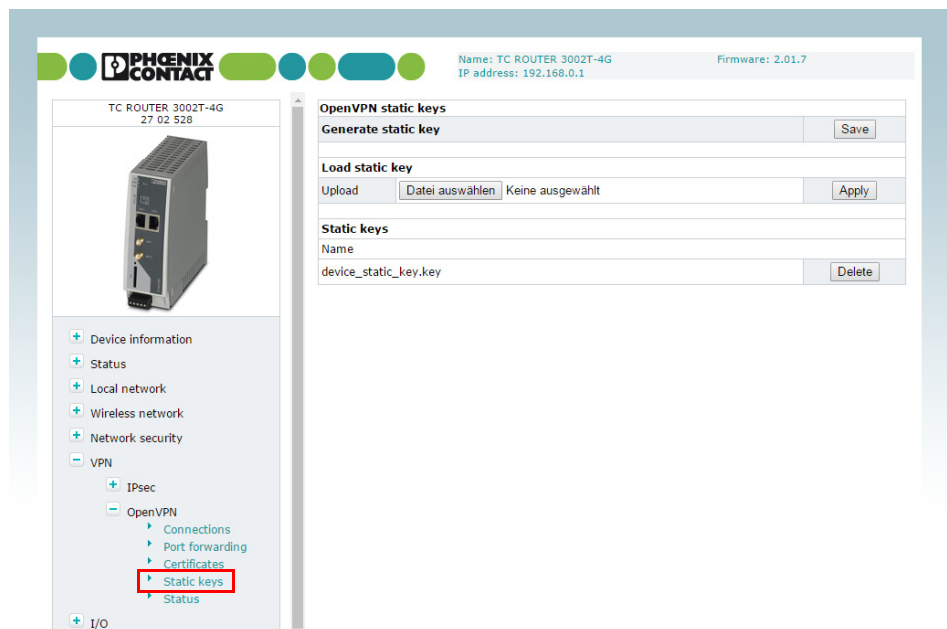


Figure 3-36 VPN, OpenVPN, Static keys

VPN, OpenVPN, Static keys		
Open VPN static keys	Generate static key	Generates a key for the OpenVPN connection. You can store this key locally on the computer.
	Load static key	Loads the key on the mobile router.
	Static keys	Keys stored in the router

3.8.7 OpenVPN status (status of the VPN connection)

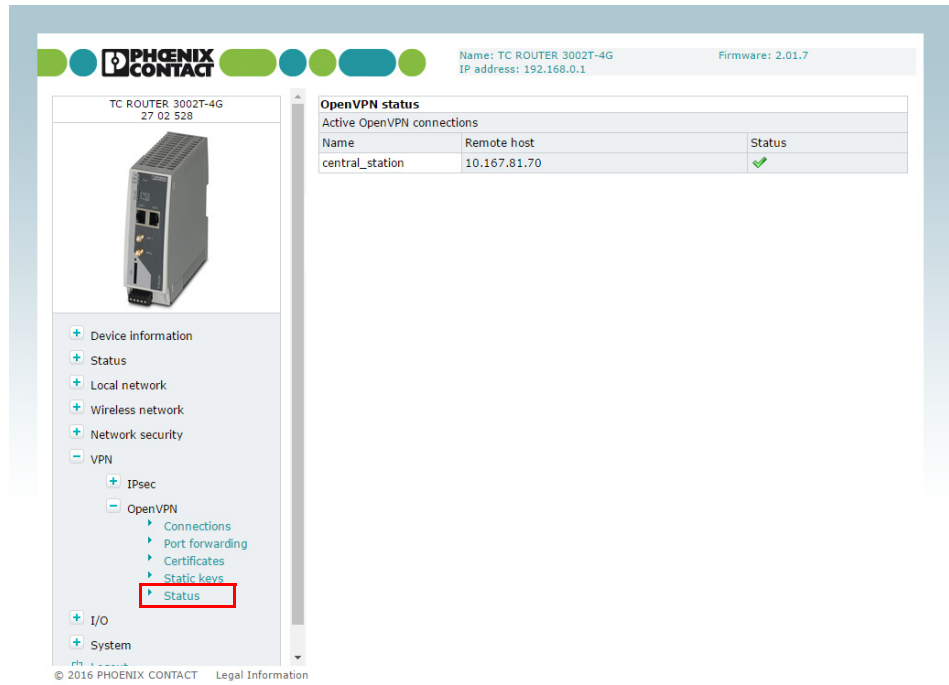


Figure 3-37 VPN, OpenVPN, Status

VPN, OpenVPN, Status

Open VPN status

Active OpenVPN connections

Status of the active VPN connection

3.9 I/O

The router has two integrated digital switching inputs and one integrated digital switching output for alarms and switching.

3.9.1 Inputs (input configuration)

The inputs can be used to send alarms by SMS or e-mail. Each input can be configured individually. Please note that inputs that are used to start a VPN connection, for example, cannot also be used to send alarms.

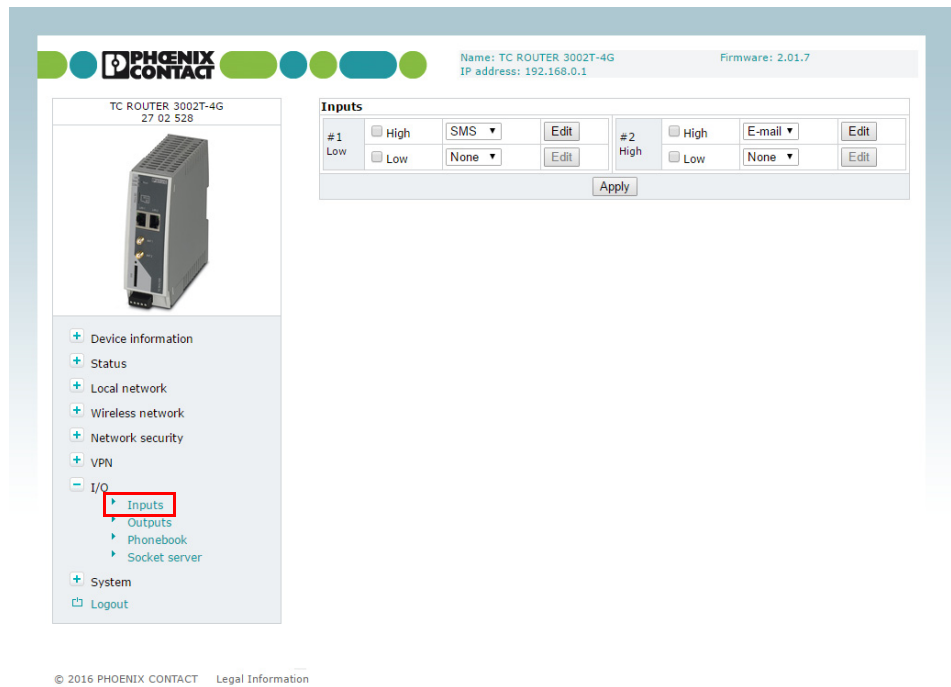


Figure 3-38 I/O, Inputs

I/O, Inputs		
Inputs	High	<p>If a message should be sent at a “High” input level, activate “High”. Click on “Apply” for acceptance. Choose whether you want to be alerted by SMS or e-mail.</p> <p>Click on “Edit”.</p> <p>Enter the following for an SMS message:</p> <ul style="list-style-type: none"> - Recipient from the phonebook - Message text <p>Enter the following for an e-mail alert:</p> <ul style="list-style-type: none"> - To: recipient - Cc: recipient of a copy - Subject - Message text
	Low	<p>If a message should be sent at a “Low” input level, activate “Low”. Click on “Apply” and choose whether you want to be alerted by SMS or e-mail.</p> <p>Click on “Edit”.</p> <p>Enter the following for an SMS message:</p> <ul style="list-style-type: none"> - Recipient from the phonebook - Message text <p>Enter the following for an e-mail alert:</p> <ul style="list-style-type: none"> - To: recipient - Cc: recipient of a copy - Subject - Message text

3.9.2 Outputs (output configuration)

The outputs can be switched remotely or, alternatively, provide information about the status of the router. Each output can be configured individually.

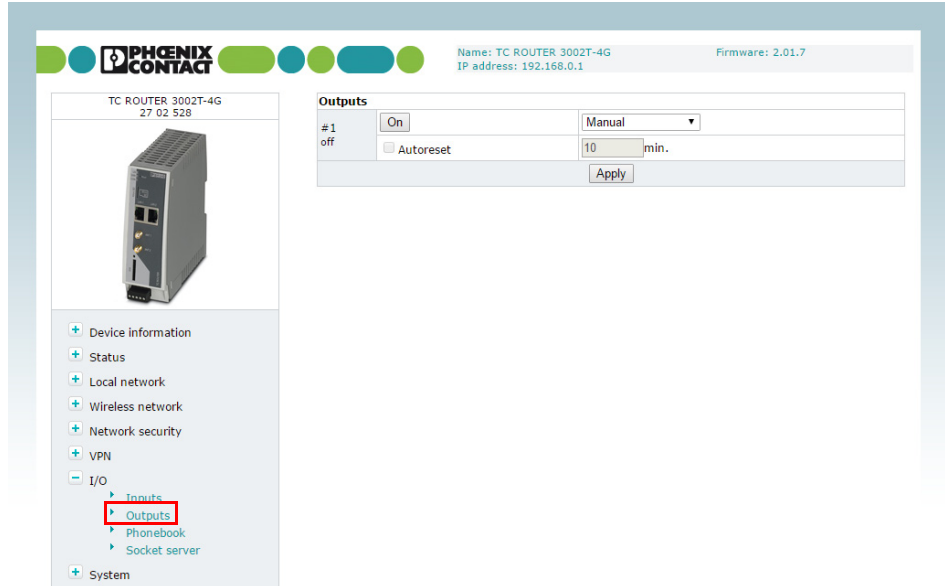


Figure 3-39 I/O, Outputs

I/O, Outputs

Outputs

- **Manual:** manual switching of the output via the web-based Management
- **Remote controlled:** remote switching via SMS or socket server. Automatic reset of the output can be used as an option. To do this, activate “Autoreset” and specify the duration in minutes.
- **Radio network:** the output is switched if the router is logged in to a mobile network.
- **Packet service:** the output is switched if the router has established a packet data connection and received a valid IP address from the provider.
- **VPN service:** the output is switched if the router has established a VPN connection.
- **Incoming call:** the output is switched if the router is called by a phone number listed in the phonebook.
- **Connection lost:** the output is switched if the router connection check does **not** reach the configured reference address.


Autoreset

Duration in minutes until the output is reset automatically

3.9.3 Phonebook

Enter phone numbers here:

- For the recipients of alarm SMS messages
- For those authorized to switch the outputs

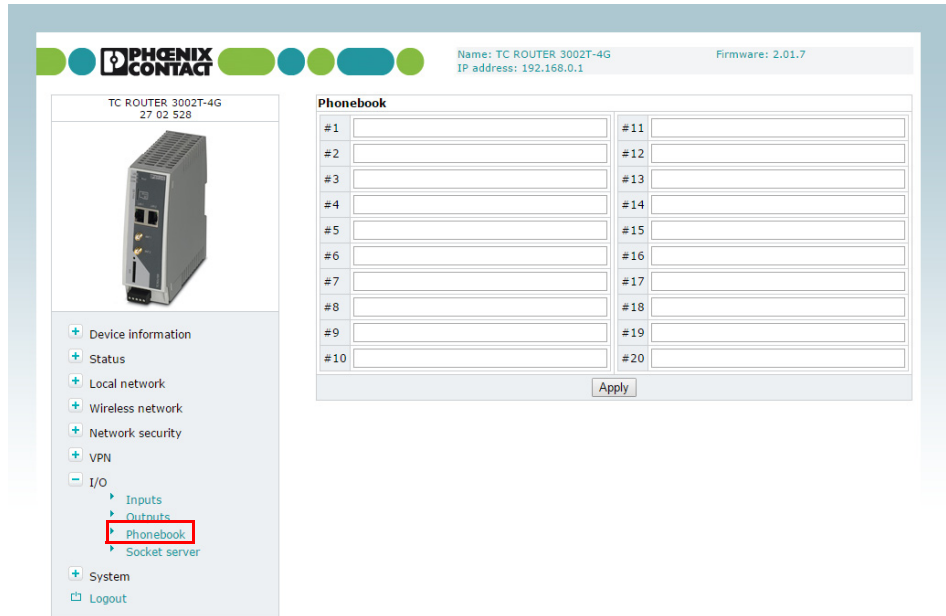

© 2016 PHOENIX CONTACT Legal Information

Figure 3-40 I/O, Phonebook

3.9.4 Socket server

The router has a socket server, which can accept operating commands via the Ethernet interface. These commands must be sent in XML format.

A client from the local network initiates basic communication. To do this, a TCP connection is established to the set server port. The socket server responds to the client's requests. It then terminates the TCP connection. A TCP connection is established again for another request. Only one request is permitted per connection.

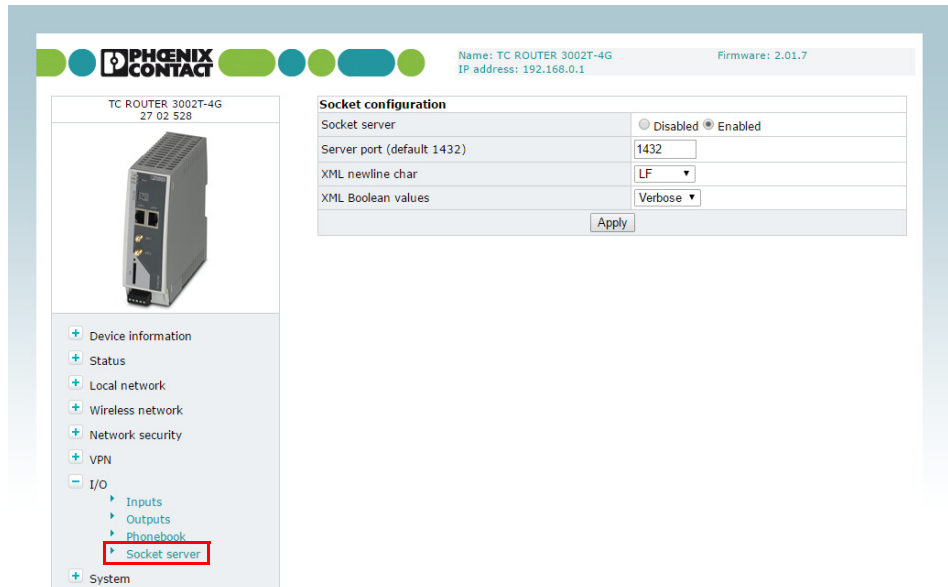


Figure 3-41 I/O, Socket server

I/O, Socket server

Socket configuration

Socket server

- **Disabled:** operation via Ethernet interface not possible
- **Enabled:** operation via Ethernet interface possible

Server port (default 1432)

Socket server port (default: 1432)
Please note that port 80 cannot be used for the socket server.

To use the router, a TCP socket connection must be established to the configured port. The data format must conform to XML Version 1.0.

XML newline char

Character which creates a line break in the XML file

- **LF:** line feed, line break after 0x0A (hex)
- **CR:** carriage return, line break after 0x0D (hex)
- **CR+LF:** line break after carriage return, followed by a line feed

I/O, Socket server

XML Boolean values Format in which requests are answered via XML

- **Verbose:** response in words, e.g., on/off
- **Numeric:** short numerical response, e.g., 1/0

Every XML file generally begins with the header `<?xml version="1.0"?>` or `<?xml version="1.0" encoding="UTF-8"?>` followed by the basic entry.

Basic entries

<code><io></code>	<code></io></code>	I/O system
<code><info></code>	<code></info></code>	Request general device information
<code><cmgs></code>	<code></cmgs></code>	Send SMS messages
<code><cmgr></code>	<code></cmgr></code>	Receive SMS messages
<code><cmga></code>	<code></cmga></code>	Confirm receipt of SMS
<code><email></code>	<code></email></code>	Send e-mails

I/O system

Using the XML socket server, you can:

- query outputs and inputs
- switch outputs

The outputs used must have been previously configured to "Remote controlled". Depending on the setting of "XML Boolean values", on/off or 0/1 can be output as "value".



Make sure that the XML data does not contain any line breaks.

Query outputs and inputs

```
<?xml version="1.0"?>
<io>
  <output no="1"/>      Request state of output 1
  <input no="1"/>      Request state of input 1
</io>
```

Response from the router (shown with line break):

```
<?xml version="1.0" encoding="UTF-8"?>
<result>
  <io>
    <output no="1" value="off"/>      State output 1
    <input no="1" value="off"/>      State input 1
  </io>
</result>
```


Switch outputs

```
<?xml version="1.0"?>
  <io>
    <output no="1" value="on"/>      Switch output 1
  </io>
```

Response from the router (shown with line break):

```
<?xml version="1.0" encoding="UTF-8"?>
  <result>
    <io>
      <output no="1" value="on"/>      Output 1 switched
    </io>
  </result>
```

Switch on data connection

First, set the following in the web-based Management:

- Switch on the data connection under "Packet data setup" (enabled see [Page 36](#)).
 - Under "Event", select the option "Initiate on XML".
- ⇒ You can now switch on the data connection of the router through XML.

```
<?xml version="1.0"?>
  <io>
    <gprs value="on"/>      Switch on data connection
  </io>
```

Response from the router (shown with line break):

```
<?xml version="1.0" encoding="UTF-8"?>
  <result>
    <io>
      <gprs value="on"/>      Connection on
    </io>
  </result>
```

Request general device information

You can read status information from the device:

```
<?xml version="1.0"?>
  <info>
    <device/>           Request device data
    <radio/>           Data for the wireless connection (mobile devices only)
    <inet/>           Request data for the Internet connection
    <io/>             Logical states at the connections
  </info>
```

Response from the router (shown with line break):

```
<?xml version="1.0" encoding="UTF-8"?>
<result>
  <info>
    <device>
      <serialno>13120004</serialno>
      <hardware>A</hardware>
      <firmware>1.04.9</firmware>
      <wbm>1.40.8</wbm>
      <imei>359628023404123</imei>
    </device>
    <radio>
      <provider>Vodafone.de</provider>
      <rssi>15</rssi>
      <creg>1</creg>
      <lac>0579</lac>
      <ci>26330CD</ci>
      <packet>7</packet>
      <simstatus>5</simstatus>
      <simselect>1</simselect>
    </radio>
    <inet>
      <ip>1.2.3.4</ip>
      <rx_bytes>24255</rx_bytes>
      <tx_bytes>1753</tx_bytes>
      <mtu>1500</mtu>
    </inet>
    <io>
      <gsm>1</gsm>
      <inet>1</inet>
      <vpn>0</vpn>
    </io>
  </info>
</result>
```

To read just one single value, you can use the "Select" attribute to select it. Here is a request for the RSSI value as an example:

```
<?xml version="1.0" encoding="UTF-8"?>
  <info>
    <radio select="rssi" />
  </info>
```

Send SMS messages

Send XML data with the following structure to the device IP address via Ethernet:

```
<?xml version="1.0"?>
  <cmgs destaddr="0172 123 4567">SMS message</cmgs>
```



For this purpose, make sure that the XML data does not contain any line breaks. The text must be UTF-8-coded.

ASCII characters 34_{dec}, 38_{dec}, 39_{dec}, 60_{dec}, and 62_{dec} must be entered as " ' & < and >.

If the XML data was received correctly, the device responds with the transmission status:

```
<?xml version="1.0"?>
  <result>
    <cmgs length="17">SMS transmitted</cmgs>
  </result>
```

Receive SMS messages

To receive SMS messages via Ethernet, enter the following:

```
<?xml version="1.0"?>
  <cmgr/>
```

Response from the router (shown with line break):

```
<?xml version="1.0" encoding="UTF-8"?>
  <result>
    <cmgr error="1">empty</cmgr>
  </result>
```

The response means that an SMS message has not been received yet. The following error codes are possible:

- 1 Empty = no SMS message received
- 2 Busy = try again later
- 3 System error = communication problem with the radio engine

If the router has received an SMS message and if it is available, then the message is output:

```
<?xml version="1.0" encoding="UTF-8"?>
  <result>
    <cmgr origaddr="+49123456789"
timestamp="14/06/30,10:01:05+08">SMS message</cmgr>
  </result>
```

Confirm receipt of SMS

Successful receipt of the SMS via Ethernet must be confirmed with the following command:

```
<?xml version="1.0" encoding="UTF-8"?>
  <cmga/>
```

Response from the router (shown with line break):

```
<?xml version="1.0" encoding="UTF-8"?>
  <result>
    <cmga>ok</cmga>
  </result>
```

This SMS message is then marked as read on the router.

Send e-mails

Send XML data with the following structure to the device IP address via Ethernet:

```
<?xml version="1.0"?>
  <email to="x.yz@diesunddas.de" cc="info@andere.de">
    <subject>Test Mail</subject>
    <body>
      This is an e-mail text with several lines.
      Best regards,
      your router
    </body>
  </email>
```

Response from the router (shown with line break):

```
<?xml version="1.0" encoding="UTF-8"?>
  <result>
    <email>done</email>
  </result>
```

Response from the router in the event of an error:

```
<?xml version="1.0" encoding="UTF-8"?>
  <result>
    <email error="3">transmission failed</email>
  </result>
```

Start and stop VPN connections

To start and stop IPsec and OpenVPN connections, send XML data with the following structure to the device IP address via Ethernet:

```
<?xml version="1.0"?>
  <vpn>
    <ipsec no="2" value="on">      Start IPsec connection 2
    <openvpn no="1" value="on"/>  Start OpenVPN connection
  </vpn/>
```

Response from the router (shown with line break):

```
<?xml version="1.0">
  <result>
    <vpn>
      <ipsec no="2" value="on"/>
      <openvpn no="1" value="on"/>
    </vpn/>
```

3.10 System

3.10.1 System configuration

Set the basic options for web-based management and router logging here. The router can store log files on an external log server via UDP.

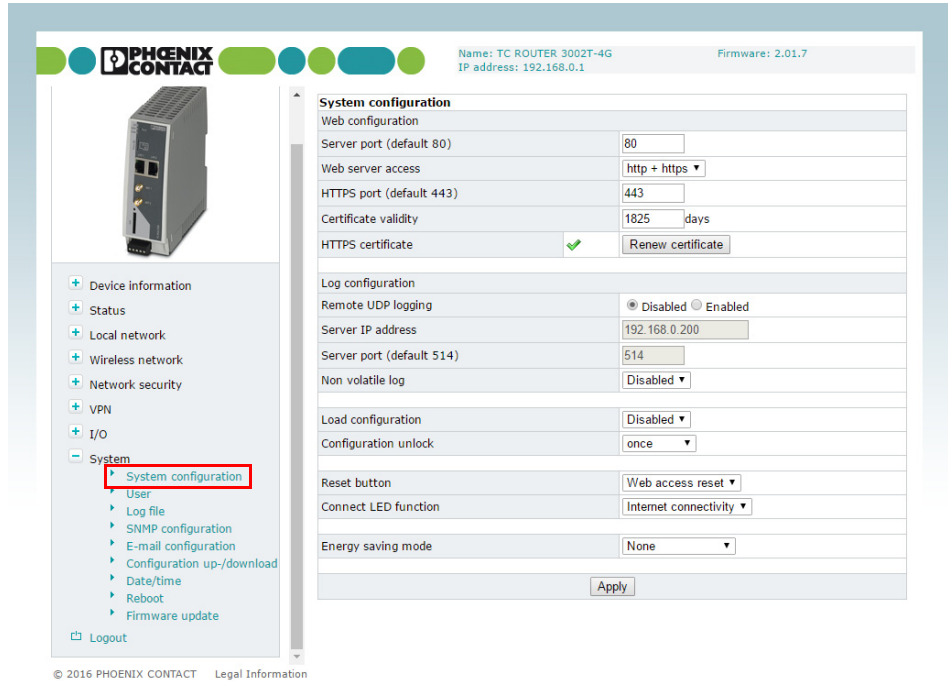


Figure 3-42 System, System configuration

System, system configuration	
System configuration	
Web configuration	<p>Server port The web-based management of the router can be accessed via this port using HTTP (default: 80).</p> <p>Web server access Choose how web-based management can be accessed:</p> <ul style="list-style-type: none"> – Using the HTTP and HTTPS protocol (default) – Using HTTP only – Using HTTPS only <p>For security reasons, external access via the mobile network is only possible using the HTTPS protocol.</p> <p>HTTPS port The web-based management of the router can be accessed via this port using HTTPS (default: 443).</p> <p>Certificate validity Specify the validity period of the certificate for HTTPS access to web-based management here (default: 1825 days).</p>

System, system configuration		
Log configuration	HTTPS certificate	To create a new certificate for HTTPS access to web-based management, click on “Renew certificate”. This certificate is valid for the period set under “Certificate validity”.
	Remote UDP logging	<ul style="list-style-type: none"> – Disabled: no external logging – Enabled: logging on external server activated.
	Server IP address	IP address of the log server
	Server port	Log server port (default: 514)
	Non volatile log	<ul style="list-style-type: none"> – Disabled: temporary logging – Enabled: permanent logging on microSD card
	Load configuration	<ul style="list-style-type: none"> – Disabled: configuration is not loaded automatically when the router is started – SD card: configuration is loaded automatically when the router is started. The configuration is loaded from a microSD card.
	Configuration unlock	<ul style="list-style-type: none"> – Once: a configuration is loaded once next time the router is started. The configuration is loaded from a microSD card. – Always: a configuration is loaded every time the router is started. The configuration is loaded from a microSD card. – By input 1: a configuration is loaded from a microSD card, controlled via switching input 1 – By input 2: a configuration is loaded from a microSD card, controlled via switching input 2
	Reset button	<ul style="list-style-type: none"> – Web access reset: the IP address and access data for the administrator are reset to the default settings via the reset button. The configuration is retained. – Factory reset: the device is completely reset to the delivery state via the reset button. The configuration will be deleted.
	Connect LED function	<ul style="list-style-type: none"> – Internet connectivity: packet data connection via mobile network active – VPN connectivity: VPN connection active (IPsec or OpenVPN)

System, system configuration

Energy saving mode

- **None:** no energy-saving mode
- **Initiate on input 1:** energy-saving mode, activated via switching input 1.
- **Initiate on input 2:** energy-saving mode, activated via switching input 2.

Radio engine: energy-saving mode deactivates the radio engine. If energy-saving mode is active, mobile communication is no longer possible.

Ethernet LAN1/2: energy-saving mode deactivates Ethernet interface LAN 1/2. If energy-saving mode is active, communication is no longer possible via this interface.

3.10.2 User (password change)

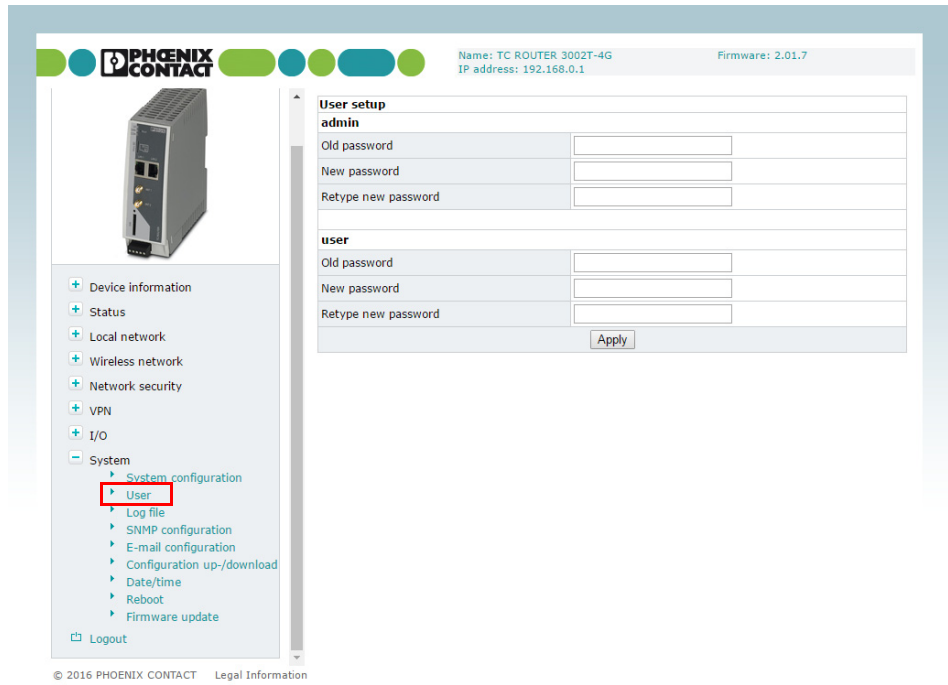


Figure 3-43 System, User

System, user		
User setup	Admin	Unrestricted access to all areas – Old password – New password – Retype new password
	User	Restricted access (read-only) Default: public – Old password – New password – Retype new password

3.10.3 Log file

The router log file can be used to diagnose various events and operating states. The log file is a form of circulating storage where the oldest entries are overwritten first.

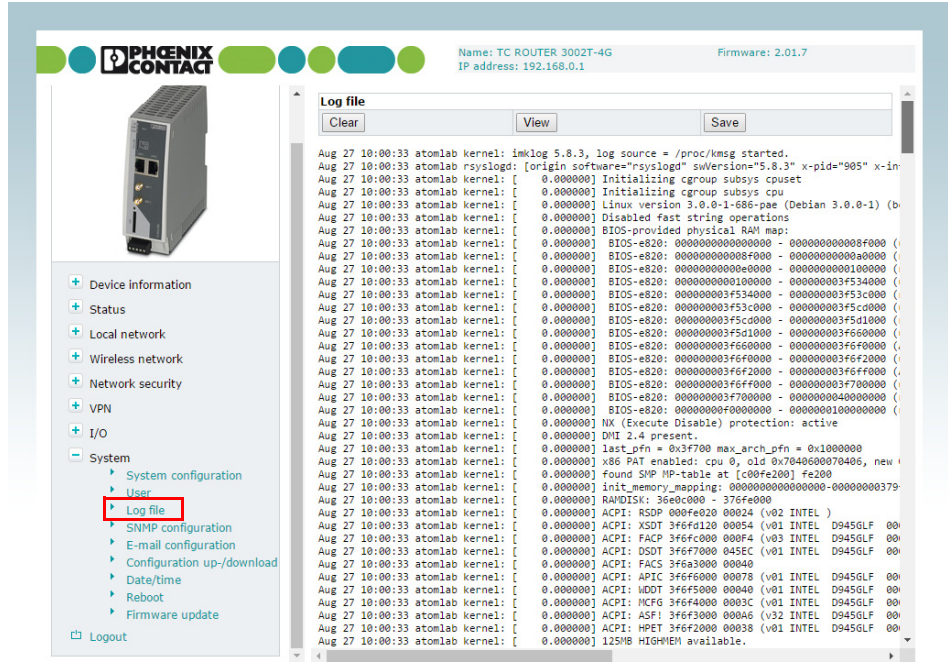


Figure 3-44 System, Log file

System, log file		
Log file	Clear	Delete all entries in the log file
	View	View log file in the browser window
	Save	Save log file as text file on local computer

3.10.4 SNMP configuration (router monitoring)

The router supports the reading of information via SNMP (Simple Network Management Protocol). SNMP is a network protocol that can be used to monitor and control network elements from a central station. The protocol controls communication between the monitored devices and the central station.

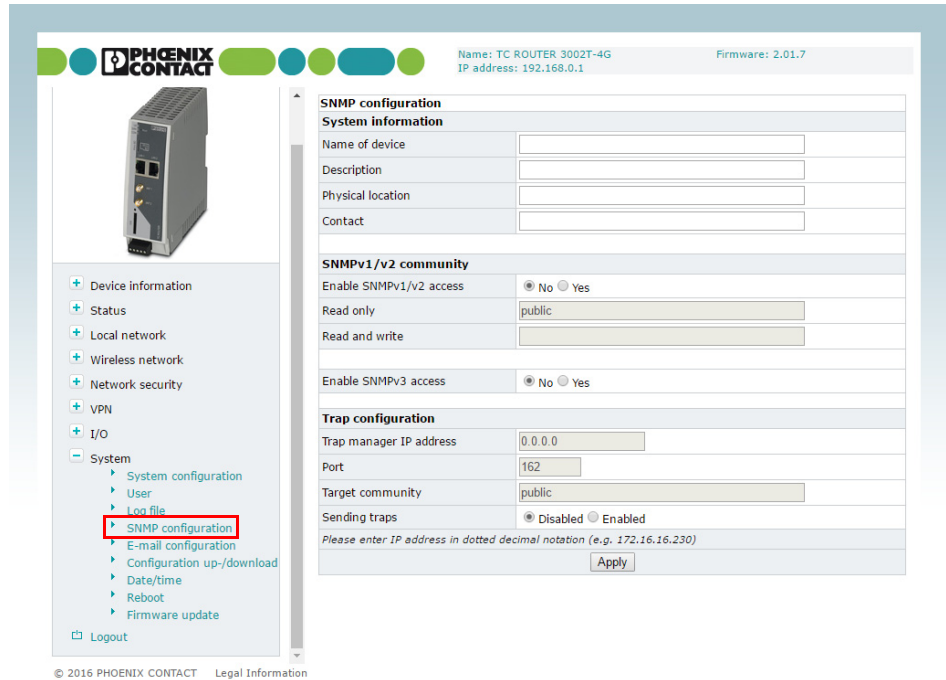


Figure 3-45 Local network, SNMP configuration

Local network, SNMP configuration		
SNMP configuration		
System information		
Name of device	Name for management purposes, can be freely assigned	
Description	Description of the router	
Physical location	Designation for the installation location, can be freely assigned	
Contact	Contact person responsible for the router	
SNMPv1/v2 community		
Enable SNMPv1/2 access	<ul style="list-style-type: none"> – Yes: SNMP Version 1 and Version 2 are used. – No: the service is deactivated (default). 	
Read only	Password for read access via SNMP	
Read and write	Password for read and write access via SNMP	
Enable SNMPv3 access	<ul style="list-style-type: none"> – Yes: SNMP Version 3 is used. – No: the service is deactivated (default). 	

Local network, SNMP configuration [...]	
Trap configuration	In certain cases, the router can send SNMP traps. The traps correspond to SNMPv1. They are part of the standard MIB.
Trap manager IP address	IP address to which the trap will be sent
Port	Port to which the trap will be sent
Target community	Name of the SNMP community to which the trap is assigned.
Sending traps	<ul style="list-style-type: none"> - Disabled: it is not possible to send traps to the IP address of the trap manager. - Enabled: the sending of traps to the IP address of the trap manager is activated.

3.10.5 E-mail configuration

To send alarms by e-mail, the e-mail server via which these alerts are sent can be configured here. The e-mail server must support the SMTP protocol.

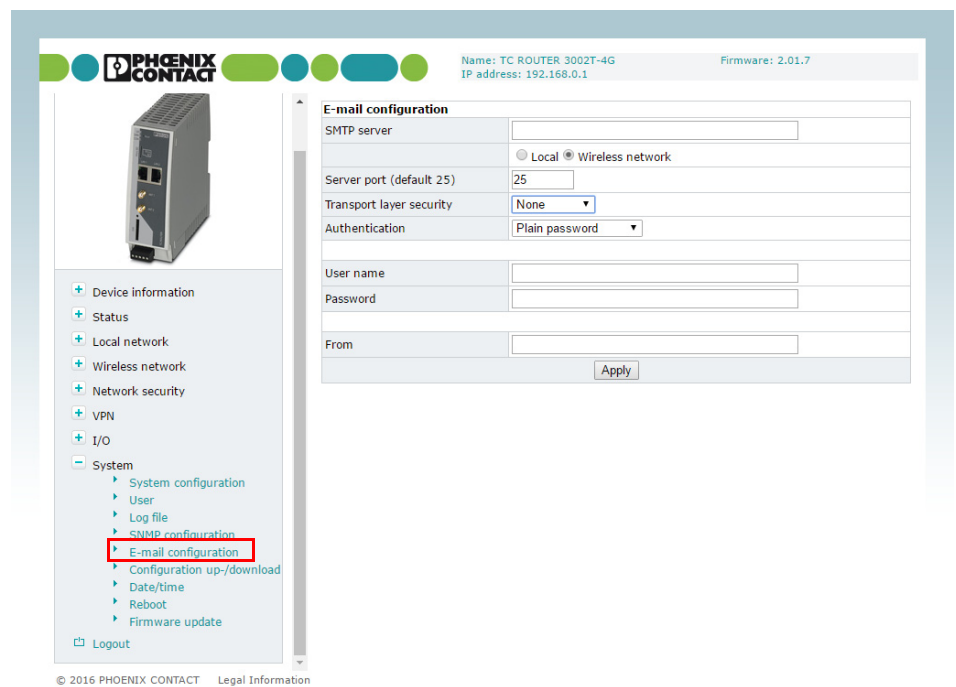


Figure 3-46 System, E-mail configuration

System, E-mail configuration

E-mail configuration	SMTP server	Host name or IP address of the e-mail server <ul style="list-style-type: none"> - Local: the IP packets for the SMTP server are sent from the local network interface with the IP address of the local interface (LAN). - Wireless network: the IP packets for the SMTP server are sent from the mobile network interface with the IP address assigned by the provider.
	Server port	E-mail server port (default: 25)
	Transport layer security	<ul style="list-style-type: none"> - None: unencrypted connection to e-mail server - STARTTLS: STARTTLS-encrypted connection to the e-mail server - SSL/TLS: SSL/TLS-encrypted connection to the e-mail server
	Authentication	<ul style="list-style-type: none"> - No authentication: no authentication required. - Plain password: authentication with user name and password. User name and password are transmitted in unencrypted form. - Encrypted password: authentication with user name and password. User name and password are transmitted in encrypted form.
	User name	User name for login to the e-mail server
	Password	Corresponding password for login to the e-mail server
	From	E-mail address of the sender

3.10.6 Configuration up-/download

You can save the active configuration to a file and load prepared configurations via WBM.

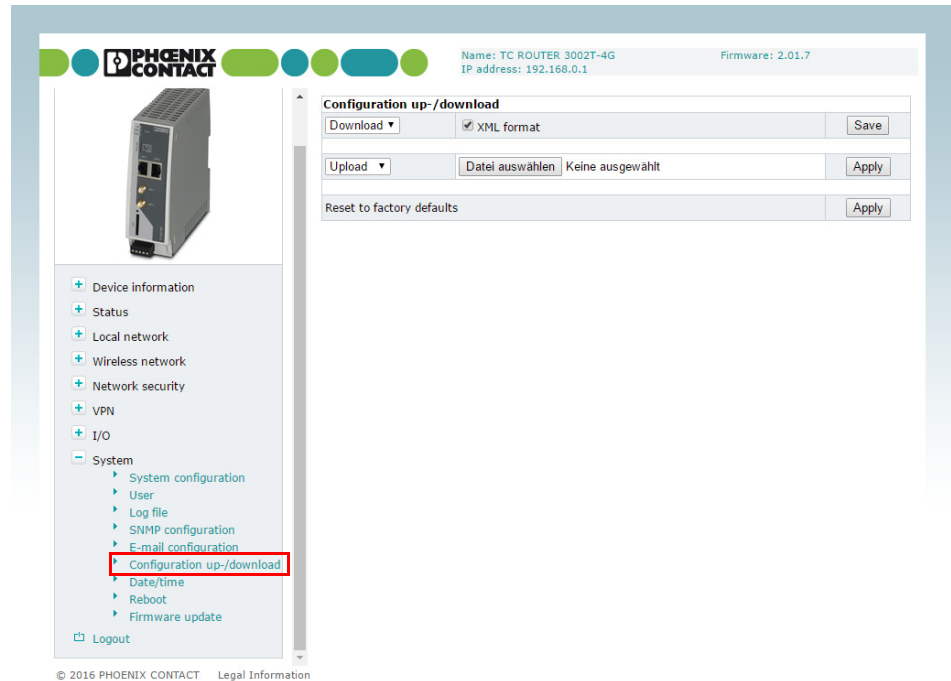


Figure 3-47 System, Configuration up-/download

System, Configuration up-/download		
Configuration up-/download	Download	<p>To save the active configuration to a microSD card, select the “SD card” option under “Download”.</p> <p>Click on “Save” to save the active configuration locally to a file.</p> <p>Enable the “XML format” option to save the router configuration as an editable XML structure.</p>
	Upload	<p>To load a configuration from the microSD card, select the “SD card” option under “Upload”.</p> <p>Import a saved configuration. Click on the “Browse” button to select the configuration that is to be imported. Click on “Apply” to load the selected configuration (cfg format or XML format).</p>
	Reset to factory defaults	<p>Click on “Apply” to reset the router to the default state upon delivery. This will reset all settings, including IP settings. Imported certificates remain unaltered.</p>

3.10.7 Date/time

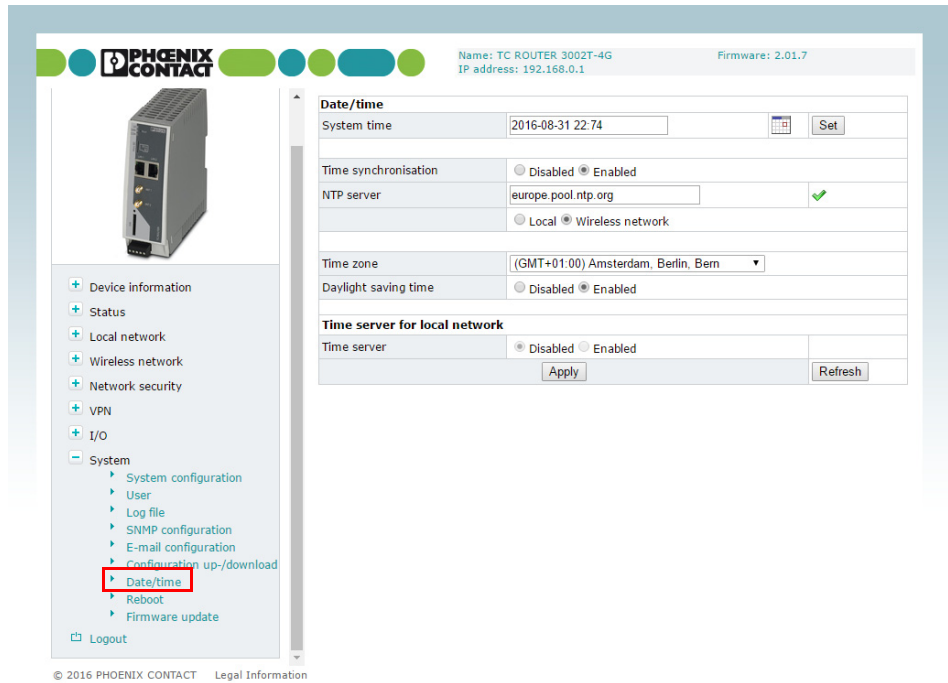


Figure 3-48 System, Date/time

System, date/time		
Date/time	System time	You can set the time manually if no NTP server (time server) has been set up or the NTP server cannot be reached.
	Time synchronisation	<ul style="list-style-type: none"> – Enabled: the router synchronizes the time and date with a time server. Initial time synchronization can take up to 15 minutes. During this time, the router continuously compares the time data of the external time server and that of its own clock. The time is therefore adjusted as accurately as possible. Only then can the router act as the NTP server for the devices connected to the LAN interface. The router then provides the system time.

System, date/time [...]		
	NTP server	<p>NTP = Network Time Protocol</p> <p>The router can act as the NTP server for the devices connected to the LAN interface. In this case, the devices should be configured so that the local address of the router is specified as the NTP server address. For the router to act as the NTP server, it must obtain the current date and time from an NTP server (time server). In order to do this you must specify the address of a time server. In addition, NTP synchronization must be set to "Enabled".</p> <p>A green tick is displayed following successful time synchronization with the time server.</p> <ul style="list-style-type: none"> - Local: the specified NTP server can be accessed with the IP address of the local interface (LAN). Activate this option if the NTP server can be accessed in the local LAN or via a VPN tunnel. - Wireless network: activate this option if the NTP server is on the Internet (default).
	Time zone	Select the time zone.
	Daylight saving time	<ul style="list-style-type: none"> - Enabled: daylight savings is taken into account. - Disabled: daylight savings is not taken into account.
	Time server for local network	Time server for the local network

3.10.8 Reboot (router restart)

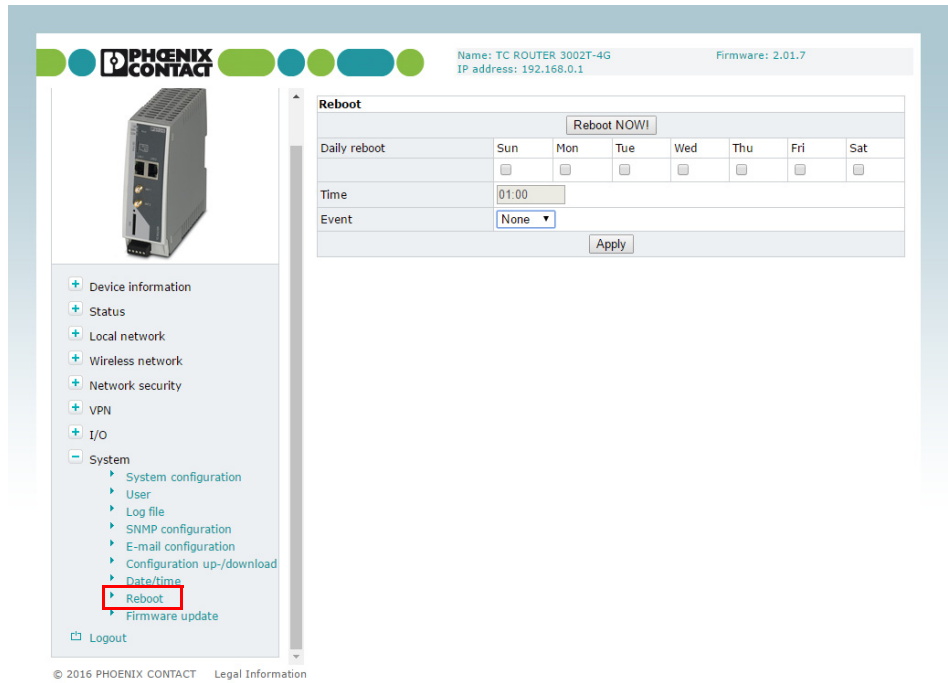


Figure 3-49 System, Reboot

System, reboot		
Reboot	Reboot NOW!	<p>Restarting the router</p> <p>Any active data transmissions will be aborted.</p> <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p>i Do not trigger a reboot while data transmission is active.</p> </div>
	Daily reboot	<p>Define the day of the week on which the router will be restarted at the specified time.</p> <p>Following a reboot, it is necessary to log in to the mobile network again. The provider resets the data link and calculates charges. Regular rebooting provides protection against the provider aborting and re-establishing the connection at an unforeseeable point in time.</p>
	Time	Time specified in Hours:Minutes
	Event	<p>Choose the digital input with the “High” signal which will be used to restart the router if required.</p> <p>Make sure that following a restart the signal is “Low” again. This ensures that the router starts up normally.</p>

3.10.9 Firmware update

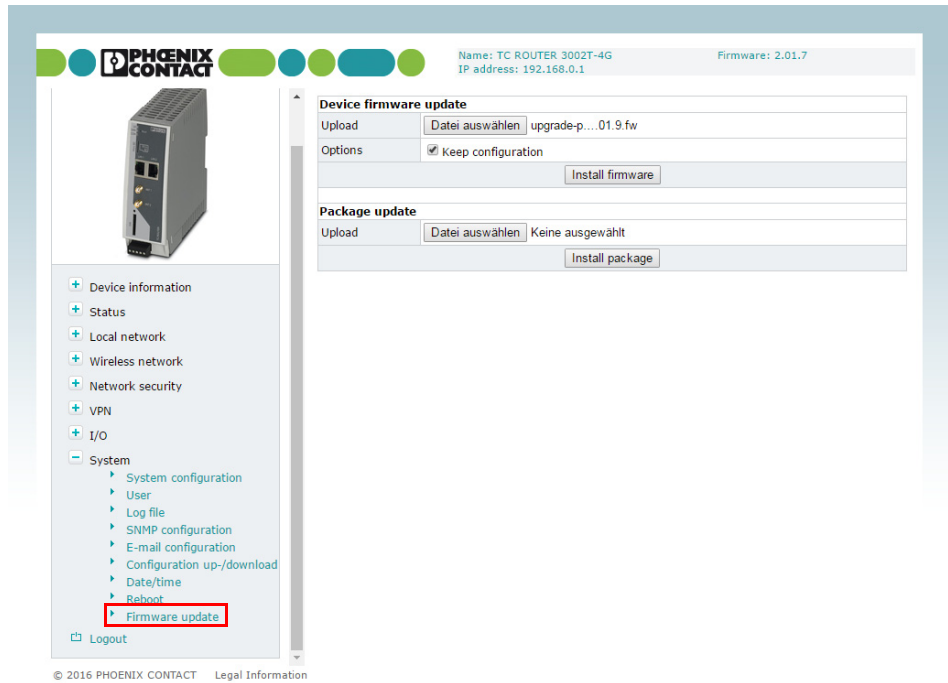


Figure 3-50 System, Firmware update

System, Firmware update

Device firmware update

Updates ensure that you can benefit from function extensions and product updates.

Updates can be downloaded at: phoenixcontact.net/products.

Install firmware update:

- Click on “Select file” and select the update file with the extension *.fw. To ensure that the active configuration is retained following the update, select the “Keep configuration” option.
- Click on “Install firmware”.
- The ERR LED and CON LED flash alternately during the update. Wait until the update is completed and the router restarts automatically.



Do **not** start the router manually.
Do **not** interrupt the power supply during the update process.

If necessary you can also just update individual router functions.

Package update

4 Creating X.509 certificates

Certificates are required for a secure VPN connection. Certificates can be acquired from certification bodies or you can create them using the appropriate software. In this example, X.509 certificates are created using Version 0.9.3 of the XCA program.



The XCA program can be downloaded at <http://xca.sourceforge.net>.

4.1 Installation

- Start the setup file. Follow the instructions in the setup program.

4.2 Creating a new database

- Start the XCA program.
- Create a new database via “File, New Database”.

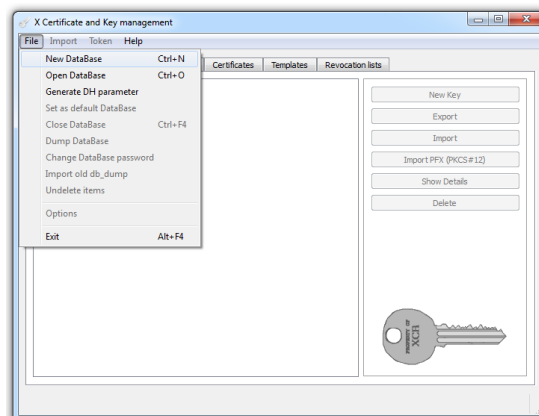


Figure 4-1 Creating a new database

- Assign a password to encrypt the database.

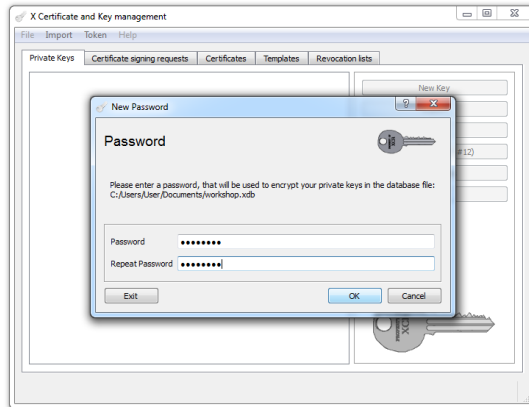


Figure 4-2 Assigning a password

4.3 Creating a CA certificate

First of all, create a Certification Authority (CA) certificate. This root certificate acts as an entity that certifies and authenticates the signing of all certificates that are derived from it and thus guarantees the authenticity of these certificates.

- Switch to the “Certificates” tab and create a new certificate.

In the program window shown, there is already a preset self-signed certificate with the signature algorithm SHA-1.

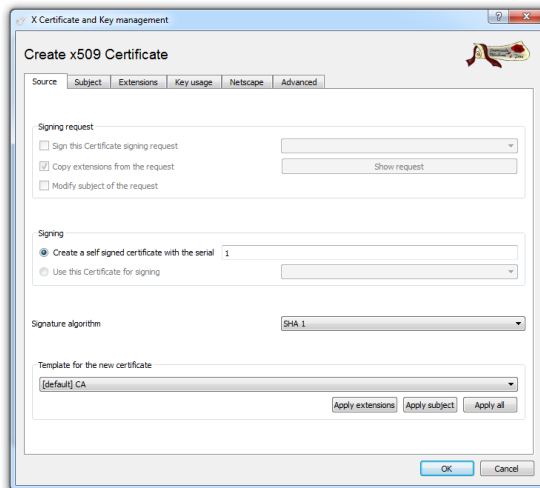


Figure 4-3 Creating a new CA certificate

- On the “Subject” tab, enter the information about the owner of the root certificate.

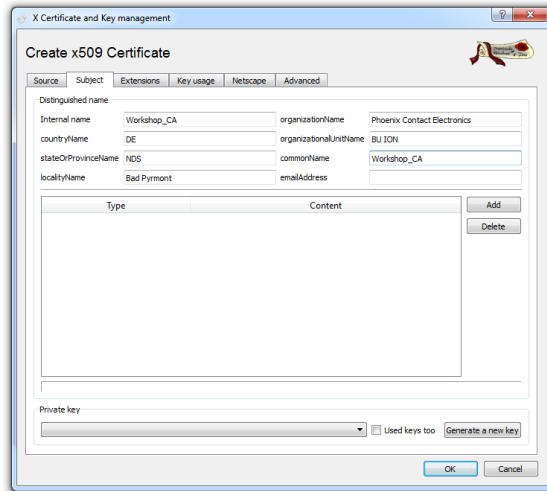


Figure 4-4 Entering information about the owner

- Create a key for this certificate. The default name, key type, and key size can be retained.

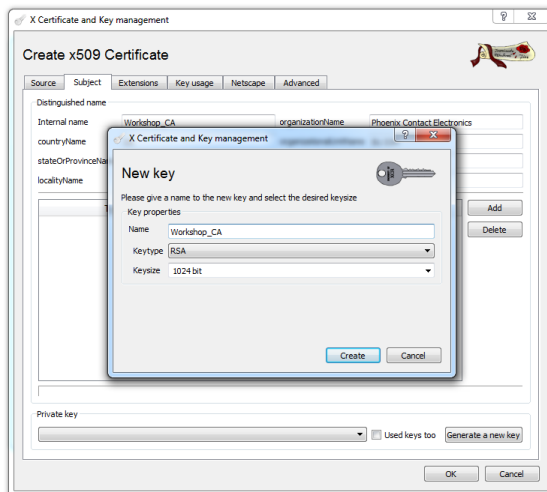


Figure 4-5 Creating a key

The period of validity of the certificate is specified on the “Extensions” tab. The root certificate must be valid for longer than the machine certificates that are to be created later. In this example, the validity is set to ten years.

- Set the certificate type to “Certification Authority”.
- Activate all the options as shown in Figure 4-6.

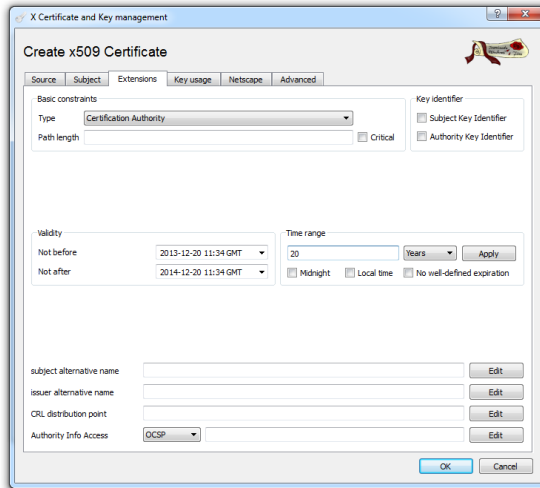


Figure 4-6 Setting the validity and type for the CA certificate

- Click OK.

The certificate is created. A new root certificate from which further machine certificates can be derived now appears in the overview.

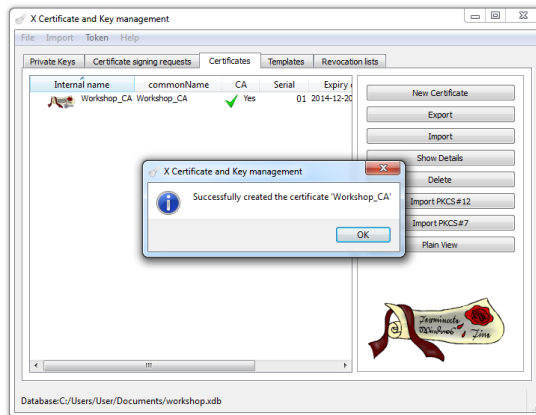


Figure 4-7 CA certificate created

4.4 Creating templates

By using templates, you can create machine certificates quickly and easily.

- Switch to the “Templates” tab and create a new template for a terminal certificate.
- When prompted about template values, select “Nothing”.

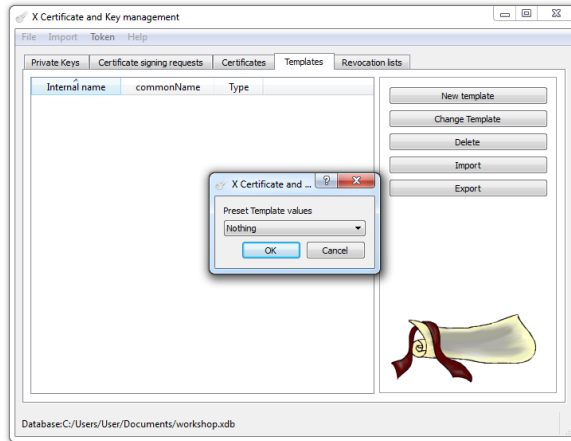


Figure 4-8 Creating a new template

- Default settings for the certificates to be created later can be made on the “Subject” tab. The name must be specified in the relevant certificates. The text specified in the angle brackets is a placeholder which is replaced when the template is applied.

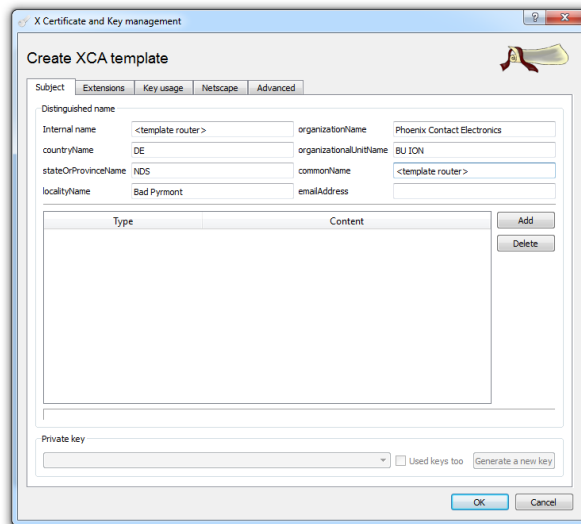


Figure 4-9 Creating a template, entering information about the owner

- On the “Extensions” tab, set the certificate type to “End Entity” as the template should be valid for machine certificates.
- The validity of the certificates to be created is 365 days in this example. Once the end date has elapsed, the certificates can no longer be used.

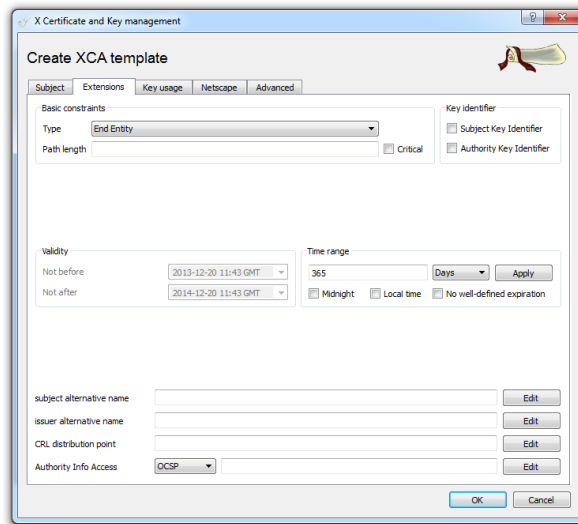


Figure 4-10 Creating a template, entering the validity and type of certificate

- Click OK.

The template is created. You can now use the template as a basis to create certificates signed by the root certificate.

4.5 Creating certificates

- To create certificates based on the template, switch to the “Certificates” tab.
- Create a new certificate.
- A program window opens. On the “Source” tab, the root certificate that is to be used for signing is specified. In addition, you can select a template that was created earlier. The data is imported when you click on “Apply all”.

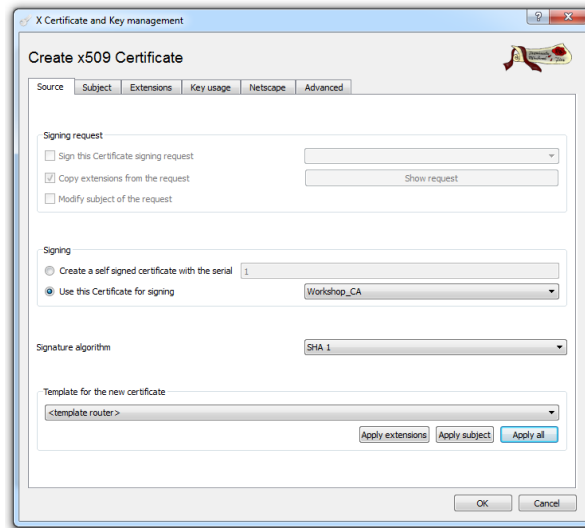


Figure 4-11 Creating a certificate

The fields on the “Subject” tab will now either be empty or they will contain the defaults from the imported template. When entering information on this tab, please note that the certificates must differ at least with regard to their name (internal name and common name). For example, the equipment identification of the machine or the location can be specified as the name here.

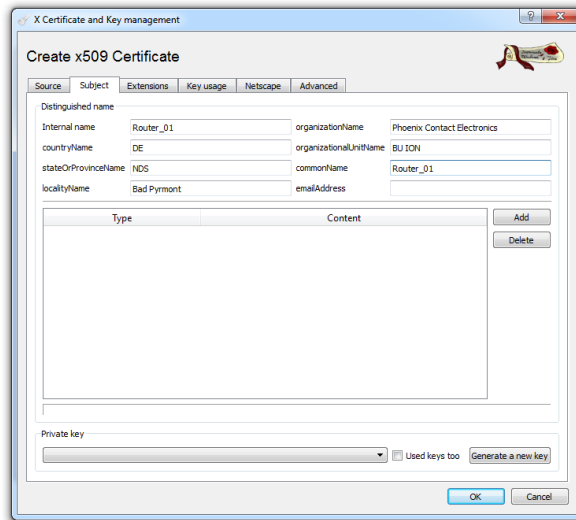


Figure 4-12 Creating a certificate, “Subject” tab

- Create a new private key for this certificate.

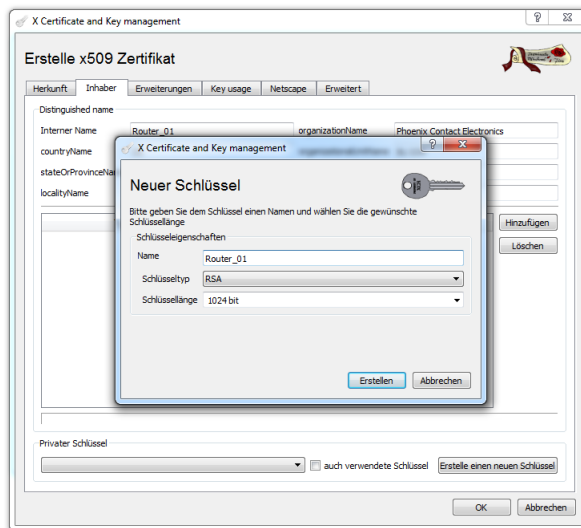


Figure 4-13 Creating a key for a certificate

- Click OK.

You have now created a machine certificate signed by the Certification Authority (CA).

4.6 Exporting certificates

In order to use the machine certificate in a router, you must export the certificate.

- Select the desired certificate from the list. Click on “Export”.

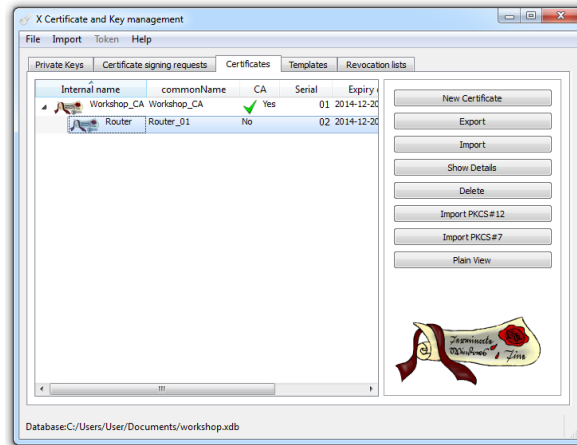


Figure 4-14 Selecting a certificate for export

The complete certificate, including the private key and the CA certificate, must be in “PKCS #12 with Certificate Chain” format. You can then upload it to the relevant device as a machine certificate.

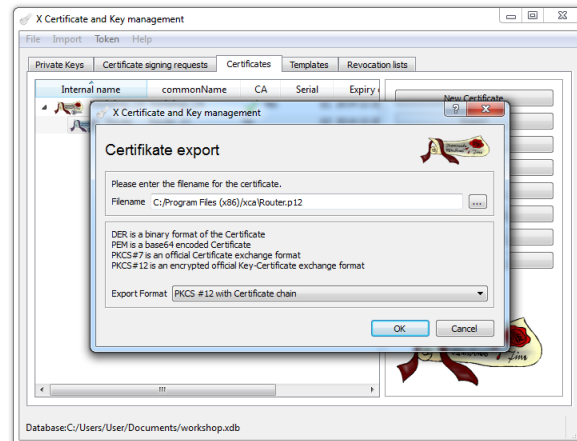


Figure 4-15 Exporting a certificate

For security reasons, the machine certificate is protected with a password of your choice.

- Enter the password. You need the password in order to load the machine certificate on the relevant device.

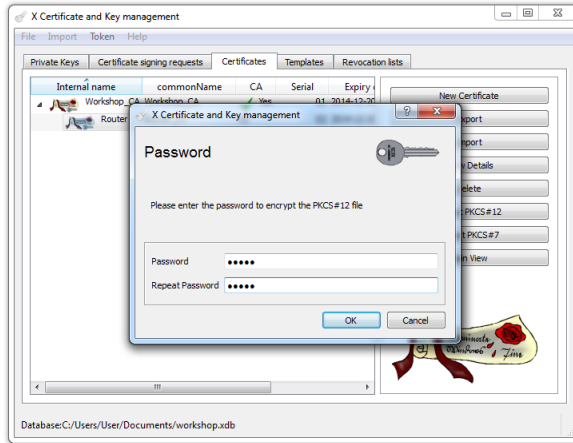


Figure 4-16 Entering the password

- The certificate for the partner must also be exported. This certificate is stored in PEM format without the private key.

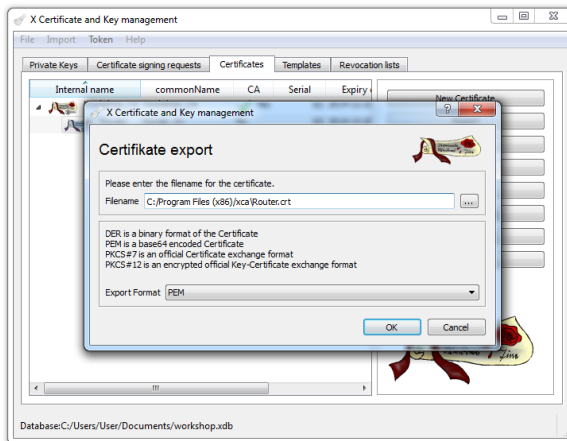


Figure 4-17 Exporting the partner certificate

5 Technical data

5.1 Ordering data

Description	Type	Order No.	Pcs./Pkt.
Industrial LTE 4G router, European version, fallback to 3G UMTS/HSPA and 2G GPRS/EDGE, 2 Ethernet interfaces, firewall, NAT, 2x SMA-F antenna socket	TC ROUTER 3002T-4G	2702528	1
Industrial LTE 3G router, European version, fallback to 2G GPRS/EDGE, 2 Ethernet interfaces, firewall, NAT, SMA-F antenna socket	TC ROUTER 3002T-3G	2702529	1
Industrial LTE 4G router, European version, fallback to 3G UMTS/HSPA and 2G GPRS/EDGE, 2 Ethernet interfaces, firewall, NAT, 2x SMA-F antenna socket	TC ROUTER 2002T-4G	2702530	1
Industrial LTE 3G router, European version, fallback to 2G GPRS/EDGE, 2 Ethernet interfaces, firewall, NAT, SMA-F antenna socket	TC ROUTER 2002T-3G	2702531	1
Industrial LTE 4G router, version for Verizon Wireless (US), 2 Ethernet interfaces, firewall, NAT, IPsec and OpenVPN support, 2x SMA-F antenna socket	TC ROUTER 3002T-4G VZW	2702532	1
Industrial LTE 4G router, version for AT&T (US), fallback to 3G UMTS/HSPA, 2 Ethernet interfaces, firewall, NAT, IPsec and OpenVPN support	TC ROUTER 3002T-4G ATT	2702533	1
Accessories	Type	Order No.	Pcs./Pkt.
Primary-switched TRIO POWER power supply with push-in connection for rail mounting, input: 1-phase, output: 24 V DC/3 A C2LPS	TRIO-PS-2G/1AC/24DC/3/C2LPS	2903147	1
Multiband mobile communication antenna, with mounting bracket for outdoor installation, 5 m antenna cable with SMA circular connector	TC ANT MOBILE WALL 5M	2702273	1
License for mGuard Secure VPN Client v10.0x	MGuard SECURE VPN CLIENT LIC	2702579	1
Mobile network antenna cable, 5 m in length, SMA (male) -> SMA (female), 50 ohm impedance	PSI-CAB-GSM/UMTS- 5M	2900980	
Mobile network antenna cable, 10 m in length, SMA (male) -> SMA (female), 50 ohm impedance	PSI-CAB-GSM/UMTS-10M	2900981	
Attachment plug with LAMBDA/4 technology as surge protection for coaxial signal interfaces. Connection: plug/socket SMA connectors	CSMA-LAMBDA/4-2.0-BS-SET	2800491	1

5.2 Technical data

Power supply	TC ROUTER ...-4G...	TC ROUTER ...-3G
Supply voltage range	10 V DC ... 30 V DC (SELV, via COMBICON plug-in screw terminal block)	
Typical current consumption	< 200 mA (24 V DC) 65 mA (with activated energy-saving mode)	
Maximum current consumption	1.7 A	
Electrical isolation	VCC // LTE // Ethernet // PE	VCC // UMTS // Ethernet // PE

Functions	TC ROUTER 3002T...	TC ROUTER 2002T...
Management	Web-based management, SNMP	
Firewall rules	Stateful inspection firewall	
Filtering	IP, port, protocol	
Number of VPN tunnels	3	-
1:1 Network Address Translation (NAT) in the VPN	Supported	-
Encryption methods	3DES, AES-128, -192, -256	-
Internet Protocol Security (IPsec) mode	ESP tunnel	-
Authentication	X.509v3, PSK	-
Data integrity	MD5, SHA-1	-
Dead Peer Detection (DPD)	RFC 3706	-

Ethernet interface, 10/100Base-T(X) according to IEEE 802.3u	
Number of channels	2 (SELV)
Connection method	RJ45 socket, shielded
Serial transmission speed	10/100 Mbps, auto-negotiation
Transmission length	100 m (twisted pair, shielded)
Supported protocols	TCP/IP, UDP/IP, FTP, HTTP(S)
Secondary protocols	ARP, DHCP, PING (ICMP), SNMP V1/V2, SMTP(S), NTP, SSL/TLS, STARTTLS

Wireless interface	TC ROUTER 3002T -4G TC ROUTER 2002T -4G	TC ROUTER 3002T -3G TC ROUTER 2002T -3G	TC ROUTER 3002T -4G VZW	TC ROUTER 3002T -4G ATT
Interface description	GSM / GPRS / EDGE / UMTS / HSPA / LTE (FDD)	GSM / GPRS / EDGE / UMTS / HSPA	LTE (FDD)	LTE (FDD) / UMTS / HSPA
Frequency	850 MHz (EGSM, 2 W) 900 MHz (EGSM, 2 W) 1800 MHz (EGSM, 1 W) 1900 MHz (EGSM, 1 W) 850 MHz (UMTS/HSPA B5) 900 MHz (UMTS/HSPA B8) 1900 MHz (UMTS/HSPA B2) 2100 MHz (UMTS/HSPA B1) 800 MHz (LTE B20) 850 MHz (LTE B5) 900 MHz (LTE B8) 1800 MHz (LTE B3) 1900 MHz (LTE B2) 2100 MHz (LTE B1) 2600 MHz (LTE B7)	850 MHz (EGSM, 2 W) 900 MHz (EGSM, 2 W) 1800 MHz (EGSM, 1 W) 1900 MHz (UMTS/HSPA B2) 2100 MHz (UMTS/HSPA B1)	700 MHz (LTE B13) 1700 MHz (LTE B4)	850 MHz (UMTS/HSPA B5) 1900 MHz (UMTS/HSPA B2) 700 MHz (LTE B13/ B17) 850 MHz (LTE B5) 1700 MHz (LTE B4) 1900 MHz (LTE B2)
Data rate	≤ 150 Mbps (LTE (DL)) ≤ 50 Mbps (LTE (UL))	≤ 21.6 Mbps (HSPA (DL)) ≤ 5.76 Mbps (HSPA (UL))	≤ 150 Mbps (LTE (DL)) ≤ 50 Mbps (LTE (UL))	
Antenna	50 Ω impedance SMA antenna socket			
SIM interface	1.8 V, 3 V			
GPRS	Class 12, Class B CS1 ... CS4		-	
EDGE	Multislot Class 10		-	
UMTS	HSPA 3GPP R9	HSPA 3GPP R7	-	HSPA 3GPP R9
LTE	CAT4	-	CAT4	CAT4

Digital input

Number of inputs	2
Voltage input signal	10...30 V DC
Switching level "1" signal	10...30 V DC

Digital output

Number of outputs	1 (resistive load)
Voltage output signal	10 V DC ... 30 V DC (depending on the operating voltage)
Current output signal	≤50 mA (not short-circuit-proof)

General data

Management	Web-based management, SNMP
Degree of protection	IP20 (manufacturer's declaration)
Pollution degree	2 (indoor use only)
Dimensions (W/H/D)	45 mm x 130 mm x 126 mm
Housing material	Plastic gray
Vibration resistance according to EN 60068-2-6/IEC 60068-2-6	5g, 10 ... 150 Hz, 2,5 h, in XYZ direction
Shock according to EN 60068-2-27/IEC 60068-2-27	15g
Noise immunity according to	EN 61000-6-2
Electromagnetic compatibility	Conformance with EMC directive 2014/30/EU

Ambient conditions

	TC ROUTER ...-4G...	TC ROUTER ...-3G
Ambient temperature (operation)	-40°C ... 70°C (maximum transmission power of 5 dBm)	-40°C ... 70°C (maximum transmission power of 10 dBm)
	-40°C ... 60°C (maximum transmission power of 23 dBm)	-40°C ... 60°C (maximum transmission power of 23 dBm)
Ambient temperature (storage/transport)	-40°C ... 85°C	
Permissible humidity (operation)	30% ... 95% (non-condensing)	
Permissible humidity (storage/transport)	30% ... 95% (non-condensing)	
Altitude	5000 m (for restrictions see manufacturer's declaration)	

Approvals	TC ROUTER 3002T-4G TC ROUTER 3002T-3G TC ROUTER 2002T-4G TC ROUTER 2002T-3G	TC ROUTER 3002T-4G VZW TC ROUTER 3002T-4G ATT
------------------	--	--

Conformance	CE-compliant
Noxious gas test	ISA-S71.04-1985 G3 Harsh Group A
UL, USA/Canada	- Class I, zone 2, AEx nA IIC T4 / Ex nA IIC T4 Gc Class I, Div. 2, Groups A, B, C, D T4

Conformance with EMC directive 2014/30/EU

Noise immunity according to EN 61000-6-2

Electrostatic discharge	EN 61000-4-2
	Contact discharge ±6 kV (test intensity 3)
	Air discharge ±8 kV (test intensity 3)
	Comment Criterion B
Electromagnetic HF field	EN 61000-4-3
	Frequency range 80 MHz ... 3 GHz (test intensity 3)
	Field strength 10 V/m
	Comment Criterion A
Fast transients (burst)	EN 61000-4-4
	Input ±2 kV (test intensity 3)
	Signal ±2 kV (Ethernet)
	Comment Criterion B
Surge current loads (surge)	EN 61000-4-5
	Input ±0.5 kV (symmetrical) ±1 kV (asymmetrical)
	Signal ±1 kV (data cable, asymmetrical)
	Comment Criterion B
Conducted interference	EN 61000-4-6
	Frequency range 0.15 MHz ... 80 MHz
	Voltage 10 V
	Comment Criterion A

Noise emission in accordance with EN 61000-6-4

Radio interference voltage according to EN 55011	Class B, industrial and residential applications
Emitted radio interference according to EN 55011	Class B, industrial and residential applications

- Criterion A Normal operating behavior within the specified limits
- Criterion B Temporary impairment of operating behavior that is corrected by the device itself.

RED directive 2014/53/EU

EMC - immunity to interference (electromagnetic compatibility of wireless systems)	EN 61000-6-2	Generic standard for the industrial sector
Safety - protection of personnel with regard to electrical safety	EN 60950	
Health - limitation of exposure of the population to electromagnetic fields	Official Journal of the European Communities 1999/519/EC	Recommendation of the Council of the European Community from July 12, 1999
Radio - effective use of the frequency spectrum and avoidance of radio interference	DIN EN 301511	

5.3 Dimensions

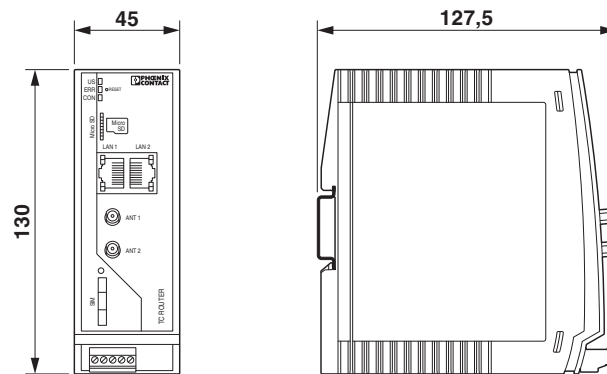


Figure 5-1 Dimensions

A Technical appendix

A 1 XML elements

Table A-1 Data definitions of the XML elements used

Category	XML element	Description
Info	Device group	
	serialno	Serial number of the device
	hardware	Hardware version of the device
	firmware	Firmware release
	wbm	Web-based management version
	imei	IMEI of the SIM card
Info	Radio group	
	provider	Name of the provider (text)
	rssi	Received signal strength (decimal number 0 ... 99)
	0	-113 dBm or less
	1	-111 dBm
	2 ... 30	-109 dBm ... -53 dBm
	31	-51 dBm or more
99	Not measured yet or not to be determined	
creg	Status of registration in the mobile network (decimal number 0 ... 5)	
0	Not registered, not searching for cellular network	
1	Registered in home network	
2	Not registered yet, searching for cellular network	
3	Registration rejected	
4	Not used	
5	Registered in another network (roaming)	
lac	Location Area Code (LAC) of the device in a mobile network (hexadecimal number, maximum of 4 digits)	
ci	Cell ID, unique identification of the radio cell within the LAC (hexadecimal number, maximum of 8 digits)	

Table A-1 Data definitions of the XML elements used

Category	XML element [...]	Description [...]
Info	packet	Packet data status (decimal number 0 ... 8) 0 Offline (no Internet connection) 1 Online (Internet connection) 2 GPRS online 3 EDGE online 4 UMTS online 5 HSDPA online 6 HSUPA online 7 HSDPA+HSUPA online 8 LTE online
	simstatus	Status of the SIM card (decimal number 0 ... 5) 0 Unknown 1 No SIM card 2 Waiting for PIN 3 Incorrect PIN entered 4 Waiting for PUK 5 Ready
Info	Inet group	
	ip	IP address of the packet data connection on the Internet
	rx_bytes	Number of data bytes received so far (decimal number 0 ... 4294967295)
	tx_bytes	Number of data bytes transmitted so far (decimal number 0 ... 4294967295)
	mtu	Maximum Transmission Unit (MTU), the maximum packet size, in bytes, in the packet data network (decimal number 128 ... 1500)
Info	IO group	Returned data type, depends on server configuration
	Verbose	Response in words, e.g., on/off
	Numeric	Short numerical response, e.g., 1/0
	gsm	Binary status of the GSM/UMTS connection
	inet	Binary status of the Internet connection (packet data connection)
	vpn	Binary status of the VPN tunnel
SMS	Send SMS (cmgs)	
	destaddr	National or international telephone number of the recipient (160 characters maximum) The UTF-8 coded text is specified in the element content. The text may consist of characters that are defined in the GSM 03.38 6.2.1 default alphabet. However, coding must be in UTF-8 as per XML rules.

Table A-1 Data definitions of the XML elements used

Category	XML element [...]	Description [...]
SMS	Receive SMS (cmgr, UTF-8 text)	
	origaddr	National or international telephone number of the sender
	timestamp	Time of SMS transmission
	error	Error type (decimal number 1 ... 3) 1 Empty = no SMS message received 2 Busy = try again later 3 System error = communication problem with the radio engine
SMS	Acknowledge SMS receipt (cmga, text)	If communication with the GSM/UMTS control program is possible, "ok" is always returned.
	error	Error type (decimal number 8) Only returned if an error is present. In this case "system error" is returned in the cmga element of the error test.
E-mail	E-mail	
	to	E-mail address
	cc	E-mail subject, UTF-8 coded text
	body	E-mail message, UTF-8 coded text
IO	Input element (input)	
	no	Decimal number 1 ... 6
IO	Output element (output)	
	no	Decimal number 1 ... 6
	value	Returned data type depending on server configuration. Both variants are recognized to set or reset outputs: Verbose Response in words, e.g., on/off Numeric Short numerical response, e.g., 1/0

A 2 Structure of the XML configuration file

You can configure the device using an XML file. The device can output and also read in XML files.

A 2.1 XML file format

A valid XML file contains:

- A header which distinguishes the file as XML
- A <config> “root” element

After the <config> element, only the <entry> element is used to specify settings:

```
<?xml version="1.0" encoding="UTF-8"?>
<config>
<entry name="...">...</entry>
...
</config>
```

Only “name” is used as an attribute in the <entry> element. This attribute determines where the data is placed in the file tree. As defined in the header, all data must be specified in the UTF-8 character set.

Line breaks in the data are specified as escape sequences: “
”.

A 2.2 Reference to <entry> element

The described reference is valid as of release 2.01.8.

A 2.3 Local network settings

LAN interface

```
<entry name="conf/network/interface/lan/ipaddr">192.168.0.1</entry>
<entry name="conf/network/interface/lan/netmask">255.255.255.0</entry>
<entry name="conf/network/interface/lan/proto">static</entry>
<entry name="conf/network/interface/lan/ipalias"># IP alias
&#10;#&#10;let alias_cnt=0</entry>
<entry name="conf/network/interface/lan/devlist"></entry>
<entry name="conf/network/interface/lan/iface">eth0</entry>
<entry name="conf/network/interface/lan/mode">auto</entry>
<entry name="conf/network/interface/lan/type">ethernet</entry>
```

The ./devlist, ./iface, ./mode, and ./type elements must not be modified. They are also not modified by settings on the configuration page.

./ipaddr	IPv4 address of the device
./netmask	IPv4 netmask
./proto	Type of address assignment: “static” or “dhcp”
./ipalias	This value represents a special list and should only be modified via the configuration page.

DHCP server

```
<entry name="conf/network/dhcp/lan/enable">0</entry>
<entry name="conf/network/dhcp/lan/domain">example.net</entry>
<entry name="conf/network/dhcp/lan/lease">24h</entry>
<entry name="conf/network/dhcp/lan/dynamic">0</entry>
<entry name="conf/network/dhcp/lan/addr1">192.168.0.10</entry>
<entry name="conf/network/dhcp/lan/addr2">192.168.0.30</entry>
<entry name="conf/network/dhcp/lan/hosts"># DHCP hosts&#10;#</entry>
<entry name="conf/network/dhcp/lan/names"># DHCP names&#10;#</entry>
<entry name="conf/network/dhcp/lan/options"># DHCP options&#10;#</entry>
```

<code>./enable</code>	DHCP server
	0 Off
	1 On
<code>./domain</code>	Local domain name, maximum of 64 characters
<code>./lease</code>	Time after which the IP address is automatically renewed
<code>./dynamic</code>	Dynamic address assignment in the specified area
	0 Off
	1 On
<code>./addr1</code>	Area for dynamic address assignment
<code>./addr2</code>	Area for dynamic address assignment
<code>./hosts</code>	List of static MAC at IP assignments
	This list should only be modified via the configuration page.
<code>./names</code>	Not used at present, must not be modified
<code>./options</code>	Not used at present, must not be modified

Static routes

```
<entry name="conf/network/route/lan/sroute"># static routes
&#10;#</entry>
```

<code>./sroute</code>	List of local static routes
	This list should only be modified via the configuration page.

SNMP

```

<entry name="conf/snmp/device"></entry>
<entry name="conf/snmp/description"></entry>
<entry name="conf/snmp/location"></entry>
<entry name="conf/snmp/contact"></entry>
<entry name="conf/snmp/rocommunity">public</entry>
<entry name="conf/snmp/rwcommunity"></entry>
<entry name="conf/snmp/rwuser">admin</entry>
<entry name="conf/snmp/secretpass">Snmpadmin</entry>
<entry name="conf/snmp/trap_addr">0.0.0.0</entry>
<entry name="conf/snmp/trap_port">162</entry>
<entry name="conf/snmp/trap_community">public</entry>
<entry name="conf/snmp/trap_enable">0</entry>
<entry name="conf/snmp/v12_enable">0</entry>
<entry name="conf/snmp/v3_enable">0</entry>
<entry name="conf/snmp/fw_local"></entry>
<entry name="conf/snmp/fw_external"></entry>

```

./device	Text descriptions of the same name with a maximum of 250 characters each
./description	Text descriptions of the same name with a maximum of 250 characters each
./location	Text descriptions of the same name with a maximum of 250 characters each
./contact	Text descriptions of the same name with a maximum of 250 characters each
./rocommunity	Password for read access. If the password is left empty, the SNMP service will not be started.
./rwcommunity	Password for write access
./rwuser	User name for SNMPv3 access
./secretpass	Password for SNMPv3 access
./trap_addr	IPv4 trap manager address
./trap_port	IPv4 trap manager port
./trap_community	Password for traps
./trap_enable	Send traps
	0 No
	1 Yes
./v12_enable	Activate SNMPv1/v2
	0 No
	1 Yes
./v3_enable	Activate SNMPv3
	0 No
	1 Yes

The values represent a special list and should only be modified via the configuration page

./fw_local	List of firewall rules for local data
./fw_external	List of firewall rules for external data

A 3 Wireless network

General settings

```
<entry name="conf/gsm/band_setup">515</entry>
<entry name="conf/gsm/sim_timeout">10</entry>
<entry name="conf/gsm/relogin">0</entry>
<entry name="conf/gsm/time">01:00</entry>
```

<code>./band_setup</code>	Bit mask for band selection of the GSM/UMTS/LTE engine
<code>./sim_timeout</code>	Provider timeout in minutes
<code>./relogin</code>	Daily (new) login into the network
	0 No
	1 Yes
<code>./time</code>	Time for daily (new) login into the network

SIM card

```
<entry name="conf/sim1/mcc">262</entry>
<entry name="conf/sim1/cpin"></entry>
<entry name="conf/sim1/roaming">1</entry>
<entry name="conf/sim1/provider">0</entry>
<entry name="conf/sim1/username"></entry>
<entry name="conf/sim1/password"></entry>
<entry name="conf/sim1/apn">web.vodafone.de</entry>
<entry name="conf/sim1/auth_allow">0</entry>
```

<code>./mcc</code>	Code for country selection
<code>./cpin</code>	PIN of the SIM card
<code>./roaming</code>	Roaming allowed
	0 No
	1 Yes
<code>./provider</code>	Code of the selected provider
	0 Auto
<code>./username</code>	User name for packet data network access
<code>./password</code>	Password for packet data network access
<code>./apn</code>	APN access point of the provider
<code>./authallow</code>	Bit mask for permitted access protocols

SMS configuration

```
<entry name="conf/gsm/sms_control">0</entry>  
<entry name="conf/gsm/sms_password"></entry>  
<entry name="conf/gsm/sms_forward">0</entry>  
<entry name="conf/gsm/sms_server">192.168.0.200</entry>  
<entry name="conf/gsm/sms_port">1432</entry>
```

```
./sms_control      Control device via SMS  
                   0 No  
                   1 Yes  
./sms_password     Password used for control  
./sms_forward      Forward received SMS message to a server  
                   0 No  
                   1 Yes  
./sms_server       IP address of the SMS server  
./sms_port         SMS server port
```

Packet data

```

<entry name="conf/gprs/enable">0</entry>
<entry name="conf/gprs/debug">0</entry>
<entry name="conf/gprs/noccp">0</entry>
<entry name="conf/network/interface/wwan/mtu">1500</entry>
<entry name="conf/gprs/restart">5</entry>
<entry name="conf/gprs/echo-interval">30</entry>
<entry name="conf/gprs/echo-failure">4</entry>
<entry name="conf/gprs/event">0</entry>

```

<code>./enable</code>	Activate packet data
	0 No
	1 Yes
<code>./debug</code>	Activate debug mode for PPP connection establishment
	0 No
	1 Yes
<code>./noccp</code>	Allow data compression
	0 No
	1 Yes
<code>./mtu</code>	Selected MTU (Maximum Transmission Unit) on the PPP interface
<code>./restart</code>	Restart interval in seconds
<code>./echo-interval</code>	Echo interval in seconds
<code>./echo-failure</code>	Number of missing echo responses after which the connection is terminated
<code>./event</code>	Start selection for packet data connection
	0 Start immediately
	1 Control via SMS message
	2 Reserved (do not use)
	3 Control via XML server
	4 ... 5 Control via input 1 ... 2

Static routes

```

<entry name="conf/network/route/wwan/sroute"># static routes
&#10;#</entry>

```

<code>./sroute</code>	List of local static routes. This list should only be modified via the configuration page.
-----------------------	--

DynDNS

```
<entry name="conf/ddns/enable">0</entry>
<entry name="conf/ddns/provider">0</entry>
<entry name="conf/ddns/server">members.dyndns.org</entry>
<entry name="conf/ddns/username"></entry>
<entry name="conf/ddns/password"></entry>
<entry name="conf/ddns/hostname"></entry>
```

./enable	Activate DynDNS client
	0 No
	1 Yes
./provider	Selection list of supported providers
	0 DynDNS.org
	1 TZO.com
	3 selfHOST.de
	4 custom DynDNS
	5 FestelP.net
	6 FreeDNS.afraid.org
	7 Hurricane Electric
./server	Server URL for the custom DynDNS server
./username	User name for the DynDNS service
./password	Password for the DynDNS service
./hostname	Own host name which is registered for the DynDNS service

Connection check (connection monitoring)

```

<entry name="conf/conchk/enable">0</entry>
<entry name="conf/conchk/host1"></entry>
<entry name="conf/conchk/host2"></entry>
<entry name="conf/conchk/host3"></entry>
<entry name="conf/conchk/local1">0</entry>
<entry name="conf/conchk/local2">0</entry>
<entry name="conf/conchk/local3">0</entry>
<entry name="conf/conchk/interval">5</entry>
<entry name="conf/conchk/retry">3</entry>
<entry name="conf/conchk/event">0</entry>

```

<code>./enable</code>	Activate connection monitoring
	0 No
	1 Yes
<code>./host[n]</code>	URL or IP address of the host that should respond to the echo request
<code>./local[n]</code>	Wireless network or local network as transmitting interface
	0 Wireless
	1 Local
<code>./interval</code>	Transmission interval in minutes
<code>./retry</code>	Maximum number of missing responses after which an action is triggered
<code>./event</code>	Action selection
	0 None
	1 Restart device (Reboot)
	2 Reconnect packet data (Reconnect)
	3 Reconnect to GSM/UMTS network (Relogin)

Monitoring

```

<entry name="conf/gsm/log_enable">0</entry>
<entry name="conf/gsm/log_duration">24</entry>
<entry name="conf/gsm/log_interval">1</entry>
<entry name="conf/gsm/log_ping"></entry>

```

<code>./log_enable</code>	Activate monitoring
	0 No
	1 Yes
<code>./log_duration</code>	Monitoring duration in hours
<code>./log_interval</code>	Time between two echo requests
<code>./log_ping</code>	URL or IP address of a host that should respond to the echo requests

A 3.1 Network security

General settings

```
<entry name="conf/iptables/fw_enable">1</entry>
<entry name="conf/iptables/nat_enable">0</entry>
<entry name="conf/iptables/fw_netbios">1</entry>
<entry name="conf/iptables/icmp">0</entry>
<entry name="conf/iptables/masq_enable">1</entry>
<entry name="conf/iptables/xssh">0</entry>
<entry name="conf/iptables/xwbm">0</entry>
<entry name="conf/dropbear/enable">0</entry>
<entry name="conf/dropbear/port">22</entry>
```

<code>./fw_enable</code>	State of the overall firewall function
0	Off
1	On
<code>./nat_enable</code>	State of the NAT table (port forwarding)
0	Off
1	On
<code>./fw_netbios</code>	Block outgoing NetBIOS broadcasts
0	No
1	Yes
<code>./icmp</code>	Respond to echo requests at the external interface
0	No
1	Yes
<code>./masq_enable</code>	Perform IP masquerading at the external interface
0	No
1	Yes
<code>./xssh</code>	External device access via SSH
0	No
1	Yes
<code>./xwbm</code>	External device access via HTTP or HTTPS
0	No
1	Yes
<code>./enable</code>	Device access via SSH
0	No
1	Yes
<code>./port</code>	Port used for SSH access, normally 22

Firewall

```
<entry name="conf/iptables/fw_in"># Firewall incoming
&#10;#</entry>
<entry name="conf/iptables/fw_out"># Firewall outgoing
&#10;#</entry>
```

The values represent a special list and should only be modified via the configuration page.

<code>./fw_in</code>	List of firewall rules for incoming data
<code>./fw_out</code>	List of firewall rules for outgoing data

NAT table

```
<entry name="conf/iptables/nat_fw"># NAT firewall
&#10;#</entry>
<entry name="conf/iptables/nat_vs"># NAT virtual server
&#10;#</entry>
```

The values represent a special list and should only be modified via the configuration page.

<code>./nat_fw</code>	List of firewall rules for the NAT table (port forwarding)
<code>./nat_vs</code>	List of forwarding rules for the NAT table (port forwarding)

A 3.2 VPN

A 3.2.1 IPsec

Higher-level settings

```
<entry name="conf/ipsec/enableupdate">0</entry>
<entry name="conf/ipsec/autoupdate">600</entry>
```

<code>./enableupdate</code>	Monitoring of IP address changes
0	Off
1	On
<code>./autoupdate</code>	Monitoring interval in seconds

Connection settings 1 ... n

```

<entry name="conf/ipsec/vpn1/name">vpn1</entry>
<entry name="conf/ipsec/vpn1/enable">0</entry>
<entry name="conf/ipsec/vpn1/rightallowany">0</entry>
<entry name="conf/ipsec/vpn1/host"></entry>
<entry name="conf/ipsec/vpn1/auth">0</entry>
<entry name="conf/ipsec/vpn1/remote_cert">mGuard.crt</entry>
<entry name="conf/ipsec/vpn1/local_cert">test.p12</entry>
<entry name="conf/ipsec/vpn1/remote_id"></entry>
<entry name="conf/ipsec/vpn1/local_id"></entry>
<entry name="conf/ipsec/vpn1/remote_addr">192.168.9.0/24</entry>
<entry name="conf/ipsec/vpn1/local_addr">192.168.0.0/24</entry>
<entry name="conf/ipsec/vpn1/psk">complicated_like_5Dy0qoD_and_long</entry>
<entry name="conf/ipsec/vpn1/nat">0</entry>
<entry name="conf/ipsec/vpn1/local_net">192.168.1.0</entry>
<entry name="conf/ipsec/vpn1/mode">0</entry>
<entry name="conf/ipsec/vpn1/autoreset">0</entry>
<entry name="conf/ipsec/vpn1/resettime">60</entry>

```

./name	Description of the connection
./enable	Connection active
	0 No
	1 Yes
./rightallowany	Accept connection from any partner
	0 No
	1 Yes
./host	URL or IP address of the partner
./auth	Selected authentication method
	0 X.509 certificates
	1 Pre-shared key
./remote_cert	Partner certificate
./local_cert	Local certificate
./remote_id	Partner ID
./local_id	Own ID
./remote_addr	Partner tunnel end
./local_addr	Local tunnel end
./psk	Pre-shared key
./nat	Connection NAT
	0 None
	1 Local 1:1 NAT
	5 Remote masquerading
./local_net	Target of local NAT

<code>./mode</code>	Type of connection
	0 Waiting for connection
	1 Always establish connection
	2 Control via SMS message
	3 Control via call
	4 Control via XML server
	5 ... 6 Control via input 1 ... 2
<code>./autoreset</code>	Automatic connection release
	0 No
	1 Yes
<code>./resetime</code>	Time in minutes after which the connection is re-established

IKE settings (1 ... n)

```

<entry name="conf/ipsec/vpn1/ike_crypt">aes128</entry>
<entry name="conf/ipsec/vpn1/ike_hash">0</entry>
<entry name="conf/ipsec/vpn1/ike_life">3600</entry>
<entry name="conf/ipsec/vpn1/esp_crypt">aes128</entry>
<entry name="conf/ipsec/vpn1/esp_hash">0</entry>
<entry name="conf/ipsec/vpn1/esp_life">28800</entry>
<entry name="conf/ipsec/vpn1/pfs">1</entry>
<entry name="conf/ipsec/vpn1/pfsgroup">modp1024</entry>
<entry name="conf/ipsec/vpn1/rekey">1</entry>
<entry name="conf/ipsec/vpn1/dpd">1</entry>
<entry name="conf/ipsec/vpn1/dpdelay">30</entry>
<entry name="conf/ipsec/vpn1/dpdtimeout">120</entry>
<entry name="conf/ipsec/vpn1/keyingtries">0</entry>
<entry name="conf/ipsec/vpn1/rekeyfuzz">100</entry>
<entry name="conf/ipsec/vpn1/rekeymargin">540</entry>

```

<code>./ike_crypt</code>	Phase 1 ISAKMP encryption, valid values: 3des, aes128, aes192, aes256
<code>./ike_hash</code>	Phase 1 ISAKMP hash
	0 All
	1 MD5
	2 SHA-1
<code>./ike_life</code>	Time in seconds after which the key is renegotiated
<code>./esp_crypt</code>	Phase 2 IPsec SA encryption, valid values: 3des, aes128, aes192, aes256
<code>./esp_hash</code>	Phase 2 IPsec SA hash
	0 All
	1 MD5
	2 SHA-1
<code>./esp_life</code>	Time in seconds after which the key is renegotiated

<code>./pfs</code>	Perfect forward secrecy
	0 No
	1 Yes
<code>./pfsgroup</code>	DH/PFS group, valid values: modp1024, modp1536, modp2048
<code>./rekey</code>	Renew key
	0 No
	1 Yes
<code>./dpd</code>	Dead Peer Detection (DPD)
	0 No
	1 Yes
<code>./dpddelay</code>	Time in seconds between requests
<code>./dpdtimeout</code>	Time in seconds after which the connection is deemed interrupted
<code>./keyingtries</code>	Number of attempts to establish a connection
	0 Unlimited
<code>./rekeyfuzz</code>	Value as a percentage
<code>./rekeymargin</code>	Time in seconds

A 3.2.2 Certificates

```

<entry name="ipsec.d/cacerts/test.crt">
-----BEGIN CERTIFICATE--...</entry>
<entry name="ipsec.d/certs/local/test.crt">
-----BEGIN CERTIFICATE--...</entry>
<entry name="ipsec.d/certs/remote/mGuard.crt">
-----BEGIN CERTIFICATE--...</entry>
<entry name="ipsec.d/private/test.pem">
-----BEGIN RSA PRIVATE KEY--...</entry>
<entry name="ipsec.d/ldir/test.p12">7</entry>

```

<code>./cacerts/*</code>	CA certificates
<code>./certs/local/*</code>	Local certificates
<code>./certs/remote/*</code>	Partner certificates
<code>./private/*</code>	Private key
<code>./ldir/*</code>	Bit mask for certificate validity

A 3.2.3 OpenVPN

Connections 1 ... n

```

<entry name="conf/openvpn/tunnell/name">tunnell</entry>
<entry name="conf/openvpn/tunnell/enable">0</entry>
<entry name="conf/openvpn/tunnell/event">0</entry>
<entry name="conf/openvpn/tunnell/host"></entry>
<entry name="conf/openvpn/tunnell/rport">1194</entry>
<entry name="conf/openvpn/tunnell/proto">0</entry>
<entry name="conf/openvpn/tunnell/complzo">0</entry>
<entry name="conf/openvpn/tunnell/float">0</entry>
<entry name="conf/openvpn/tunnell/redirect">0</entry>
<entry name="conf/openvpn/tunnell/bind">0</entry>
<entry name="conf/openvpn/tunnell/lport">1194</entry>
<entry name="conf/openvpn/tunnell/auth">0</entry>
<entry name="conf/openvpn/tunnell/certificate">test-server.p12</entry>
<entry name="conf/openvpn/tunnell/nscert">0</entry>
<entry name="conf/openvpn/tunnell/psk">my_static.key</entry>
<entry name="conf/openvpn/tunnell/username"></entry>
<entry name="conf/openvpn/tunnell/password"></entry>
<entry name="conf/openvpn/tunnell/remote_ifc">172.16.0.2</entry>
<entry name="conf/openvpn/tunnell/local_ifc">172.16.0.1</entry>
<entry name="conf/openvpn/tunnell/remote_addr">192.168.9.0/24</entry>
<entry name="conf/openvpn/tunnell/nat">0</entry>
<entry name="conf/openvpn/tunnell/local_masq">0</entry>
<entry name="conf/openvpn/tunnell/local_addr">192.168.0.0/24</entry>
<entry name="conf/openvpn/tunnell/local_net">192.168.1.0</entry>
<entry name="conf/openvpn/tunnell/cipher">BF-CBC</entry>
<entry name="conf/openvpn/tunnell/keepalive">1</entry>
<entry name="conf/openvpn/tunnell/ping">30</entry>
<entry name="conf/openvpn/tunnell/restart">120</entry>

```

<code>./name</code>	Description of the connection
<code>./enable</code>	Connection active
	0 No
	1 Yes
<code>./event</code>	Start selection for the tunnel
	0 Start immediately
	1 Control via SMS message
	2 Control via call
	3 Control via XML server
	4...5 Control via input 1 ... 2
<code>./host</code>	URL or IP address of the partner
<code>./rport</code>	Used partner port
<code>./proto</code>	Protocol
	0 UDP
	1 TCP

./complzo Settings for data compression
0 Disabled
1 Adaptive compression
2 No compression active
3 Compression active
4 Compression allowed

./float Partner may change its IP address
0 No
1 Yes

./redir All data traffic is routed through the tunnel.
0 No
1 Yes

./bind Specify outgoing port
0 No
1 Yes

./lport Outgoing port

./auth Authentication
0 X.509 certificates
1 Pre-shared key
2 User name and password

./certificate Certificate name

./nscert Check partner certificate type
0 No
1 Yes

./psk Pre-shared key

./username User name

./password Password

./remote_ifc Partner tunnel end

./local_ifc Local tunnel end

./remote_addr Partner tunnel network

./nat Connection NAT
0 None
1 Local 1:1 NAT
4 Local masquerading
5 Remote masquerading
6 Port forwarding
7 Host forwarding

<code>./local_masq</code>	Activate masquerading in the port and host forwarding settings. Otherwise, the value must be set to 0.
	0 Off
	1 On
<code>./local_addr</code>	Local tunnel network
<code>./local_net</code>	Target of local NAT
<code>./cipher</code>	Type of encryption, valid values: BF-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC, DES-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, CAST5-CBC, RC2-40-CBC, RC2-64-CBC, RC2-CBC, none
<code>./keepalive</code>	Send Keep Alive packets
	0 No
	1 Yes
<code>./ping</code>	Time in seconds between packets
<code>./restart</code>	Time in minutes after which the connection is re-established

Additional connection settings (1 ... n)

```
<entry name="conf/openvpn/tunnel1/tun_mtu">1500</entry>
<entry name="conf/openvpn/tunnel1/frag_enable">0</entry>
<entry name="conf/openvpn/tunnel1/frag_size">1450</entry>
<entry name="conf/openvpn/tunnel1/mssfix_enable">0</entry>
<entry name="conf/openvpn/tunnel1/mssfix_size">1450</entry>
<entry name="conf/openvpn/tunnel1/reneq_sec">3600</entry>
```

<code>./tun_mtu</code>	MTU (Maximum Transmission Unit) for the TUN device
<code>./frag_enable</code>	Fragmentation of data packets
	0 No
	1 Yes
<code>./frag_size</code>	Size of fragmented packets
<code>./mssfix_enable</code>	MSSFIX option
	0 No
	1 Yes
<code>./mssfix_size</code>	Size of packets with MSSFIX
<code>./reneq_sec</code>	Time in seconds for renewing the key

Port forwarding

```
<entry name="conf/openvpn/napt"># NAPT port forwarding
&#10;#</entry>
```

The values represent a special list and should only be modified via the configuration page.

<code>./napt</code>	List of settings for port forwarding
---------------------	--------------------------------------

Certificates

```
<entry name="openvpn/cacerts/test-server.crt">
-----BEGIN CERTIFICATE--...</entry>
<entry name="openvpn/certs/test-server.crt">
-----BEGIN CERTIFICATE--...</entry>
<entry name="openvpn/private/test-server.pem">
-----BEGIN RSA PRIVATE KEY--...</entry>
<entry name="openvpn/ldir/test-server.p12">7</entry>
<entry name="openvpn/casonly/test-ca.crt">
-----BEGIN CERTIFICATE--...</entry>
```

<code>./cacerts/*</code>	CA certificates
<code>./certs/</code>	Certificates
<code>./private/</code>	Private key
<code>./ldir/*</code>	Bit mask for certificate validity
<code>./casonly/*</code>	CA certificates for authentication with user name and password

Static keys

```
<entry name="openvpn/keys/my_static.key">
#&#10;# 2048 bit OpenVPN static key... </entry>
./ keys/*          Static keys
```

Diffie-Hellman parameters

```
<entry name="openvpn/dh1024.pem">
-----BEGIN DH PARAMETERS--...</entry>
<entry name="openvpn/dh2048.pem">
-----BEGIN DH PARAMETERS--...</entry>
./dh1024.pem      DH parameter, 1024 bits
./dh2048.pem      DH parameter, 2048 bits
```

A 3.3 Inputs and outputs

Inputs 1 ... 2

```
<entry name="conf/alerts/in_1/0/enable">0</entry>
<entry name="conf/alerts/in_1/0/action">0</entry>
<entry name="conf/alerts/in_1/0/sms/phonebook">0</entry>
<entry name="conf/alerts/in_1/0/sms/message"></entry>
<entry name="conf/alerts/in_1/0/email/to"></entry>
<entry name="conf/alerts/in_1/0/email/cc"></entry>
<entry name="conf/alerts/in_1/0/email/subject"></entry>
<entry name="conf/alerts/in_1/0/email/message"></entry>
<entry name="conf/alerts/in_1/1/enable">0</entry>
<entry name="conf/alerts/in_1/1/action">0</entry>
<entry name="conf/alerts/in_1/1/sms/phonebook">0</entry>
<entry name="conf/alerts/in_1/1/sms/message"></entry>
<entry name="conf/alerts/in_1/1/email/to"></entry>
<entry name="conf/alerts/in_1/1/email/cc"></entry>
<entry name="conf/alerts/in_1/1/email/subject"></entry>
<entry name="conf/alerts/in_1/1/email/message"></entry>
<entry name="conf/alerts/in_1/alarm_enable">0</entry>
<entry name="conf/alerts/in_1/alarm_time">0</entry>
```

./in_[n]/0*	Refers to input [n], falling edge
./in_[n]/1*	Refers to input [n], rising edge
./enable	Enable action for the input
0	No
1	Yes
./action	Action on the event
0	No action
1	Send SMS message
3	Send e-mail
./sms/phonebook	Bit mask for phonebook selection
./sms/message	SMS text
./email/to	Recipient of the message
./email/cc	Recipient of a copy
./email/subject	Subject
./email/message	Text message
./alarm_enable	Activate alarm
0	No
1	Yes
./alarm_time	Automatic reset time for the alarm in minutes

Output 1

```
<entry name="conf/leds/out_1/function">0</entry>
<entry name="conf/leds/out_1/autoreset">0</entry>
<entry name="conf/leds/out_1/time">10</entry>
```

```
./out_1          Refers to output 1
./function       Function linked to the output
                  0 Manual
                  1 Remote controlled
                  2 Radio Network
                  3 Packet Service
                  4 VPN Service
                  5 Incoming Call
                  6 Connection Lost
                  9 Alarm
./autoreset      Automatically reset alarm
                  0 No
                  1 Yes
./time           Time in minutes to reset the alarm
```

Phonebook

```
<entry name="conf/phonebook/n01"></entry>
<entry name="conf/phonebook/n02"></entry>
<entry name="conf/phonebook/n03"></entry>
<entry name="conf/phonebook/n04"></entry>
<entry name="conf/phonebook/n05"></entry>
<entry name="conf/phonebook/n06"></entry>
<entry name="conf/phonebook/n07"></entry>
<entry name="conf/phonebook/n08"></entry>
<entry name="conf/phonebook/n09"></entry>
<entry name="conf/phonebook/n10"></entry>
<entry name="conf/phonebook/n11"></entry>
<entry name="conf/phonebook/n12"></entry>
<entry name="conf/phonebook/n13"></entry>
<entry name="conf/phonebook/n14"></entry>
<entry name="conf/phonebook/n15"></entry>
<entry name="conf/phonebook/n16"></entry>
<entry name="conf/phonebook/n17"></entry>
<entry name="conf/phonebook/n18"></entry>
<entry name="conf/phonebook/n19"></entry>
<entry name="conf/phonebook/n20"></entry>
```

```
./n[xx]          Telephone number in national or international format
```


Socket server

```
<entry name="conf/alerts/sock_enable">0</entry>
<entry name="conf/alerts/sock_port">1432</entry>
<entry name="conf/alerts/sock_xml_nl">1</entry>
<entry name="conf/alerts/sock_xml_io">0</entry>
```

```
./sock_enable      Socket server
                   0 Off
                   1 On
./sock_port        Server listener port
./sock_xml_nl      Character which creates a line break in the XML file
                   0 None
                   1 Line feed
                   2 Carriage return
                   3 Carriage return + line feed
./sock_xml_io      Representation of Boolean values
                   0 Text
                   1 Numeric
```

A 3.4 System**General system configuration**

```
<entry name="conf/system/httpaccess">2</entry>
<entry name="conf/system/httpport">80</entry>
<entry name="conf/system/httpsport">443</entry>
<entry name="conf/system/logremote">0</entry>
<entry name="conf/system/logserver">192.168.0.200</entry>
<entry name="conf/system/logport">514</entry>
<entry name="conf/system/lognvm">0</entry>
```

```
./httpaccess      HTTP access via:
                   0 HTTP
                   1 HTTPS
                   2 HTTP and HTTPS
./httpport        Port used for the web server for HTTP
./httpsport       Port used for the web server for HTTPS
./logremote       Send log data to a log server
                   0 No
                   1 Yes
./logserver       IP address of the log server
./logport         Log server port
./lognvm          Reserved, must be set to 0
```

User authentication

```
<entry name="conf/auth/admin">admin</entry>
<entry name="conf/auth/user">public</entry>
```

For users "admin" and "user", the passwords are stored in plain text by default. When a new password is assigned, only the hash values are stored here.

E-mail configuration (SMTP)

```
<entry name="conf/smtp/server"></entry>
<entry name="conf/smtp/port">25</entry>
<entry name="conf/smtp/auth">1</entry>
<entry name="conf/smtp/tls">0</entry>
<entry name="conf/smtp/username"></entry>
<entry name="conf/smtp/password"></entry>
<entry name="conf/smtp/from"></entry>
```

./server	Address of the SMTP server
./port	SMTP server port
./auth	Authentication for the server
	0 None
	1 STARTTLS
	2 Encrypted Password
./tls	Reserved, must be set to 0

Default AT commands

```
<entry name="conf/gsm/at1cmd"></entry>
<entry name="conf/gsm/at2cmd"></entry>
<entry name="conf/gprs/at1cmd"></entry>
<entry name="conf/gprs/dialup">*99**1#</entry>
```

./gsm/at1cmd	Commands before PIN entry (without prefixed AT)
./gsm/at2cmd	Commands after PIN entry (without prefixed AT)
./gprs/at1cmd	Commands before PPP dial-in (without prefixed AT)
./gprs/dialup	Dial-in into the packet data network that is used (not used at present)

Date and time

```
<entry name="conf/system/newtime">1388534400</entry>
<entry name="conf/system/ntpenable">0</entry>
<entry name="conf/system/ntpserver">europe.pool.ntp.org</entry>
<entry name="conf/system/ntpiface">0</entry>
<entry name="conf/system/timezone">6+0100</entry>
<entry name="conf/system/daylight">1</entry>
<entry name="conf/system/ntplocal">0</entry>
```

<code>./newtime</code>	Time at device start in seconds, since January 1, 1970 00:00 (UNIX time)
<code>./ntpenable</code>	Synchronize with a time server
	0 No
	1 Yes
<code>./ntpserver</code>	URL or IP address of an Internet time server
<code>./ntpiface</code>	Wireless network or local network as transmitting interface
	0 Wireless
	1 Local
<code>./daylight</code>	Take daylight savings into account
	0 No
	1 Yes
<code>./timezone</code>	Select the time zone
<code>./ntplocal</code>	Make own time available to the local network
	0 No
	1 Yes

Reboot

```
<entry name="conf/system/rebootenable">0</entry>
<entry name="conf/system/reboottime">01:00</entry>
<entry name="conf/system/rebootevent">0</entry>
```

<code>./rebootenable</code>	Bit mask of weekdays on which a reboot should be performed
<code>./reboottime</code>	Time for the reboot
<code>./rebootevent</code>	Selected event for a reboot
	0 None
	1 ... 2 Triggered by the relevant input

A 4 CIDR (Classless Inter-Domain Routing)

IP netmasks and CIDR are methods of notation that combine several IP addresses to create a single address area. An area comprising consecutive addresses is handled like a network.

To specify an area of IP addresses for the router, it may be necessary to specify the address area in CIDR notation. This may be necessary when configuring the firewall, for example. In the table below, the left-hand column shows the IP netmask, while the far right-hand column shows the corresponding CIDR notation.

IP netmask	binary	CIDR
255.255.255.255	11111111 11111111 11111111 11111111	32
255.255.255.254	11111111 11111111 11111111 11111110	31
255.255.255.252	11111111 11111111 11111111 11111100	30
255.255.255.248	11111111 11111111 11111111 11111000	29
255.255.255.240	11111111 11111111 11111111 11110000	28
255.255.255.224	11111111 11111111 11111111 11100000	27
255.255.255.192	11111111 11111111 11111111 11000000	26
255.255.255.128	11111111 11111111 11111111 10000000	25
255.255.255.0	11111111 11111111 11111111 00000000	24
255.255.254.0	11111111 11111111 11111110 00000000	23
255.255.252.0	11111111 11111111 11111100 00000000	22
255.255.248.0	11111111 11111111 11111000 00000000	21
255.255.240.0	11111111 11111111 11110000 00000000	20
255.255.224.0	11111111 11111111 11100000 00000000	19
255.255.192.0	11111111 11111111 11000000 00000000	18
255.255.128.0	11111111 11111111 10000000 00000000	17
255.255.0.0	11111111 11111111 00000000 00000000	16
255.254.0.0	11111111 11111110 00000000 00000000	15
255.252.0.0	11111111 11111100 00000000 00000000	14
255.248.0.0	11111111 11111000 00000000 00000000	13
255.240.0.0	11111111 11110000 00000000 00000000	12
255.224.0.0	11111111 11100000 00000000 00000000	11
255.192.0.0	11111111 11000000 00000000 00000000	10
255.128.0.0	11111111 10000000 00000000 00000000	9
255.0.0.0	11111111 00000000 00000000 00000000	8
254.0.0.0	11111110 00000000 00000000 00000000	7
252.0.0.0	11111100 00000000 00000000 00000000	6
248.0.0.0	11111000 00000000 00000000 00000000	5
240.0.0.0	11110000 00000000 00000000 00000000	4
224.0.0.0	11100000 00000000 00000000 00000000	3
192.0.0.0	11000000 00000000 00000000 00000000	2
128.0.0.0	10000000 00000000 00000000 00000000	1
0.0.0.0	00000000 00000000 00000000 00000000	0

Example: 192.168.1.0/255.255.255.0 corresponds to CIDR: 192.168.1.0/24

B Appendixes

B 1 List of figures

Figure 2-1:	4G router	10
Figure 2-2:	3G router	11
Figure 2-3:	Mounting on the DIN rail	12
Figure 2-4:	Removal	12
Figure 2-5:	Removing the SIM card holder, inserting the SIM card	13
Figure 2-6:	Connecting the antenna (4G router)	14
Figure 2-7:	RJ45 interface	15
Figure 2-8:	Connecting the supply voltage	15
Figure 2-9:	Wiring inputs	16
Figure 3-1:	Login window	19
Figure 3-2:	Device information, Hardware	20
Figure 3-3:	Status, Radio	21
Figure 3-4:	Status, Network connections	23
Figure 3-5:	Status, I/O status	24
Figure 3-6:	Status, Routing table	24
Figure 3-7:	Status, DHCP leases	25
Figure 3-8:	Status, System info	25
Figure 3-9:	Local network, IP configuration	26
Figure 3-10:	Local network, DHCP server	27
Figure 3-11:	Local network, Static routes	28
Figure 3-12:	Wireless network, Radio setup	29
Figure 3-13:	Wireless network, SIM (Europe)	30
Figure 3-14:	Wireless network, SIM (US)	32
Figure 3-15:	Wireless network, SMS configuration	35
Figure 3-16:	Wireless network, Packet data setup	36
Figure 3-17:	Wireless network, Wireless static routes	37
Figure 3-18:	Wireless network, DynDNS	38
Figure 3-19:	Wireless network, Connection check	39
Figure 3-20:	Wireless network, Monitoring	41
Figure 3-21:	Network security, General setup	43
Figure 3-22:	Network security, Firewall	45
Figure 3-23:	Network security, SNMP Firewall	47
Figure 3-24:	Network security, IP and port forwarding	48

Figure 3-25:	Network security, Exposed host	50
Figure 3-26:	Network security, Masquerading	51
Figure 3-27:	VPN, IPsec, Connections	53
Figure 3-28:	VPN, IPsec, Connections, Settings, Edit	54
Figure 3-29:	VPN, IPsec, Connections, IKE, Edit	58
Figure 3-30:	VPN, IPsec, Certificates	61
Figure 3-31:	VPN, IPsec, Status	62
Figure 3-32:	VPN, OpenVPN, Connections	63
Figure 3-33:	VPN, OpenVPN, Connections, Tunnel, Edit	64
Figure 3-34:	VPN, OpenVPN, Connections, Advanced, Edit	67
Figure 3-35:	VPN, OpenVPN, Certificates	68
Figure 3-36:	VPN, OpenVPN, Static keys	69
Figure 3-37:	VPN, OpenVPN, Status	70
Figure 3-38:	I/O, Inputs	71
Figure 3-39:	I/O, Outputs	73
Figure 3-40:	I/O, Phonebook	74
Figure 3-41:	I/O, Socket server	75
Figure 3-42:	System, System configuration	82
Figure 3-43:	System, User	85
Figure 3-44:	System, Log file	86
Figure 3-45:	Local network, SNMP configuration	87
Figure 3-46:	System, E-mail configuration	88
Figure 3-47:	System, Configuration up-/download	90
Figure 3-48:	System, Date/time	91
Figure 3-49:	System, Reboot	93
Figure 3-50:	System, Firmware update	94
Figure 4-1:	Creating a new database	95
Figure 4-2:	Assigning a password	96
Figure 4-3:	Creating a new CA certificate	96
Figure 4-4:	Entering information about the owner	97
Figure 4-5:	Creating a key	97
Figure 4-6:	Setting the validity and type for the CA certificate	98
Figure 4-7:	CA certificate created	98
Figure 4-8:	Creating a new template	99
Figure 4-9:	Creating a template, entering information about the owner	99
Figure 4-10:	Creating a template, entering the validity and type of certificate	100
Figure 4-11:	Creating a certificate	101

Figure 4-12:	Creating a certificate, "Subject" tab	102
Figure 4-13:	Creating a key for a certificate	102
Figure 4-14:	Selecting a certificate for export	103
Figure 4-15:	Exporting a certificate	103
Figure 4-16:	Entering the password	104
Figure 4-17:	Exporting the partner certificate	104
Figure 5-1:	Dimensions	110

B 2 Index

A

Accessories	105
Alarms	
E-mail	71, 88
SMS	71
APN	
Europe.....	31
US	33

C

CA certificate.....	96
Certificate.....	60
Creating.....	101
Exporting	103
Template	99
Change password	85
CON LED	11
Configuration up-/download	90
Configuration via web-based management.....	19
Connection	
Antenna.....	14
Ethernet network	15
Supply voltage.....	15
Switching input	16
Switching output.....	16
Connection check	39
Connection monitoring	
See Connection check	
customer APN.....	33

D

Date settings	
See Date/time	
Date/time	91
Device information	20
DHCP server	27
Dimensions	110
DIN rail	12
See DIN rail	
Download	
See Configuration up-/download	
DPD (Dead Peer Detection)	59
DynDNS (dynamic DNS).....	38

E

Electrical connection	14
E-mail configuration	88
Energy-saving mode	84
Exposed host	50

F

Firewall	45
Firmware update	94

I

I/O status.....	24
IKE (Internet Key Exchange)	58
Input	
See Switching input	
Inputs	71
Inserting the SIM card	13
Installation.....	14
Intended use	6
IP configuration	26
IP masquerading	
See Masquerading	
IPsec certificates.....	60
IPsec connections.....	53
IPsec status	62

K

Key	
See Static keys	

L

LED.....	11
Local network.....	26
Local static route	
See Static routes	
Log file	86
Structure.....	42

M

managed application APN	33
managed Internet APN.....	33
Masquerading.....	51

Mobile network settings
 See Wireless network
 Monitoring 41
 Mounting 12

N

NAT (Network Address Translation) 48
 Network connections 23
 Network security 43

O

OpenVPN certificates 68
 OpenVPN connections 63
 OpenVPN status 70
 OpenVPN tunnel
 See VPN tunnel
 Operating and indication elements
 3G router 11
 4G router 10
 Ordering data 105
 Output
 See Switching output
 Overview product versions 9
 overwrite APN 33

P

Password (default) 19
 Phonebook 74
 Port forwarding 48
 Power supply
 See Supply voltage
 Pre-shared secret key
 See Static keys
 Product versions 9

R

Radio setup 29
 Radio status 21
 Reboot 93
 Redirection of data packets 28
 Removal 12
 Reset 17
 Resetting to the default settings
 See Reset

Restart
 See Reboot
 RJ45 interface 15
 Root certificate
 See CA certificate
 Routing table 24

S

Security settings
 See Network security
 SIM
 Europa 30
 US 32
 SMS settings 34
 SNMP configuration 87
 SNMP Firewall 47
 Socket server 75
 Stateful packet inspection firewall
 See Firewall
 Static key authentication
 See Static keys
 Static keys 69
 Static routes 28
 See Static routes
 Status and diagnostics indicators 11
 Subcommand 34
 Supply voltage 15
 Switching input
 Configuration 71
 Connection 16
 Switching output
 Configuration 73
 Connection 16
 Synchronization 91
 System configuration 82

T

Technical data 106
 Time settings
 See Date/time
 Tunnel
 See VPN tunnel

U

Update

See Firmware update

Upload

See Configuration up-/download

User	85
User level	19
User name	19

V

Viewing the device status.....	20
VPN (Virtual Private Network)	52
VPN tunnel.....	64

W

Web-based management

Login	19
Starting.....	19
Wireless network.....	29
Wireless static routes	37

X

X.509 certificate	60, 95
XCA	95
XML configuration file.....	114
XML element.....	111
XML file format.....	114

Please observe the following notes

General terms and conditions of use for technical documentation

Phoenix Contact reserves the right to alter, correct, and/or improve the technical documentation and the products described in the technical documentation at its own discretion and without giving prior notice, insofar as this is reasonable for the user. The same applies to any technical changes that serve the purpose of technical progress.

The receipt of technical documentation (in particular user documentation) does not constitute any further duty on the part of Phoenix Contact to furnish information on modifications to products and/or technical documentation. You are responsible to verify the suitability and intended use of the products in your specific application, in particular with regard to observing the applicable standards and regulations. All information made available in the technical data is supplied without any accompanying guarantee, whether expressly mentioned, implied or tacitly assumed.

In general, the provisions of the current standard Terms and Conditions of Phoenix Contact apply exclusively, in particular as concerns any warranty liability.

This manual, including all illustrations contained herein, is copyright protected. Any changes to the contents or the publication of extracts of this document is prohibited.

Phoenix Contact reserves the right to register its own intellectual property rights for the product identifications of Phoenix Contact products that are used here. Registration of such intellectual property rights by third parties is prohibited.

Other product identifications may be afforded legal protection, even where they may not be indicated as such.

How to contact us

Internet

Up-to-date information on Phoenix Contact products and our Terms and Conditions can be found on the Internet at:

phoenixcontact.com

Make sure you always use the latest documentation.

It can be downloaded at:

phoenixcontact.net/products

Subsidiaries

If there are any problems that cannot be solved using the documentation, please contact your Phoenix Contact subsidiary.

Subsidiary contact information is available at phoenixcontact.com.

Published by

PHOENIX CONTACT GmbH & Co. KG

Flachsmarktstraße 8

32825 Blomberg

GERMANY

PHOENIX CONTACT Development and Manufacturing, Inc.

586 Fulling Mill Road

Middletown, PA 17057

USA

Should you have any suggestions or recommendations for improvement of the contents and layout of our manuals, please send your comments to:

tecdoc@phoenixcontact.com